

COMPATIBILITE

CR Max

Gamme iCarsoft V3.0

POUR DS

iCarsoft France

iCarsoft France - Compatibilité DS - Diagnostic

● : Compatible

※ : Peut être compatible en fonction de l'état du véhicule

○ : N'est pas compatible

▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData	Act
DS 3	DS 3	ABS (Anti-lock brake System)	●	●	●	●	●
DS 3	DS 3	AC (Air Conditioning)	●	●	●	●	●
DS 3	DS 3	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 3	DS 3	BATT (Battery Change Status Unit)	●	●	●	●	●
DS 3	DS 3	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 3	DS 3	Display/Telematics	●	●	●	●	●
DS 3	DS 3	ECM (Engine Control Module)	●	●	●	●	●
DS 3	DS 3	EPS (Electric Power Steering)	●	●	●	●	●
DS 3	DS 3	ERU (Engine Relay Unit)	●	●	●	●	●
DS 3	DS 3	HFC (Hands Free Control Kit)	●	●	●	●	●
DS 3	DS 3	HFR (High Frequency Receiver)	●	●	●	●	●
DS 3	DS 3	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 3	DS 3	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
DS 3	DS 3	MULD (Multifunction Display)	●	●	●	●	●
DS 3	DS 3	PAM (Parking Assistance)	●	●	●	●	●
DS 3	DS 3	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 3	DS 3	Radio	●	●	●	●	●
DS 3	DS 3	SB (Seat Belts Reminder LED)	●	●	●	●	●
DS 3	DS 3	SM (Services Module)	●	●	●	●	●
DS 3	DS 3	SRS (Airbag)	●	●	●	●	●
DS 3	DS 3	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 3	DS 3	TCM (Automatic Gearbox)	●	●	●	●	●
DS 3	DS 3	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 3	DS 3	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 4	DS 4	ABS (Anti-lock brake System)	●	●	●	●	●
DS 4	DS 4	AC (Air Conditioning)	●	●	●	●	●
DS 4	DS 4	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 4	DS 4	AMP (Audio Amplifier)	●	●	●	●	●
DS 4	DS 4	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 4	DS 4	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 4	DS 4	BSM (Monitoring Of The Blind Spot)	●	●	●	●	●
DS 4	DS 4	DDC (Driver's Door Control Panel)	●	●	●	●	●
DS 4	DS 4	DHL (Directional Headlamps)	●	●	●	●	●
DS 4	DS 4	DSM (Driver's School Module)	●	●	●	●	●
DS 4	DS 4	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 4	DS 4	Display	●	●	●	●	●
DS 4	DS 4	Display/Telematics	●	●	●	●	●
DS 4	DS 4	ECM (Engine Control Module)	●	●	●	●	●
DS 4	DS 4	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 4	DS 4	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
DS 4	DS 4	EPS (Electric Power Steering)	●	●	●	●	●
DS 4	DS 4	ERU (Engine Relay Unit)	●	●	●	●	●
DS 4	DS 4	ESL (Electric Steering Lock)	●	●	●	●	●
DS 4	DS 4	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 4	DS 4	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 4	DS 4	KEY (Electronic Key Reader)	●	●	●	●	●
DS 4	DS 4	LDWS (Lane Departure Warning System)	●	●	●	●	●
DS 4	DS 4	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 4	DS 4	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 4	DS 4	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 4	DS 4	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 4	DS 4	MULD (Multifunction Display)	●	●	●	●	●
DS 4	DS 4	PAM (Parking Assistance)	●	●	●	●	●

DS 4	DS 4	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 4	DS 4	Radio	●	●	●	●	●
DS 4	DS 4	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
DS 4	DS 4	SM (Services Module)	●	●	●	●	●
DS 4	DS 4	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 4	DS 4	SRS (Airbag)	●	●	●	●	●
DS 4	DS 4	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 4	DS 4	SWSM (Switch Module Under Steering Wheel)	●	●	●	●	●
DS 4	DS 4	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 4	DS 4	TCM (Automatic Gearbox)	●	●	●	●	●
DS 4	DS 4	TEU (Telematics Unit)	●	●	●	●	●
DS 4	DS 4	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 4	DS 4	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
DS 4	DS 4	UID (Under Inflation Detection)	●	●	●	●	●
DS 4	DS 4	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 4	DS 4 (S)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 4	DS 4 (S)	AC (Air Conditioning)	●	●	●	●	●
DS 4	DS 4 (S)	AMP (Audio Amplifier)	●	●	●	●	●
DS 4	DS 4 (S)	Alarm	●	●	●	●	●
DS 4	DS 4 (S)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 4	DS 4 (S)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 4	DS 4 (S)	DHL (Directional Headlamps)	●	●	●	●	●
DS 4	DS 4 (S)	Display	●	●	●	●	●
DS 4	DS 4 (S)	ECM (Engine Control Module)	●	●	●	●	●
DS 4	DS 4 (S)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 4	DS 4 (S)	EPS (Electric Power Steering)	●	●	●	●	●
DS 4	DS 4 (S)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 4	DS 4 (S)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 4	DS 4 (S)	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 4	DS 4 (S)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 4	DS 4 (S)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 4	DS 4 (S)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 4	DS 4 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 4	DS 4 (S)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 4	DS 4 (S)	PAM (Parking Assistance)	●	●	●	●	●
DS 4	DS 4 (S)	RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 4	DS 4 (S)	Radio	●	●	●	●	●
DS 4	DS 4 (S)	SM (Services Module)	●	●	●	●	●
DS 4	DS 4 (S)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 4	DS 4 (S)	SRS (Airbag)	●	●	●	●	●
DS 4	DS 4 (S)	SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 4	DS 4 (S)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 4	DS 4 (S)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 4	DS 4 (S)	TEU (Telematics Unit)	●	●	●	●	●
DS 4	DS 4 (S)	UID (Under Inflation Detection)	●	●	●	●	●
DS 4	DS 4 (S)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 5	DS 5	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5	BATT (Traction Battery ECU)	●	●	●	●	●
DS 5	DS 5	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5	Clock	●	●	●	●	●
DS 5	DS 5	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 5	DS 5	Display	●	●	●	●	●
DS 5	DS 5	Display/Telematics	●	●	●	●	●
DS 5	DS 5	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5	EPS (Electric Power Steering)	●	●	●	●	●

DS 5	DS 5	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5	HFC (Hands free Control Unit)	●	●	●	●	●
DS 5	DS 5	HHV (High Head Vision)	●	●	●	●	●
DS 5	DS 5	HMS (Hybrid Mode Selector)	●	●	●	●	●
DS 5	DS 5	HYC-1 (Hybrid Control ECU 1)	●	●	●	●	●
DS 5	DS 5	HYC-2 (Hybrid Control ECU 2)	●	●	●	●	●
DS 5	DS 5	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 5	DS 5	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
DS 5	DS 5	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 5	DS 5	MULD (Multifunction Display)	●	●	●	●	●
DS 5	DS 5	NAVI (Telematic Navigator)	●	●	●	●	●
DS 5	DS 5	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 5	DS 5	Radio	●	●	●	●	●
DS 5	DS 5	SB (Seat Belts Not Fastened LED Unit(TNB))	●	●	●	●	●
DS 5	DS 5	SM (Services Module)	●	●	●	●	●
DS 5	DS 5	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 5	DS 5	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 5	DS 5	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5	TEU (Telematics Unit)	●	●	●	●	●
DS 5	DS 5	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 5	DS 5	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5	VCU (Vibrators Control Unit)	●	●	●	●	●
DS 5	DS 5	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5	Wiper (Windscreen Wiper)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BATT (Traction Battery ECU)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Clock	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Display/Telematics	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	EPS (Electric Power Steering)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HFC (Hands free Control Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HHV (High Head Vision)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HMS (Hybrid Mode Selector)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HYC-1 (Hybrid Control ECU 1)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HYC-2 (Hybrid Control ECU 2)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MULD (Multifunction Display)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	NAVI (Telematic Navigator)	●	●	●	●	●

DS 5	DS 5 (Hybird 4)	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Radio	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SB (Seat Belts Not Fastened LED Unit(TNB))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SM (Services Module)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	VCU (Vibrators Control Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Wiper (Windscreen Wiper)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5 (L) (S)	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5 (L) (S)	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Alarm	●	●	●	●	●
DS 5	DS 5 (L) (S)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5 (L) (S)	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Display	●	●	●	●	●
DS 5	DS 5 (L) (S)	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5 (L) (S)	EPS (Electric Power Steering)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5 (L) (S)	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 5	DS 5 (L) (S)	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5 (L) (S)	RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Radio	●	●	●	●	●
DS 5	DS 5 (L) (S)	SM (Services Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5 (L) (S)	TEU (Telematics Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5 (L) (S)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 6		ABS (Anti-lock brake System)	●	●	●	●	●
DS 6		AC (Air Conditioning)	●	●	●	●	●
DS 6		AMP (Audio Amplifier)	●	●	●	●	●
DS 6		ASM (Anti-slip Mode Selector)	●	●	●	●	●
DS 6		Alarm	●	●	●	●	●
DS 6		BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 6		BCM (Body Control Module)	●	●	●	●	●
DS 6		BSI (Built-in Systems Interface)	●	●	●	●	●
DS 6		DHL (Directional Headlamps)	●	●	●	●	●
DS 6		Display	●	●	●	●	●
DS 6		ECM (Engine Control Module)	●	●	●	●	●
DS 6		EPB (Electric Secondary Brake)	●	●	●	●	●
DS 6		EPS (Electric Power Steering)	●	●	●	●	●
DS 6		ERU (Engine Relay Unit)	●	●	●	●	●
DS 6		ESL (Electric Steering Lock)	●	●	●	●	●

DS 6		HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 6		IP (Instrument Cluster Panel)	●	●	●	●	●
DS 6		KEY (Electronic Key Reader)	●	●	●	●	●
DS 6		MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 6		MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 6		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 6		PAM (Parking Assistance)	●	●	●	●	●
DS 6		RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 6		SFB (Signalling Fuse Box)	●	●	●	●	●
DS 6		SM (Services Module)	●	●	●	●	●
DS 6		SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 6		SRS (Airbag)	●	●	●	●	●
DS 6		SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 6		SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 6		TCM (Automatic Gearbox)	●	●	●	●	●
DS 6		TEU (Telematics Unit)	●	●	●	●	●
DS 6		UID (Under Inflation Detection)	●	●	●	●	●
DS 6		VRD (Voltage Retaining Device)	●	●	●	●	●
DS 7		ABS (Anti-lock brake System)	●	●	●	●	●
DS 7		AC (Air Conditioning)	●	●	●	●	●
DS 7		AMP (Audio Amplifier)	●	●	●	●	●
DS 7		BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 7		BCM (Body Control Module)	●	●	●	●	●
DS 7		BSI (Built-in Systems Interface)	●	●	●	●	●
DS 7		CD (External CD Player)	●	●	●	●	●
DS 7		Clock	●	●	●	●	●
DS 7		DMC (Driver Monitoring Camera)	●	●	●	●	●
DS 7		ECM (Engine Control Module)	●	●	●	●	●
DS 7		EPS (Electric Power Steering)	●	●	●	●	●
DS 7		ESL (Electric Steering Lock)	●	●	●	●	●
DS 7		IP (Instrument Cluster Panel)	●	●	●	●	●
DS 7		MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 7		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 7		NVE (Night Vision ECU)	●	●	●	●	●
DS 7		PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
DS 7		RLS (Rain And Light Sensor)	●	●	●	●	●
DS 7		SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
DS 7		SFB (Signalling Fuse Box)	●	●	●	●	●
DS 7		SM (Services Module)	●	●	●	●	●
DS 7		SRS (Airbag)	●	●	●	●	●
DS 7		SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 7		SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 7		Siren	●	●	●	●	●
DS 7		TCM (Automatic Gearbox)	●	●	●	●	●
DS 7		TRU (Trailer Relay Unit)	●	●	●	●	●
DS 7		VDA (Vehicle Distance Assistance)	●	●	●	●	●
DS 7		VRD (Voltage Retaining Device)	●	●	●	●	●

iCarsoft France - Compatibilité DS - ABS

- : Compatible
- ※ : Peut être compatible en fonction de l'état du véhicule
- : N'est pas compatible
- ▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	BLD
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●
DS BLD Function List (Note:For reference only)		
Bleeding		
Bleeding Of The Hydraulic Block		
Bleeding Of The Hydraulic Block ABS MK100		
Bleeding Of The Hydraulic Block ASR8.0		
Bleeding Of The Hydraulic Block ESP MK100		
Bleeding Of The Hydraulic Circuit		

iCarsoft France - Compatibilité DS - Batterie

● : Compatible

※ : Peut être compatible en fonction de l'état du véhicule

○ : N'est pas compatible

▲ : Nouvelle compatibilité sur ce modèle

Mode	Model Type	BMS
DS 3	DS 3	●
DS 4	DS 4	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 7		●
DS BMS Function List (Note:For reference only)		
Manual Configuration		

iCarsoft France - Compatibilité DS - FAP

- : Compatible
- ※ : Peut être compatible en fonction de l'état du véhicule
- : N'est pas compatible
- ▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	DPF
DS 3	DS 3	●
DS 4	DS 4	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS DPF Function List (Note:For reference only)		
Filling Of The Diesel Additive Adding Reservoir		
Forced Regeneration Of The Particle Emission Filter		
Forced Regeneration Of The Particle Filter, Vehicle Stationary		
Forced Regeneration Of The Particulate Filter While Driving		
Forced Regeneration Vehicle Moving		
Forced Regeneration Vehicle Stationary		
Pariticle Filter Regeneration		
Particulate Filter Replacement		
Replacement Of The Diesel Additive Reservoir,Of The Pump Or Of The Pipes		
Replacement Of The Differential Pressure Sensor		
Replacement Of The Particle Emission Filter		
Replacement Of The Particle Emission Filter Differential Pressury Sensor		

iCarsoft France - Compatibilité DS - EPB

- : Compatible
- ※ : Peut être compatible en fonction de l'état du véhicule
- : N'est pas compatible
- ▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	EPB
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●
DS EPB Function List (Note:For reference only)		
Cable Tensioning		
Deactivation Of The Automatic Application Of The Electric Parking Brake Function		
Electric Parking Brake Calibration		
First Activation Of The Electric Parking Brake		
Put In Fitting/Removal Position		
Reactivation Of Automatic Application Of The Electric Parking Brake		
Release Of The Motorised Brake Calipers		
Replacement Of The Brake Pads		
Replacement Of The Electric Parking Brake (FSE) Left-hand Actuator		
Replacement Of The Electric Parking Brake (FSE) Right-hand Actuator		
Replacement Of The Proportional Brake Switch		
Replacement Of The Rear Left Motorised Brake Caliper		
Replacement Of The Rear Right Motorised Brake Caliper		

iCarsoft France - Compatibilité DS - ETC

- : Compatible
- ※ : Peut être compatible en fonction de l'état du véhicule
- : N'est pas compatible
- ▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	ETC
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS ETC Function List (Note:For reference only)		
Initialisation Of The EGR Throttle		
Initialising The Autoadaptives		
Motorised Throttle Unit		
Replacement Of Exhaust Gas Recycling Electric Throttle		
Throttle Learning		

iCarsoft France - Compatibilité DS - Injecteurs

- : Compatible
- ※ : Peut être compatible en fonction de l'état du véhicule
- : N'est pas compatible
- ▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	INJ
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●
DS INJ Function List (Note:For reference only)		
Classification Of Injector		
Configuration Of The Characterisation Of Diesel Injector		
Diesel Injectors Programming Procedure		
Initialisation Of Diesel Injector		
Injector Replacement		
Injectors		
Reinitialisation Following Replacement Of The Urea Injector		
Replacement Of Injector		
Replacement Of One Or More Petrol Injectors		
Replacement Of One Or Several Injectors		
Replacement Of The Cyliner Head Or Programming Of The Injectors		

iCarsoft France - Compatibilité DS - Entretien / Vidanges

● : Compatible

※ : Peut être compatible en fonction de l'état du véhicule

○ : N'est pas compatible

▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	OIL
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●
DS OIL Function List (Note:For reference only)		
Choice Of Maintenance Schedule		
Configuration Of A New Maintenance Plan		
Maintenance Indicator		
Maintenance Indicator Reset		
Maintenance Limit		
Maintenance Mileage Zero Reset + Maintenance Number		
Maintenance Number Zero Reset		
Maintenance Number Zero Reset Carried Out		
Oil Parameter Reinitialisation		
Replacement Of The Engine Oil		
Reset Service		
Zeroing Of The Service Indicator		

iCarsoft France - Compatibilité DS - SAS

- : Compatible
- ※ : Peut être compatible en fonction de l'état du véhicule
- : N'est pas compatible
- ▲ : Nouvelle compatibilité sur ce modèle

Model	Model Type	SAS
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●
DS SAS Function List (Note:For reference only)		
Calibration Of The Steering Wheel Angle Sensor		
Calibration Of The Yaw Speed Sensor		
Calibration/Decalibration Of The Steering Wheel Angle Sensor		
Longitudinal Acceleration Sensor Calibration		
Steering Wheel Angle Sensor Programming		