COMPATIBILITE

CR Max Gamme iCarsoft V3.0

POUR RENAULT

iCarsoft France

www.icarsoft-france.fr

● : Compatible * : Peut être compatible en fonction de l'état du véhicule ○ : N'est pas compatible ▲ : Nouvelle compatibilité sur ce modèle

Model	Systemlist	EcuInfo.	ReadCodes	EraseCodes	LiveData	ActTest
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)			•	•	
	ABS (Anti-lock Braking System)			•	•	•
	Airbag					
	IC (Instrument Cluster)					
ALASKAN	AC (Air Conditioning)		•			
	4 Wheels Drive	•	•			•
	Front Radar	•	•	•	•	•
	Parking Prox Can	•	•	•	•	0
	UCH	•	•	•	•	•
ALD THD	UPC	•	•	•	•	
ALPINE	Petrol Injection	•		•	•	•
	ECM (Engine Control Module)			•		
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System) Airbag					
	IC (Instrument Cluster)					
	AC (Air Conditioning)					
	Adaptation Unit					0
ALPINE A110	Communications Unit				ě	0
	Hands-Free Module	•	ě	ě	ě	0
	Parking Prox Can		Ŏ	•	•	ĕ
	Telematic Ctrl Unit	ě	Ĭ	ě	ě	ě
	UCH	Ĭ	•	ě	Ĭ	Ĭ
	UPC	Ĭ	Ŏ	•	Ō	ě
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•		•	•	•
	TCM (Transmission Control Module)			•	•	•
	4 Wheels Drive	•	•	•	•	*
	ABS (Anti-Lock Braking System)	•	•	•	•	٠
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	٠
	IC (Instrument Cluster)			•	•	•
	AC (Air Conditioning)			•	•	•
	UCH			•	•	•
	UPC	•		•	•	*
ARKANA	Central Gateway	•		•	•	*
	Amplifier	•		•	•	*
	Around View Monitoring					*
	Blind Spot Detection					*
	Communications Unit			•		*
	Hands-Free Module	•	•			*
	Radio	•	•	•	•	*
	Scene Recorder	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	*
	Variable P.A.S	•		•	•	0
	Diesel Injection			•		•
	Petrol Injection					•
	ECM (Engine Control Module)					
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	Airbag			ě		
AVANTIME	IC (Instrument Cluster)		•	•		•
	AC (Air Conditioning)	•	•	ě	ě	•
	Engine Immobiliser	ě	ě	ě	ě	ě
	Lighting	•	ě	ě	ě	0
	Heater	•	•	•	•	ě
	Interconnection Unit	•	•	•	ě	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)					•
	AC (Air Conditioning)			•		•
	Lighting			•		•
	4 Wheels Drive			•		•
KAPTUR	Amplifier			•		0
NAF I UK	Communications Unit			•		0
	Hands Free Kit					
		1	-	-		
	Multimedia Interface		•	•	•	•

	Telematic Ctrl Unit	•	•		•	
	UCH	•	•	•	•	•
	UPC	•	•	•	•	
	Variable P.A.S	•	•	•	•	
	ECM (Engine Control Module)	•	•	•	•	
	TCM (Transmission Control Module)	•	•	•	•	
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	
	AC (Air Conditioning)	•	•	•	•	
	BMS 12V	•	•	•	•	
	BMS Safety	•	•	•	•	
	BMS	•	•	•	•	
	Parking Brake	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	EVC	•	•	•	•	•
	BCB	•	•	•	•	•
	BSG	•	•	•	•	•
	Central Gateway	•	۲	•	۲	•
	Amplifier	•	•	•	•	0
	Around View Monitoring	•	•	•	•	
CAPTUR II	Brake Booster	•	•	•	•	•
CALLOR 11	Check Chassis	•	•	•	•	•
	Communications Unit	•	•	•		*
	Driving Assistance Supervisor	•	•	•	•	
	Electric Traction Motor	•	•	•	•	
	Front Camera	•	•	•	•	
	Front Radar	•	•	•	•	
	Gearbox Elec Control	•	•	•	•	
	Hands-Free Module	•	•	•	•	
	Left Rear Side Radar	•	•	•	•	
	Right Rear Side Radar	•	•	•	•	
	Multimedia Interface	•	•	•	•	*
	Radio	•	•	•	•	
	Sealed Fuel Tank	•	•	•	•	*
	Supervisor	•	•	•	•	*
	Telematic Control Unit	•		•	•	*
	Telephone Induction Charger	•	•	•	•	
	Traction Control Unit	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	0
	Vehicle Sound For Pedestrian	•	•	•	•	•

		-	-	-	-	-
	ECM (Engine Control Module)		•			
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)		•			
	Airbag					
	IC (Instrument Cluster)		•	•	ě	•
	AC (Air Conditioning)		•	•	ě	•
	Lighting		ě	ė	ě	ě
CAPTUR/	Amplifier	ě	ě	ě	ě	Ŏ
QM3/	Communications Unit	•	•	•	•	•
KABIN	Hands Free Kit	•	•		•	•
	Multimedia Interface	•	•		•	•
	Parking Prox Can	•	•	•	٠	0
	Radio	•	۲	•	•	•
	Telematic Ctrl Unit	•	•		•	0
	UCH	•	•		•	•
	UPC	۲				•
	Variable P.A.S	•			•	•
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	BMS	<u> </u>	•	•	•	•
	Central Gateway	<u> </u>	•	•	•	0
	UCH	-	•		•	•
CITY K-ZE	UPC		•	•		
	EVC PEB		•			
	PEB Radio					
	Kadio Supervisor					*
	Telematic Control Unit		•	•	ě	*
	Variable P. A. S		ě	ě	ě	•
	Vehicle Sound For Pedestrian	ě	ě	ě	ě	Ŏ
	Petrol Injection	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	٠	•
CLIO	ABS (Anti-lock Braking System)	•	•	•	•	
	Airbag	•	•		•	•
	Engine Immobiliser	•	•		•	•
	ECM (Engine Control Module)	۲				•
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)	•	•	•	•	•
CLIO 2	Airbag	•	•	•	•	•
	AC (Air Conditioning)		•	•	•	•
	Engine Immobiliser		•	•	•	•
	Gas Inj					•
	Interconnection Unit					0
	ECM (Engine Control Module) TCM (Transmission Control Module)		•			ě
	ABS (Anti-lock Braking System)					
	Airbag				ě	
	AC (Air Conditioning)		ě	ė	ě	ě
CLIO II P2/3/4	Engine Immobiliser	ě	ě	ě	ě	Ŏ
	Discharge Lamp	•	•	•	•	0
	Gas Inj	•	•	•	٠	•
	Interconnection Unit	•	•	•	•	•
	Variable P.A.S	•		•	•	
	ECM (Engine Control Module)	•		•	•	
	ABS (Anti-lock Braking System)		•	•	•	•
CLIO II PH6	Airbag	•	•	•	٠	٠
	Tracker					0
	UCH	•	•	•		•
	ECM (Engine Control Module)	•		•	•	•
	TCM (Transmission Control Module)		•	•		•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag		•	•		•
	IC (Instrument Cluster)		•			
	AC (Air Conditioning) TPM (Tire Pressure Monitoring)		•			
	Lighting		•			
CLIO III	Communications Unit					0
	Multimed. Connection					
	Multimedia Interface		•	•	ě	•
	Parking Assistance	Ť	•	•	Ŏ	ě
	Radio	ě	•	•	Ĭ	ě
	UCH	Ť	•	•	Ŏ	ě
				ě	ě	Ŏ
	UPC	•	•	•	-	•

		-		-	-	-
	ECM (Engine Control Module)	•	•	•	•	
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	ABS (Anti-lock Braking System) Airbag					
	IC (Instrument Cluster)		•	•		
	AC (Air Conditioning)	•	•	•	ě	•
	Lighting	ě		ě	•	ě
	Amplifier	ě		ě	•	ě
CLIO IV	Communications Unit	ė	ě	ě	ě	0
	Hands Free Kit	ė	ě	ě	ě	ĕ
	Parking Prox Can	ė	ě	•	ě	0
	Radio	ě	ě	•	ě	ĕ
	Telematic Ctrl Unit	ě	ě	ě	ě	ě
	UCH	•	•	•	•	•
	UPC	ě	ě	ě	ě	ě
	Variable P.A.S	ě	ě	ě	ě	ě
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)			•		•
	ABS (Anti-lock Braking System)	٠	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)			•		•
	IC (Instrument Cluster)			•		•
	AC (Air Conditioning)	•	•	•	•	
	Parking Brake	•	•	•	•	
	BMS			•		•
	BMS 12V	٠	•	•	•	
	BMS Safety	٠	•	•	•	•
	Central Gateway	•	•	•	•	•
	Electric Traction Motor	•	•	•	•	•
	Traction Control Unit	•	•			
	Amplifier	•	•	•		*
	Around View Monitoring	•	•	•	•	*
	Check Chassis	•	•	•	•	*
	Brake Booster	•	•	•	•	*
	Communications Unit	•	•	•	•	0
CLIO V	Driving Assistance Supervisor	•	•	•		•
	Front Camera	•		•		*
	Front Radar	•		•		*
	Hands-Free Module	•	•	•	•	•
	Left Rear Side Radar	•	•	•		
	Multimedia Interface	•	•			*
	Parking Prox Can	•	•	•		
	Radio	•	•	•		
	Right Rear Side Radar	•	•	•		•
	Supervisor	•	•	•		
	Telematic Ctrl Unit	•	•	•		*
	Telephone Induction Charger					*
	UCH	•		•		•
	UPC	•		•		•
	BSG					
	EVC			•		
	Urea Dosing Control Module			•		
	Variable P.A.S			•		•
	Vehicle Sound For Pedestrian		•	٠		•
	ECM (Engine Control Module)		•	٠		•
01.70	Airbag	•	•	•	•	•
CLIO V6	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Interconnection Unit	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
CLIO V6 PH 2	AC (Air Conditioning)		•	•		
	Engine Immobiliser					
	Interconnection Unit	•	•	•		0
	ECM (Engine Control Module)		•	•		•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)			•		
DOURDS	Hands Free Kit		•	•	•	0
DOKKER	Multimedia Interface			•		•
	Radio		•	•		•
	Telematic Ctrl Unit		•	•		•
	UCH	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	0
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	٠	•
	TCM (Transmission Control Module)	•	•	•		•
	ABS (Anti-lock Braking System)	•	•	•		
	Airbag	•				

	Radio		۲		•	
	Tracker		•	•	•	•
	UCH		•	•	•	•
	Variable P.A.S		•	•	•	0
	ECM (Engine Control Module)		•	•	•	
	TCM (Transmission Control Module)		•	•	•	
	ABS (Anti-lock Braking System)		•	•	•	
	Airbag		•	•	•	
	IC (Instrument Cluster)		•	•	•	
	AC (Air Conditioning)		•	•	•	•
DUSTER PH2	4 Wheels Drive		•	•	•	•
	Hands Free Kit		•	•	•	•
	Multimedia Interface		•	•	•	0
	Radio	•	•		•	
	Telematic Ctrl Unit	•	•		•	
	UCH	•	•		•	
	Variable P.A.S	•	•	•	•	•

1130 (Transmission Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1110 (Transmission Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 1111 (Control Control Module) Image: Control Module) Image: Control Module) Image: Control Module) 11111 (Cont Control Module) Image: Control Module) <th>-</th> <th></th> <th></th> <th>-</th> <th>-</th> <th>-</th> <th>-</th>	-			-	-	-	-
ABS (balti-lock Braking System) Image: System) Image: System) Infining Image: System) Image: System) IC (Instrument Cluster) Image: System) Image: System) If Weels Drive Image: System) Image: System) Infining Image: System) Image: System) DISTER PB3 Image: System) Image: System) Infining Image: System) Image: System) Infining <td></td> <td></td> <td>-</td> <td></td> <td>-</td> <td>•</td> <td>•</td>			-		-	•	•
Birlag Image: Clustory Image: Cl		TCM (Transmission Control Module)	•	•	•		•
Internat Cluster) Image		ABS (Anti-lock Braking System)	•	•	•		•
BUSTER PH3 Image: state st		Airbag	•	•	•		•
Burster NP1 Around Yier Monitoring Image of the second of			•	•	•		•
Around View Monitoring Bind Spot Detection Image: Spot Detection Image: Spot Detection DUSTER PI3 Comminications that Handisoft Interface Image: Spot Detection Image: Spot Detection Image: Spot Detection Bala Spot Detections Image: Spot Detection		AC (Air Conditioning)		•	•		
Blind Spot Detection Imade Processor Imade Processor Imade Processor Build Spot Detection Imade Processor Imade Procesor Imade Processor		4 Wheels Drive	•	•	•		•
DISTER PH3 Comminations thit Comminations thit Comminations thit Redio Comminations thit Comminations thit Comminations thit Comminations thit Redio Comminations thit Comminations thit Comminations thit Comminations thit Scene Recorder Comminations thit Comminations thit Comminations thit Comminations thit Scene Recorder Comminations thit Comminations thit Comminations thit Comminations thit Green Recorder Comminations thit Comminations thit Comminations thit Comminations thit Green Recorder Comminations thit Comminations thit Comminations thit Comminations thit Green Recorder Comminations thit Comminations thit Comminations thit Comminations thit Green Recorder Comminations thit Comminations thit Comminations thit Comminations thit Green Recorder Comminations thit Comminations thit Comminations thit Comminations thit Green Recorder Comminations thit Comminations thit Comminations thit Comminations thit		Around View Monitoring			•		
Binds-Free Modale Image Spread Modale Image Spread Modale Image Spread Modale Badio Image Spread Modale Image Spread Modale Image Spread Modale Image Spread Modale Badio Image Spread Modale Image Spread Moda		Blind Spot Detection			•		
Bultiandia Interface <td< td=""><td>DUSTER PH3</td><td>Communications Unit</td><td></td><td></td><td>•</td><td></td><td></td></td<>	DUSTER PH3	Communications Unit			•		
Badio Image: Control Module Image: Control Module <thimage: control="" module<="" th=""> Image: Contr</thimage:>		Hands-Free Module			•		
Scene Recorder Image: Construct of the construction of the constru		Multimedia Interface	●		•		
Telemetic Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LCH Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit Image: Ctrl linit LTC Image: Ctrl linit Image		Radio	•	•	•		•
ICH I		Scene Recorder	●		•		0
IPC IPC IPC IPC Irea Doing Control Module IPC IPC IPC EQM (Engine Control Module) IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC IPC		Telematic Ctrl Unit	●		•		
Urea Dosing Control Module Image: Control Module) Image: Control Module) BMC (Engine Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) BSPACE Image: Control Module) Image: Control Module) BSPACE Image: Control Module) Image: Control Module) Big Control Module) Image: Control Module) Image: Control Module) BMC (Anti-lock Braking System) Image: Control Module) Image: Control Module) BMC (Anti-lock Braking System) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) BESPACE IV Parking Brake Image: Control Module) Image: Control Module) BESPACE IV Parking Brake Image: Control Module) Image: Control Module) Image: Control Module) BESPACE IV Parking Assistance Image: Control Module) Image: Control Module) Image: Control Module) BESPACE IV PM2/3/4 Control Module) Image: Control Module) Image: Control Module) <td< td=""><td></td><td>UCH</td><td>•</td><td>•</td><td>•</td><td>•</td><td></td></td<>		UCH	•	•	•	•	
Inclusion module Image: Calibration module Image: Calibration module Image: Calibration module REM (Engine Control Module) Image: Calibration module		UPC	•	•	•	•	
EXM (Engine Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) AIrbag Image: Control Module) II (Instrument Cluster) Image: Control Module) ESPACE Image: Control Module) March (Internet) Image: Control Module) Image: Control Module) Image: Control Module) Interconnection Unit Image: Control Module) Image: Control Module) Image: Control Module) RESPACE IV Image: Control Module) II (Instrument Cluster) Image: Control Module) II (Instrument Cluster) Image: Control Module) AC (Air conditioning) Image: Control Module) II (Instrument Cluster) Image: Control Module) AC (Air conditioning) Image: Control Module) Image: Control Module) Image: Control Modu		Urea Dosing Control Module					0
TCM (Transmission Control Module) Image: Control Module) <thimage: control="" module)<="" th=""> Image: Contro</thimage:>		Variable P.A.S					
ABS (Anti-lock Braking System) Image <		ECM (Engine Control Module)					
Airbag Image Image <t< td=""><td></td><td>TCM (Transmission Control Module)</td><td></td><td>•</td><td></td><td></td><td></td></t<>		TCM (Transmission Control Module)		•			
ESPACE IC (Instrument Cluster) Image: Cluster (Instrument Cluster) <thimage: (instrument="" cluster="" cluster)<="" th=""> <t< td=""><td></td><td>ABS (Anti-lock Braking System)</td><td></td><td></td><td></td><td></td><td>•</td></t<></thimage:>		ABS (Anti-lock Braking System)					•
ESPACE AC (Air Conditioning) Image: Constraint of the second of the sec		Airbag		•	•		•
ESPACE IV PH2/4/ Engine Immobiliser Lighting Discharge Lamp Heater Interconnection Unit ECM (Engine Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) ESPACE IV Parking Brake Discharge Lamp Heater Parking Assistance Radio ICH ESPACE IV PH2/4/ ESPACE		IC (Instrument Cluster)		•	•		•
Lighting Image: State of the state of	ESPACE	AC (Air Conditioning)		•	•		•
Interconnection Unit Image: Control Module) Image: Control Module) ECM (Engine Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) AIrbag Image: Control Module) Image: Control Module) AIrbag Image: Control Module) Image: Control Module) AIrbag Image: Control Module) Image: Control Module) AC (Air Conditioning) Image: Control Module) Image: Control Module) BespAce IV Parking Brake Image: Control Module) Image: Control Module) Hands Free Kit Image: Control Module) Image: Control Module) Image: Control Module) Radio Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) AIrbag Image: Control Module) AIrbag Image: Control Module)		Engine Immobiliser		•	•		0
Heater Interconnection Unit Image: Control Module) Image: Control Modu		Lighting		•	•		
Interconnection Unit Image: Control Module Image: Control Mod		Discharge Lamp		•	•		
ECM (Engine Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Airbag Image: Control Module) IC (Instrument Cluster) Image: Control Module) AC (Air Conditioning) Image: Control Module) Parking Brake Image: Control Module) Badder Example Image: Control Module) Hands Free Kit Image: Control Module) Heater Image: Control Module) Radio Image: Control Module) UCH Image: Control Module) AS (Anti-lock Braking System) Image: Control Module) Airbag Image: Control Module) AS (Anti-lock Braking System) Image: Control Module) Airbag Image: Control Module) AS (Anti-lock Braking System) Image: Control Module) AIrbag Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) AIrbag Image: Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) </td <td></td> <td>Heater</td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		Heater		•	•	•	•
TCM (Transmission Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) Airbag Image: Control Module) Image: Control Module) Image: Control Module) AC (Air Conditioning) Image: Control Module) Image: Control Module) Image: Control Module) Barking Assistance Image: Control Module) Image: Control Module) Image: Control Module) Radio Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) ABS (Anti-lock Braking System) Image: Control Module)		Interconnection Unit		•	•	•	0
ABS (Anti-lock Braking System) Image: Control Module) Image: Control Module) Airbag Image: Control Module) Image: Control Module) Image: Control Module) ESPACE IV PR2/34 ESPACE IV PR2/34 Image: Control Module) Image: Control Module) Image: Control Module) ESPACE IV PR2/34 Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) ESPACE IV PR2/34 Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) ESPACE IV PR2/34 Image: Control Module) Image: Control Module) Image: Control Module) Image: Control Module) ESPACE IV PR2/34 Image: Control Module) ESPACE IV PR2/34 Image: Control Module)		ECM (Engine Control Module)		•	•	•	•
Airbag Image: Space IV Image: Sp		TCM (Transmission Control Module)		•	•	•	•
ESPACE IV PH2/3/4 ESPACE IV ESPACE IV ESPACE IV ESPACE IV ESPACE IV ESPACE IV ESPACE		ABS (Anti-lock Braking System)		•	•	•	•
AC (Air Conditioning) •		Airbag	•	•	•	•	•
ESPACE IV Parking Brake Image: Constraint of the second seco		IC (Instrument Cluster)		•	•	•	•
Discharge Lamp Image State Image State <td></td> <td>AC (Air Conditioning)</td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		AC (Air Conditioning)		•	•	•	•
Hands Free KitImage: Constraint of the second s	ESPACE IV	Parking Brake		•	•	•	•
Heater Image: Constraint of the second s		Discharge Lamp		•	•	•	•
Parking Assistance •		Hands Free Kit	•	•	•	•	0
Radio Image instrume Radio Image instrume Radio Image instrume UCH Image instrume ECM (Engine Control Module) Image instrume TCM (Transmission Control Module) Image instrume ABS (Anti-lock Braking System) Image instrument Airbag Image instrument IC (Instrument Cluster) Image instrument AC (Air Conditioning) Image instrument Parking Brake Image instrument Lighting Image instrument Communications Unit Image instrument Heater Image instrument Multimedia Interface Image instrument Parking Assistance Image instrument Parking Prox Image instrument		Heater	•	•	•	•	0
UCH Image: Control Module Image: Control Module Image: Control Module FCM (Engine Control Module) Image: Control Module Image: Control Module Image: Control Module ABS (Anti-lock Braking System) Image: Control Module Image: Control Module Image: Control Module ABS (Anti-lock Braking System) Image: Control Module Image: Control Module Image: Control Module ABS (Anti-lock Braking System) Image: Control Module Image: Control Module Image: Control Module ABS (Anti-lock Braking System) Image: Control Module Image: Control Module Image: Control Module ABS (Anti-lock Braking System) Image: Control Module Image: Control Module Image: Control Module AIrbag Image: Control Module Image: Control Module Image: Control Module Image: Control Module ESPACE IV PH2/3/4 Communications Unit Image: Control Module Image: Control Module Image: Control Module Image: Control Module ESPACE IV PH2/3/4 Communications Unit Image: Control Module Image: Control Module Image: Control Module Image: Control Module ESPACE IV PH2/3/4 Control Module Image: Control Module Image: Control Module Image: Control Mo		Parking Assistance	•	•	•	•	•
ECM (Engine Control Module) •		Radio	•	•	•	•	•
TCM (Transmission Control Module) • • • • ABS (Anti-lock Braking System) • • • • • Airbag • • • • • • • IC (Instrument Cluster) • • • • • • • AC (Air Conditioning) • • • • • • • Parking Brake • • • • • • • • Lighting •		UCH		•	•	۲	•
TCM (Transmission Control Module) • • • • ABS (Anti-lock Braking System) • • • • • Airbag • • • • • • • IC (Instrument Cluster) • • • • • • • AC (Air Conditioning) • • • • • • • Parking Brake • • • • • • • • Lighting •		ECM (Engine Control Module)		•	•	۲	•
ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Parking Brake Lighting Communications Unit Heater Multimed. Connection Multimedia Interface Parking Assistance Parking Prox Multimed Communications Multimed Comment Multimed Connection Multimed Connection				•	•	۲	•
Airbag • <td></td> <td></td> <td></td> <td>•</td> <td>•</td> <td>۲</td> <td>•</td>				•	•	۲	•
IC (Instrument Cluster) • <td></td> <td></td> <td></td> <td>•</td> <td></td> <td>۲</td> <td>•</td>				•		۲	•
AC (Air Conditioning) Parking Brake Lighting Communications Unit Heater Multimed. Connection Multimedia Interface Parking Prox Parking Prox Multimed. Connection Multimedia Connection Multimedia Connection Multimedia Connection Multimedia Connection Multimedia Connection Multimedia Connection Multimedia Connection				•		۲	•
Parking Brake • <				•		۲	•
ESPACE IV PH2/3/4 Lighting Communications Unit Heater Multimed. Connection Multimedia Interface Parking Assistance Parking Prox				•		۲	•
ESPACE IV PH2/3/4 Communications Unit Heater Multimed. Connection Multimedia Interface Parking Assistance Parking Prox O O O O O O O O O O O O O O O O O O O				•		۲	•
HeaterImage: ConnectionImage: ConnectionMultimedia InterfaceImage: ConnectionImage: ConnectionParking AssistanceImage: ConnectionImage: ConnectionParking ProxImage: ConnectionImage: Connection	ESPACE IV PH2/3/4			•		۲	•
Multimed. Connection •				•		۲	•
Multimedia InterfaceImage: Constraint of the second se			•		•	Ū	ě
Parking AssistanceImage: Constraint of the second seco			•	-	-		ě
Parking Prox • • • • • C			-				ě
				-	_	-	0
					_		Ŏ
					-		
						-	ě

			-	-	-	-
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•		•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)			•		•
	Parking Brake			•		
	4 Wheels Steering	•	•	•	•	
	Amplifier	•	•	•		
	Front Camera	•	•	•	•	0
	Front Radar	•	•	•		0
	Gearbox Elec Control	•	•		•	•
ESPACE V	Left-Hand Door		•	•	•	•
	Multimedia Interface	ě	ě	ě		ě
	Parking Prox Can		ě	ě		ě
	Piloted Suspension		•	ě		0
				ě		•
	Power Back Door					
	Radio					
	Right-Hand Door					
	Seat Management	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	0
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•				
	Variable P.A.S			•		
	ECM (Engine Control Module)	•			•	
	TCM (Transmission Control Module)					•
	4 Wheels Steering	•	•	•	•	
	ABS (Anti-Lock Braking System)	•		•		
	SRS (Supplemental Inflatable Restraint System)	۲	•	Ŏ	•	Ŏ
	IC (Instrument Cluster)		ě	ě	•	•
	AC (Air Conditioning)		ě	ě		ě
	UCH			ě		•
	UPC			-		
	Central Gateway	<u> </u>	•	•	•	*
	Adaptive Driving Beam Left	•	•	•	•	•
	Adaptive Driving Beam Right	•	•	•	•	•
	Adaptive Driving Beam Unit			•		•
	Amplifier		•	•	•	*
	Check Chassis	•				*
	Communications Unit	۲	•	•	•	*
	Driving Assistance Supervisor	•	•	•	•	•
ESPACE V PH2	Front Camera	۲	•	•	•	
	Front Radar	•	•	•	•	•
	Gearbox Elec Control	•		•		
	Hands-Free Module			ě		*
	Head Up Display			ě		*
	Left Rear Side Radar					
	Right Rear Side Radar		•	•	•	•
	Left-Hand Door		•	•	•	•
	Right-Hand Door	•	•	•	•	•
	Power Back Door	•	•	•		
	Seat Management		•	•		
	Multimedia Interface					
	Parking Prox Can	•			•	•
	Piloted Suspension					*
	Telematic Control Unit	۲		•	•	*
	Telephone Induction Charger	•	•	•	•	*
	Urea Dosing Control Module		ě	ě	•	•
	Variable P. A. S		ě	ě	•	ě
	Petrol Injection					
	TCM (Transmission Control Module)			ě		
EXTRA			-	-		
	Airbag		•	•		0
	Engine Immobiliser	-	•	•	•	•
	ECM (Engine Control Module)		•	•	•	•
	TCM (Transmission Control Module)	•		•	•	•
	ABS (Anti-lock Braking System)				•	•
	Airbag	•		•		
	IC (Instrument Cluster)	•		•	•	•
	AC (Air Conditioning)	•				
	Parking Brake	•	•	•		•
	4 Wheels Drive		ě	ě	•	0
	Amplifier		•	ě	•	•
KADJAR			•	•		•
1111 ULLIN	Front Camera				0	0
	Front Radar		•	-		-
	Multimedia Interface	•	•		•	
		-		-	-	-
	Parking Prox Can Radio	•	•	•	•	•

	Telematic Ctrl Unit		•	•	۲	•
	UCH		۲	•	۲	•
	UPC		•	•	•	•
	Urea Dosing Control Module			•	•	•
	Variable P.A.S			•	•	
	ECM (Engine Control Module)	•		•	•	
	TCM (Transmission Control Module)	•		•	•	
	ABS (Anti-lock Braking System)	•		•	•	
	Airbag	•		•	•	
	IC (Instrument Cluster)	•		•	•	
	AC (Air Conditioning)	•		•	•	
	Parking Brake		•	•		•
	4 Wheels Drive	•		•	•	
KADJAR CN	Amplifier	•		•	•	
	Front Camera	•		•	•	
	Multimedia Interface	•		•	•	
	Parking Prox Can		•	•		0
	Radio			•	•	•
	Telematic Ctrl Unit		•		•	
	UCH		•		•	
	UPC		•		•	
	Variable P.A.S		•		•	•

		-			-	-
	ECM (Engine Control Module)	-			•	
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	ABS (Anti-lock Braking System) Airbag					
	AC (Air Conditioning)	•	•	ě	Ĭ	•
KANGOO	Engine Immobiliser	•	•	Ŏ	Ĭ	•
	Gas Inj	•	Ĭ	ě	ě	•
	Heater	•	•	•	•	0
	Interconnection Unit	•	•	•	•	Ŏ
	Inverter	•	•		•	•
	Supervisor	•	•		•	•
	ECM (Engine Control Module)	•	•	۲	•	•
	TCM (Transmission Control Module)	•			•	
	ABS (Anti-lock Braking System)	•	•		•	
	Airbag	•				•
	IC (Instrument Cluster)	•				
	AC (Air Conditioning)	•				•
	TPM (Tire Pressure Monitoring)	•				•
	Adaptation Unit	•				0
KANGOO II	Communications Unit	•	•	•	•	•
	Multimed. Connection	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Assistance	•	•	•	•	
	Radio	•	•	•	•	•
	Telematic Ctrl Unit			•		•
	UCH			•		
	UPC			•		
	Variable P. A. S					
	Diesel Injection					
	Petrol Injection			•		
KANCOO MUV	TCM (Transmission Control Module)		•	•		
KANGOO MUX	ABS (Anti-lock Braking System)	•		•	•	
	Airbag	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Interconnection Unit	•	•	•	•	0
	ECM (Engine Control Module)	•				
	ABS (Anti-lock Braking System)	•				
KANGOO VLL	Airbag					•
	Tracker					0
	UCH Versiehle D.A.S.					
	Variable P.A.S ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
	Airbag					
	IC (Instrument Cluster)					
	AC (Air Conditioning)	•	•			
	PEB	•	•			0
	TPM (Tire Pressure Monitoring)	•	ě	ě	ě	ĕ
	BMS	•	ě	ě	ě	•
	BMS Safety	•	ě	ě	ě	•
	Adaptation Unit	•	•	•	•	•
	BCB	•	•	•	•	•
KANGOO ZE/	Charge Controller	•	•	•	•	0
STOPSTART/PH2	Communications Unit	•	•	•	•	•
	EVC	•	•		•	•
	Heater	•	•		•	•
	Multimed. Connection	•	•	•	٠	•
	Multimedia Interface	•			•	
	Parking Assistance	•	•	۲	•	•
	Parking Prox Can	•	•	•	•	0
	Radio	•			•	•
	Telematic Ctrl Unit	•	•		•	
	UCH	•		•		
	UPC	•	•		•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•		•	
	ECM (Engine Control Module)	•		•		
	ABS (Anti-Lock Braking System)	•	•			
	SRS (Supplemental Inflatable Restraint System)	•	•		•	•
	IC (Instrument Cluster)		•		•	•
	UCH	•	•		•	
	UPC	•	•		•	
	01.0			•		*
NEW KANCOO IS	Central Gateway	•	•		-	<i>/</i> ! \
NEW KANGOO LS		•	•	•	•	*
NEW KANGOO LS	Central Gateway			-		
NEW KANGOO LS	Central Gateway Communications Unit	•	•	•	•	*

Telematic Control Unit		•	•	•	*
Urea Dosing Control Module	•	•	•	•	•
Variable P.A.S		•	•	•	•

					-	-
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•			•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•		•		•
	Parking Brake	•		•		•
	4 Wheels Drive	•		•	•	•
	Amplifier					
KOLEOS II CN/	Front Camera				•	0
QM6 CN	Front Radar			•		0
	Left-Hand Door				•	•
	Multimedia Interface		•			•
	Parking Prox Can	•	•	•	•	•
	Power Back Door	•	•	•	•	•
	Radio		•	•	•	•
	Seat Management		•	•	•	•
	Telematic Ctrl Unit		•	•	•	0
	UCH		•	•	•	•
	UPC		•	•	•	•
	Variable P. A. S	•	•	ě	ě	ě
	ECM (Engine Control Module)	•	ě	ě	•	ě
	TCM (Transmission Control Module)			ě	ě	ě
	ABS (Anti-lock Braking System)					
	Abs (Anti-Tock braking System) Airbag					
	Alrbag IC (Instrument Cluster)					
	AC (Air Conditioning)					
	Parking Brake					
	4 Wheels Drive	-	•		•	•
	Amplifier	•	•	•	•	•
	Front Camera	•	•	•	•	0
KOLEOS II/	Front Radar	•		•		0
QM6	Left-Hand Door	•		•	•	•
	Multimedia Interface				•	•
	Parking Prox Can				•	
	Power Back Door			•		
	Radio	•	•	•		•
	Seat Management				•	
	Telematic Ctrl Unit	•	•	•	•	0
	UCH	•	•	•	•	•
	UPC		•	•	•	•
	Urea Dosing Control Module		•	•	•	•
	Variable P.A.S			•	•	
	ECM (Engine Control Module)		•	•	•	•
	TCM (Transmission Control Module)		•	•		0
	ABS (Anti-lock Braking System)	•	ě	ě	ě	Ŭ
	Airbag	•	ě	-	ě	ě
	IC (Instrument Cluster)	•	•	ě	•	ě
	Parking Brake				ě	ě
	TPM (Tire Pressure Monitoring)				ě	ě
	Auto Front Lighting					ě
	Discharge Lamp					Ĭ
	4 Wheels Drive		•			0
KOLEOS/			-			-
QM5	Amplifier		•			•
	Blind Spot Detection		•		-	•
	Communications Unit		•	•	*	0
	Multimed. Connection		•	•	•	•
	Multimedia Interface	•	•		•	•
	Parking Prox Can		•			
	Radio	•	•	•		•
	Telematic Ctrl Unit	•	•	•		•
	UCH	•	•	•	•	•
	UPC	•	•		•	•
	Variable P.A.S	•	•		•	•
	ECM (Engine Control Module)	•	•		•	•
	ABS (Anti-lock Braking System)	•	•		•	•
	Airbag	•	•		•	•
KWID	IC (Instrument Cluster)		•	•		
	Radio	•	ě	ě	ě	Ĭ
	UCH	•		ě	ě	Ĭ
			-	. –		· ·

			-	-	-	-
	ECM (Engine Control Module)	•		•	•	•
	ABS (Anti-lock Braking System)				•	
	Airbag	•		•		
KWID BR	IC (Instrument Cluster)					
	Multimedia Interface		•	•	•	•
	Radio			•		
	UCH					
	Variable P. A. S					
	Diesel Injection					
	Petrol Injection					
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)				•	
LAGUNA	ABS (Anti-lock Braking System)					
Enoona	Airbag IC (Instrument Cluster)					
	AC (Air Conditioning)					
	Engine Immobiliser Driver's Position					
	Variable P. A. S					0
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
	ABS (Anti-lock Braking System) Airbag					
LAGUNA II	IC (Instrument Cluster) AC (Air Conditioning)					
	Discharge Lamp					0
	Heater					
	Parking Assistance					
	UCH					
				•	•	ě
	ECM (Engine Control Module) TCM (Transmission Control Module)					ě
	ABS (Anti-lock Braking System) Airbag					
	IC (Instrument Cluster)					
	AC (Air Conditioning)					
LAGUNA II PH2						
	Parking Brake Lighting					•
	Communications Unit			•		0
	Hands Free Kit					0
	Heater			•		0
						•
	Parking Assistance UCH			•		
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
	Airbag IC (Instrument Cluster)					
	AC (Air Conditioning)					
	Parking Brake				•	•
	Lighting					-
	4 Wheels Steering					0
	Amplifier			•		•
	Communications Unit	•			•	0
LAGUNA III	Driver's Door	•	•		•	
	Left-Hand Door	•			•	
	Multimed. Connection				•	
	Multimedia Interface		<u> </u>	•	•	
	Parking Prox Can	•	<u> </u>	•	•	
	Passenger's Door					
	Radio	•	<u> </u>	•	•	•
	Right-Hand Door		<u> </u>	•	•	
	Seat Management		•	•	•	
			-	-	_	
	Telematic Ctrl Unit	•	•	•	•	•
		•	•	•	•	•

	ECM (Engine Control Module)	•			•	
	TCM (Transmission Control Module)	•	•			
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
LAGUNA PHASE 2	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	0
	Engine Immobiliser		•	•		•
	Driver's Position					
	Gas Inj Variable P.A.S					
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)		ě	•	•	
	ABS (Anti-lock Braking System)	ě	ě	•	ě	ě
	Airbag	ě	ě	ě	ě	ě
	IC (Instrument Cluster)	•	•		•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Lighting	•	•		•	•
	Amplifier	•	•		•	•
	Blind Spot Detection	•	•	•	•	0
	Communications Unit	•	•	•	•	•
LATITUDE/	Driver's Door	•	•	•	•	•
SM5	Left-Hand Door			•		
	Multimed. Connection			•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	0
	Passenger's Door	•	•		•	•
	Radio			•		-
	Right-Hand Door	•	•	•		-
	Seat Management	•	•	•	•	•
	Telematic Ctrl Unit		•	•	•	
	UCH		•		•	
	UPC		•			
	Variable P. A. S					
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)		•			
	Airbag IC (Instrument Cluster)			•		
LODGY	Hands Free Kit		ě	•		0
	Multimedia Interface		ě		ě	Ŏ
	Radio		ě	•	ě	ě
	UCH	ě	ě	•	ě	Ŏ
	Urea Dosing Control Module	ě	ě	•	ě	Ŏ
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	۲	•	•	•
	Airbag	•	•	•	•	•
LOGAN	Gas Inj	•	•	•	•	0
	Radio	•		•	•	•
	Tracker	•	•	•	•	
	UCH					•
	Variable P.A.S		•	•		•
	ECM (Engine Control Module)		•	•		•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	-
	IC (Instrument Cluster)	•				-
	AC (Air Conditioning)	•		•		-
100101 17/	Communications Unit		•	•		•
LOGAN II/ SANDERO II	Hands Free Kit		•	•	•	•
SHIDENU II	Multimedia Interface		•	•	•	
	Radio Tolomatic Ctrl Unit		•			
	Telematic Ctrl Unit Tracker					
	UCH		•	•		
	UPC					
	Urea Dosing Control Module			•	Ĭ	
	Variable P. A. S		•	•	Ĭ	
	ECM (Engine Control Module)		•			
	TCM (Transmission Control Module)			•	ě	
	4 Wheels Drive	•	•	•	•	•
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	ě	Ň
		-				

	UPC	•	•	•	•	•
	BSG	•	•	•	•	*
NEW SANDERO/LOGAN	Central Gateway	•	•	•	•	
	BMS 12V	•	•	•	•	
	Around View Monitoring	•	•	•	•	
	Communications Unit	•	•	•	•	*
	Driving Assistance Supervisor	•	•	•	•	
	Front Radar	•	•	•	•	
	Hands-Free Module	•	•	•	•	
	Parking Prox Can	•	•	•	•	
	Radio	•	•	•	•	
	Telematic Control Unit	•	•		•	*
	Variable P.A.S	•	•	•	•	*

	ECM (Engine Control Module)		•			
	ABS (Anti-lock Braking System)			ě	ě	Ĭ
	Airbag	•			ě	
MASTER	Engine Immobiliser	•		ě	ě	ě
	Interconnection Unit	•		ě	ě	ě
	Piloted Suspension	•		ě	ě	0
	ECM (Engine Control Module)	•		ě	ě	ĕ
	TCM (Transmission Control Module)	•		ě	ě	ě
	ABS (Anti-lock Braking System)	•		ě	ě	ě
	Airbag	•		ě	ě	ě
	IC (Instrument Cluster)	•		ě	ě	ě
	AC (Air Conditioning)	•	ě	ě	ě	ě
	PEB	•		ě	ě	0
	TPM (Tire Pressure Monitoring)	•		ě	•	ĕ
	BMS	•		ě	ě	ě
	Lighting	•		ě	ě	ě
	Adaptation Unit					
	BCB	•		ě	ě	ě
	Blind Spot Detection				ě	ě
	Charge Controller			ě	ě	0
	Communications Unit					
MASTER III	EVC					0
	Front Camera					•
	Hands-Free Access					
	Heater Multimed. Connection					
	Multimedia Interface					
	Parking Assistance					•
	Parking Prox Can		•	•		0
	Radio		•	•		•
	Telematic Ctrl Unit		•			•
	Telephone Induction Charger		•			0
	Tracker		•	•		•
	UCH					
	UPC	•		•		
	Urea Dosing Control Module	•		•	•	•
	Variable P. A. S	•			•	•
	Diesel Injection	•		•	•	•
	ABS (Anti-lock Braking System)	•	<u> </u>	•	•	•
MASTER PH 2	Airbag	•		•	•	•
	Engine Immobiliser	•	<u> </u>	•	•	•
	Interconnection Unit	•		•	•	0
	Parking Assistance	•		•	•	•
	ECM (Engine Control Module)	•		•	•	•
	TCM (Transmission Control Module)	•		•	•	•
	ABS (Anti-lock Braking System)	•		•	•	•
	Airbag	•	•	•	•	•
MASTER PH 3	Adaptation Unit	•	<u> </u>		•	•
	Communications Unit	•		•	•	•
	Parking Assistance	•			•	•
	Piloted Suspension	•	•	•		0
	Tracker	•	•	•		•
	UCH	•	•			•
	Diesel Injection				•	•
MASTER RWD	Airbag					
	Engine Immobiliser					
	Interconnection Unit				•	
	ECM (Engine Control Module)		•			۲
	Airbag		۲			
MASTER RWD PH2	Engine Immobiliser	•	•		•	
	Adaptation Unit	•	•		•	•
	Interconnection Unit		•		•	0
	ECM (Engine Control Module)	•	•		•	
	ABS (Anti-lock Braking System)		•		•	•
MACTED DWD DIIO	Airbag	•	•	•	•	•
MASTER RWD PH3	Adaptation Unit		•	•	•	•
	Communications Unit		٠			
		-	-		-	

		-	-	-	-	-
	ECM (Engine Control Module)		•	•		
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	Airbag					
	IC (Instrument Cluster)	•	•	ė	•	
	AC (Air Conditioning)	ě	ě	ě	ě	ě
	Lighting	ě	ě	ě	ě	ě
	Discharge Lamp	Ó	•	•	•	•
MECANE II	Communications Unit		•			0
MEGANE II	Gas Inj	۲	•	•	•	•
	Left Coslad	۲	•	•	•	•
	Parking Assistance		•	•	۲	•
	Right Coslad		•	•	۲	•
	Sunroof	•				
	Tracker		•	•		•
	UCH					•
	UPC					
	Variable P.A.S					
	ECM (Engine Control Module)					•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)					*
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake			•		•
	Lighting		•	•		•
	Communications Unit		•	•	•	0
	Driver's Door					•
MEGANE III/	Front Camera					•
SCENIC III	Multimedia Connection		•	•		•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can		•	•		0
	Passenger's Door	•	•	•	•	•
	Radio		•	•	•	•
	Seat Management	•	•	•	•	•
	Sunroof Control Unit	•				
	Telematic Ctrl Unit					•
	UCH					•
	UPC		•	•	•	0
	Variable P. A. S					•
	ECM (Engine Control Module)					
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	Airbag					
	IC (Instrument Cluster)					
	AC (Air Conditioning)	ě	, i i i i i i i i i i i i i i i i i i i	ě	ě	ě
	PEB	ě		ė	ě	0
	Parking Brake	ě		ė	ě	ĕ
	BMS	ě	ě	•	ě	ě
	BMS Safety	ě	ě	ě	ě	0
	4 Wheels Steering	ě	ě	ě	ě	ĕ
	Amplifier	•	Ŏ	•	Ŏ	•
MEGANE IV	Front Camera	•	Ŏ	•	ě	•
	Front Radar	•	Ŏ	•	•	•
	Left-Hand Door	Ŏ	Ŏ	Ŏ	Ŏ	•
	Multimedia Interface	Ŏ	•	Ŏ	Ŏ	•
	Parking Prox Can	Ŏ	•	Ŏ	Ŏ	•
	Radio	•	•	•	•	•
	Seat Management	Ŏ	•	Ŏ	Ŏ	•
	Supervisor	•	•	•		•
	Telematic Ctrl Unit	•				
	UCH					
	UPC					
	Urea Dosing Control Module					
	Variable P.A.S	•		•		0
	ECM (Engine Control Module)		•			
	TCM (Transmission Control Module)		•			•
	4 Wheels Steering		•			•
	ABS (Anti-Lock Braking System)		•			
	SRS (Supplemental Inflatable Restraint System)	•	•		•	•
	IC (Instrument Cluster)	•				•
	AC (Air Conditioning)					
	Parking Brake					
	Parking Prox Can					*
	BMS 12V					
	BMS Safety					*
					-	
	BMS			•	•	

	UPC	•	•		٠	•
	EVC			•	۲	*
	BCB		•	•	•	*
	Central Gateway		•	•	•	•
	Electric Traction Motor		•		•	•
	Traction Control Unit		•		•	•
	Brake Booster		•	•	•	•
	Check Chassis		•	•	•	*
MEGANE IV PH2	Adaptive Driving Beam Left				•	•
	Adaptive Driving Beam Right		•	•	•	•
	Adaptive Driving Beam Unit				•	•
	Amplifier				•	*
	Communications Unit		•	•	•	•
	Driving Assistance Supervisor			•	•	*
	Front Camera			•	•	•
	Front Radar			•	•	•
	Hands-Free Module			•	•	•
	Head Up Display				•	•
	Left Rear Side Radar	•		•	•	•
	Right Rear Side Radar				•	•
	Left-Hand Door				•	•
	Multimedia Interface				•	*
	Radio				•	•
	Seat Management			•	•	•
	Supervisor			•	•	*
	Telematic Control Unit					*
	Telephone Induction Charger					
	Urea Dosing Control Module					
	Variable P.A.S					*
	Vehicle Sound For Pedestrian					•

				1		
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)		•		•	•
	AC (Air Conditioning)					
	Parking Brake			●		
	Amplifier			•		
	Front Camera			•	•	
MEGANE IV SEDAN	Front Radar			•	•	0
MEDINE IV SEDIN	Left-Hand Door			•	۲	
	Multimedia Interface		•		•	•
	Parking Prox Can					
	Radio		•		•	
	Seat Management		•		•	
	Telematic Ctrl Unit	•	Ó	•	Ó	0
	UCH	•	ě	•	ě	ŏ
	UPC					
	Urea Dosing Control Module					
	Variable P. A. S					
	ECM (Engine Control Module)			•	<u> </u>	•
	TCM (Transmission Control Module)		<u> </u>	•		
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
MEGANE/SCENIC	TPM (Tire Pressure Monitoring)		•		•	
	Engine Immobiliser				•	
	Driver's Position					
	Gas Inj		•		•	0
	Hood Control		•		•	•
	Interconnection Unit					
	ECM (Engine Control Module)		•		•	
	TCM (Transmission Control Module)	•	Ó	•	Ó	•
	ABS (Anti-lock Braking System)		<u> </u>	•	<u> </u>	
	Airbag					
	IC (Instrument Cluster)					
MODUS	AC (Air Conditioning)			-		
MODUS	TPM (Tire Pressure Monitoring)	•		•		•
	Lighting	•		•		•
	Hands Free Kit	•		•		0
	Parking Assistance	•	•	•	•	•
	UCH			•		
	UPC					
	Variable P.A.S			•	•	
	ECM (Engine Control Module)			\bullet	•	
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)		•		•	
	Airbag		•		•	
	IC (Instrument Cluster)	•	•	•	•	
	AC (Air Conditioning)		Ó	•	Ó	•
	PEB		ě	•		0
	Parking Brake			•		Ĭ
				•		0
	BMS					-
	BMS Safety		•	•	•	•
	Lighting		<u> </u>	•	•	•
	Amplifier		•	•		•
NEW SM3/	BCB	•	•	•	•	•
NEW SM3/						
FLUENCE/	Blind Spot Detection	•	•	•		
	Blind Spot Detection Communications Unit	•	•	•	•	•
FLUENCE/		•	•		•	•
FLUENCE/	Communications Unit		•	•	•	•
FLUENCE/	Communications Unit Driver's Door		•	•	•	-
FLUENCE/	Communications Unit Driver's Door EVC	•	•	•		•
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface	•	•		• • • •	•
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface Parking Prox Can				•	•
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface Parking Prox Can Radio				•	
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface Parking Prox Can Radio Sunroof Control Unit		• • • • • • • •	• • • • • • • • •		
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface Parking Prox Can Radio Sunroof Control Unit Telematic Ctrl Unit				•	
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface Parking Prox Can Radio Sunroof Control Unit Telematic Ctrl Unit Tracker					
FLUENCE/	Communications Unit Driver's Door EVC Multimed. Connection Multimedia Interface Parking Prox Can Radio Sunroof Control Unit Telematic Ctrl Unit					

				-		-
	Petrol Injection	•	•	•	•	•
R19	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
DOI (CAUADRA	Engine Immobiliser	•	•	•	•	•
R21/SAVANNA	Petrol Injection	•	•	•	•	•
R25	Petrol Injection	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	0
SAFRANE	Airbag	•	•	•	•	•
SAFKANE	IC (Instrument Cluster)	•	•		•	
	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Discharge Lamp	•				•
	Variable P. A. S	•	•	•		0
	ECM (Engine Control Module)	•	•		•	•
	TCM (Transmission Control Module)	•	•		•	
	ABS (Anti-lock Braking System)	•	•			•
CANDEDO	Airbag	•	•			•
SANDERO	Gas Inj					
	Radio		•		•	•
	Tracker		•			•
	UCH		•	•	•	•
	Variable P. A. S					0
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)		•			
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
SCENIC II	Discharge Lamp	•	•	•	•	•
	Communications Unit	•	•	•	•	•
	Gas Inj	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Assistance	•	•	•	•	0
	Parking Prox Can	•	•	•	•	•
	Radio	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S		•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	PEB	•	•	•	•	0
	Parking Brake	•	•	•	•	•
	BMS	•	•	•	•	•
	BMS Safety	•	•		•	•
	Amplifier		•	•	•	•
SCENTC IV	Front Camera	•	•		•	•
SCENIC IV	Front Radar		•		•	0
	Left-Hand Door	•	•		•	
	Multimedia Interface	•	•		•	
	Parking Prox Can	•	•	•	•	•
	Radio		•	•		•
	Right-Hand Door		•			•
	Seat Management		•		•	
	Supervisor	•	•	•	•	0
	Telematic Ctrl Unit		•	•	•	•
	UCH		•	•	•	•
	UPC		•	•	•	•
	Urea Dosing Control Module		•	•	•	•
	Variable P.A.S		•	•	•	

		-	-	-	-	-
	ECM (Engine Control Module)	•			•	
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	ABS (Anti-lock Braking System) Airbag					
	IC (Instrument Cluster)		ě	•	Ĭ	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake		•	•	Ĭ	Ĭ
	Lighting	•	ě	•	•	ě
	Amplifier		•		•	•
	Blind Spot Detection	•	٠		•	0
	Communications Unit	•	٠		•	•
SM7 - L47	Driver's Door	•	•	•	•	•
	Left-Hand Door	•	•	•	•	•
	Multimed. Connection	•	•		•	
	Multimedia Interface		•		•	•
	Parking Prox Can	•	•		•	•
	Passenger's Door	•			•	
	Radio	●				
	Right-Hand Door				•	
	Seat Management				•	
	UCH				•	
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	0
CD TD D-	Petrol Injection	•	•	•	•	•
SPIDER	Airbag	•	•	•	•	•
	Engine Immobiliser	•	•	•		•
SUPER 5	Petrol Injection		•	•	•	
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)		•			
	Airbag		•	•		•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•		
	Parking Brake		•	•	•	
	4 Wheels Steering		•	•	•	•
	Amplifier					
	Front Camera					
TALISMAN/SM6	Front Radar			•		
11121500117 500	Left-Hand Door					
	Multimedia Interface Parking Prox Can		ě			ě
	Piloted Suspension					0
	Power Back Door					
	Radio					
	Seat Management		, i			0
	Telematic Ctrl Unit	•	ě	ě	ě	ĕ
	UCH	•	ě	•	ě	ě
	UPC	•	ě	ě	ě	ě
	Urea Dosing Control Module	•	ě	ě	ě	ě
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	ě	ě	•	•	ě
	TCM (Transmission Control Module)	•	•	•	•	•
	4 Wheels Steering	•	Ŏ	Ŏ	•	Ŏ
	ABS (Anti-Lock Braking System)	•	Ŏ	Ŏ	•	Ŏ
	SRS (Supplemental Inflatable Restraint System)	•	Ŭ.		•	Ŏ
	IC (Instrument Cluster)	•	•		•	0
	AC (Air Conditioning)	•	•		•	•
	UCH				•	
	UPC	•	•		•	
	Central Gateway	•				1.44
	Central Gateway Check Chassis	•	•	•		*
		•	•		•	•
	Check Chassis	• • •	•	•	•	-
	Check Chassis Adaptive Driving Beam Left	• • • • •	•	•	• • •	•
	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right		•	•	• • • •	• • • •
	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit	• • • • • • • • • • • • • • • • •	•		-	•
TALISMAN/SMG PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier	• • • • • • • • • • • • • • • • • • •	•		-	• • • •
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit				•	
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor	• •			•	
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera	• •			•	
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar	• •			•	
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module	• •			•	
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display					
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Cadar Hands-Free Module Head Up Display Left Rear Side Radar					
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar					
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar Left-Hand Door					
TALISMAN/SM6 PH2	Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar Left-Hand Door Power Back Door	• •				

	Radio		•		•	
	Seat Management		•		•	*
	Telematic Control Unit			•	•	•
	Telephone Induction Charger			•	•	•
	Urea Dosing Control Module				•	•
	Variable P.A.S			•	•	•
	ECM (Engine Control Module)		•	•	•	•
	TCM (Transmission Control Module)		•		•	
	ABS (Anti-lock Braking System)		•		•	
THALIA/SYMB.2	Airbag			•	•	•
THALTA/ STMD, 2	AC (Air Conditioning)			•	•	•
	Tracker			•	•	0
	UCH			•	•	•
	Variable P.A.S			•	•	•
	ECM (Engine Control Module)			•	•	•
	TCM (Transmission Control Module)			•	•	•
	ABS (Anti-lock Braking System)			•	•	•
THALIA/SYMBL	Airbag		•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Interconnection Unit	•	•	•	•	0

	Diegal Injection		•		•	
	Diesel Injection Petrol Injection		•		•	
TRAFIC	Airbag					
	Engine Immobiliser	•	ě	ě	ě	ě
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•				
TRAFIC II	Airbag	•	•		•	0
INAPIC II	Engine Immobiliser	•	•		•	•
	Adaptation Unit	•				•
	Heater	•				•
	Interconnection Unit	•				
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
TRAFIC II P2/3	Adaptation Unit	•	•	•	•	•
	Communications Unit	•	•	•	•	0
	Heater	-	•			•
	Multimed. Connection		•	•		•
	Multimedia Interface		•			
	Parking Assistance		•		•	•
	Radio UCH		•			
	UCH ECM (Engine Control Module)					
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)					
	ABS (Anti-lock braking System) Airbag					
	IC (Instrument Cluster)		•	•		•
	AC (Air Conditioning)		•			ě
	Adaptation Unit		•		•	ě
	Communications Unit		•		•	0
	Hands Free Kit		ě	ė	ě	ĕ
TRAFIC III	Heater	•	ě	ė	ě	ě
	Multimedia Interface	•	ě	ė	ě	ě
	Parking Prox Can	•	ě	ě	ě	ě
	Radio	•	•	•	•	•
	Telematic Ctrl Unit		•		•	0
	UCH			•	•	
	UPC	•		•	•	
	Urea Dosing Control Module	•	•		•	•
	Variable P.A.S		•	•	•	•
	ECM (Engine Control Module)		•		•	•
	TCM (Transmission Control Module)		•	•	•	
	ABS (Anti-Lock Braking System)		•	•	•	
	SRS (Supplemental Inflatable Restraint System	n) 🔴				•
	IC (Instrument Cluster)	•		•		•
TRIBER	AC (Air Conditioning)	•				0
	UCH					•
	Central Gateway					*
	Communications Unit					•
	Hands-Free Module	•	•	•		*
	Radio	•	•	•	•	•
	Variable P.A.S	•	•	•	•	*
	Petrol Injection	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	
TWINCO	ABS (Anti-lock Braking System)		•	•	•	
TWINGO	Airbag					
	Engine Immobiliser	•				•
	Interconnection Unit					0
	Variable P. A. S ECM (Engine Control Module)					
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
	Airbag					
	IC (Instrument Cluster)					
TWINGO II	AC (Air Conditioning)					
TATINOO 11	Multimed. Connection					
	Multimedia Interface					
	Parking Assistance		•			•
	Radio Rev Counter/Symbol		•			0
	INEX COULTER/ NUMO				■	I U
	UCH		ě	•		

			-		•	-
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•		•
	Airbag	•	•	•		•
	IC (Instrument Cluster)	•	•	•		
	AC (Air Conditioning)			•	•	•
	Adaptation Unit		•	•	•	
	Communications Unit			•		0
TWINGO III	Front Camera		•	•		0
	Front Radar			•		0
	Gearbox Elec Control		•	•		•
	Multimedia Interface		•	•		•
	Radio			•		0
	Telematic Ctrl Unit	•	•	•	•	
	UCH		•	•	•	
	UPC		•	•	•	
	Variable P.A.S		•	•	•	•
	ECM (Engine Control Module)		•		•	
	TCM (Transmission Control Module)		•	•	•	•
	ABS (Anti-lock Braking System)		•	•	٠	•
TWINGO PHASE 2	Airbag	•	•	•	•	•
IWINGO FRASE Z	Engine Immobiliser	•	•	•	•	•
	Gas Inj		•	•	•	•
	Interconnection Unit		•	•	۲	0
	Variable P.A.S		•	•	•	0
	Airbag		•	•	۲	•
	IC (Instrument Cluster)		•	•	•	•
TWIZY	BMS		•	•	•	•
	Adaptation Unit		•	•	•	•
	UCH		•	•	•	
	ECM (Engine Control Module)		•	•	•	•
	TCM (Transmission Control Module)		•	•	•	•
	ABS (Anti-lock Braking System)		•	•	•	•
	Airbag		•	•	•	
	IC (Instrument Cluster)		•	•	•	•
	AC (Air Conditioning)		•	•	•	•
	Parking Brake		•	•	•	•
VEL SATIS	TPM (Tire Pressure Monitoring)	•	•	•	•	
	Discharge Lamp	•	•	•	•	
	Front Radar	•	•	•	•	•
	Hands Free Kit		•	•		0
	Heater	•	•	•	•	Õ
	Parking Assistance	•		•	ě	ĕ
	UCH	•		•	ě	ě
	ECM (Engine Control Module)			•		Ŏ
	TCM (Transmission Control Module)	•		•	ē	Ŏ
	ABS (Anti-lock Braking System)	•		•		ě
	Airbag	•	•		ě	ě
	IC (Instrument Cluster)		•	•		•
	AC (Air Conditioning)		•	•	•	•
	Parking Brake	•	•	•	•	•
VEL SATIS PH2	Lighting					0
	Communications Unit		•	•		•
			•	•	•	0
	Hands Free Kit	•		•	•	•
	Heater	-	-		-	-
	Parking Assistance	•	•	•	•	•
	Parking Prox	•	•	•	•	0
	UCH				•	

	ECM (Engine Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
WIND	Multimed. Connection		•	•		•
	Multimedia Interface					
	Radio	•	•	•	•	
	Sunroof Control Unit	•		•	•	0
	UCH	•		•	•	
	Variable P.A.S	•	•	•	•	0
	ABS (Anti-lock Braking System)	•		•	•	
	Airbag	•	•	•	•	
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	PEB	•		•	•	0
	BMS	•	•	•	•	0
	Adaptation Unit	•			•	•
	BCB	•	•	•	•	•
ZOE	Communications Unit	•	•	•	•	•
	EVC	•	•	•	•	•
	Multimedia Interface		•	ě	ě	- i
	Parking Prox Can	ě		ě	ě	0
	Radio		•	ě	ě	Ŏ
	Telematic Ctrl Unit		•	ě		
	UCH					
	UPC		•			
	Variable P. A. S					
	ABS (Anti-Lock Braking System)					
	SRS (Supplemental Inflatable Restraint System)					
	IC (Instrument Cluster)					
	AC (Air Conditioning)	•	•	•	•	•
	BMS Safety	•	•	•	•	•
	BMS	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Parking Prox Can	•	•		•	0
	UCH	•	•	•	•	•
	UPC	•	●	•	•	0
	BCB	•	●	•	•	•
	EVC	•	•	•	•	
	PEB	•		•	•	
NEW ZOE	Central Gateway		•			
	Check Chassis	•		•	•	0
	Brake Booster	•	•	•	•	0
	Adaptation Unit	•	•	•	•	•
	Amplifier	•	•	•	•	•
	Front Camera	•	•			
	Front Radar	•	•	•	•	•
	Hands-Free Module	•	•	•	•	•
	Multimedia Interface	ě	Ĭ	ě	ě	0
					-	-
					•	-
	Power Line Controller	-	•	•	-	•
	Power Line Controller Telematic Control Unit	•			•	•
	Power Line Controller	-	-		-	-

• : Compatible
 * : Peut être compatible en fonction de l'état du véhicule
 ○ : N'est pas compatible
 ▲ : Nouvelle compatibilité sur ce modèle

Model	BLD
CLIO	•
CLIO 2	
CLIO II P2/3/4	\bullet
CLIO II PH6	\bullet
CLIO III	•
DUSTER	•
KANGOO II	•
KANGOO MUX	•
KANGOO VLL	•
LOGAN	•
MASTER III	•
MASTER RWD PH3	•
MEGANE II	•
MODUS	
R19	
SAFRANE	•
SANDERO	
SCENIC II	•
THALIA/SYMB.2	•
THALIA/SYMBL	•
TRAFIC II P2/3	•
TWINGO	•
TWINGO II	•
TWINGO PHASE 2	•
WIND	•
BLD Function List	
Bleed Hydraulic Unit And Braking Circuits	
Bleeding The Braking System	

● : Compatible
 * : Peut être compatible en fonction de l'état du véhicule
 ○ : N'est pas compatible
 ▲ : Nouvelle compatibilité sur ce modèle

Model	BMS
CAPTUR/KAPTUR BR/IN/RU	•
CLIO II PH6	
DUSTER	
DUSTER PH3	
KANGOO	
KANGOO VLL	
KANGOO ZE/STOPSTART/PH2	
LAGUNA III	
LOGAN	\bullet
LOGAN II/SANDERO II	\bullet
MASTER III	
MASTER PH 3	
MEGANE III/SCENIC III	
MEGANE IV	
NEW SM3/FLUENCE/MEGANE	\bullet
SANDERO	•
SCENIC IV	•
THALIA/SYMB.2	•
TWINGO III	•
TWIZY	•
ХЈА	•
ZOE	•
BMS	5 Function List
Autonomy Battery	
Battery Corrosion Counter	
Calculate Battery Wear Counters	
Corrosion Battery Counter Memorised	
Corrosion Battery Counter Estimated	
Battery Cycle Counter Memorised	
Battery Cycle Counter Estimated	
Battery Cycle Counter	
Timed + Batt	
100 Ah Traction Battery	
Change Battery Compartment	
Battery Filling Reinitialisation	
Internal Battery	
Traction Battery Relay	

iCarsoft France - Compatibilité Renault - FAP

• : Compatible * : Peut être compatible en fonction de l'état du véhicule

N'est pas compatible
 Nouvelle compatibilité sur ce modèle

Model	DPF
ALASKAN	DI F
ALAORAN AVANTIME	
CAPTUR/KAPTUR BR/IN/RU	
CAPTUR/QM3/KABIN	
CLIO III	
CLIO IV	
DOKKER	
DUSTER	
DUSTER PH2	
DUSTER PH3	
ESPACE IV	
ESPACE IV PH2/3/4	
ESPACE V	
KADJAR	
KANGOO II	
KANGOO ZE/STOPSTART/PH2	
KANGOO ZE/STOFSTART/FHZ KOLEOS II/QM6	•
KOLEOS/QM5	•
LAGUNA	•
LAGUNA II	•
LAGUNA II LAGUNA II PH2	•
LAGUNA II III	
LAUTA III LATITUDE/SM5	
LODGY	
LOGAN	
LOGAN II/SANDERO II	
MASTER III	
MASTER PH 3	
MEGANE II	
MEGANE III/SCENIC III	
MEGANE IV	
MEGANE IV SEDAN	
MODUS	
NEW SM3/FLUENCE/MEGANE	
SANDERO	
SCENIC II	•
SCENIC IV	l i
TALISMAN/SM6	•
TRAFIC II P2/3	•
TRAFIC III	•
TWINGO II	•
VEL SATIS	•
VEL SATIS PH2	•
XJA	•
DPF Function List	
Particle Filter Pressure Diff. Sensor	
Adaptives After Replacing Cabin Filter	
Cabin Filter Regeneration	
Particle Filter Relative Pressure Sensor	
Adaptives After Regenerating Particle Filter	
Particle Filter Adaptives	
Particle Filter	
Particle Filter Regeneration	
Tar erere Tireer Rependitation	

• : Compatible * : Peut être compatible en fonction de l'état du véhicule • : N'est pas compatible

▲ : Nouvelle compatibilité sur ce modèle

Model	EPB
ALPINE A110	
ESPACE IV	
ESPACE IV PH2/3/4	\bullet
ESPACE V	•
KADJAR	•
KADJAR CN	•
KOLEOS II CN/QM6 CN	•
KOLEOS II/QM6	•
KOLEOS/QM5	•
LAGUNA II PH2	•
LAGUNA III	•
LATITUDE/SM5	•
MEGANE III/SCENIC III	•
MEGANE IV	•
MEGANE IV SEDAN	•
NEW SM3/FLUENCE/MEGANE	•
SCENIC II	•
SCENIC IV	•
SM7 - L47	•
TALISMAN/SM6	•
VEL SATIS	•
VEL SATIS PH2	•
ХЈА	
EPB Function List	
Electrical Paking Brake Apply and Release	

• : Compatible

* : Peut être compatible en fonction de l'état du véhicule

N'est pas compatible
 Nouvelle compatibilité sur ce modèle

Model	ETC
ALPINE A110	•
CAPTUR/KAPTUR BR/IN/RU	•
CAPTUR/QM3/KABIN	•
CLIO II PH6	•
CLIO III	•
CLIO IV	
DOKKER	
DUSTER	\bullet
DUSTER PH2	\bullet
DUSTER PH3	\bullet
ESPACE V	\bullet
KADJAR	\bullet
KADJAR CN	\bullet
KANGOO II	\bullet
KANGOO VLL	\bullet
KANGOO ZE/STOPSTART/PH2	•
KOLEOS II CN/QM6 CN	\bullet
KOLEOS II/QM6	\bullet
KWID	\bullet
KWID BR	\bullet
LAGUNA III	\bullet
LATITUDE/SM5	\bullet
LODGY	\bullet
LOGAN	•
LOGAN II/SANDERO II	•
MEGANE III/SCENIC III	\bullet
MEGANE IV	\bullet
MEGANE IV SEDAN	•
MODUS	•
NEW SM3/FLUENCE/MEGANE	•
SANDERO	•
SCENIC IV	•
TALISMAN/SM6	•
THALIA/SYMB.2	•
TWINGO II	•
TWINGO III	•
ХЈА	\bullet
ETC Function List	
Programming Throttle Limits	

• : Compatible * : Peut être compatible en fonction de l'état du véhicule

• : N'est pas compatible

▲ : Nouvelle compatibilité sur ce modèle

Model	INJ
ALASKAN	
ALPINE	•
AVANTIME	•
CAPTUR/KAPTUR BR/IN/RU	
CAPTUR/QM3/KABIN	
CLIO	•
CLIO 2	•
CLIO II P2/3/4	
CLIO III	
CLIO IV	•
DOKKER	
DUSTER	
DUSTER PH2	
DUSTER PH3	•
ESPACE ESPACE IV	
ESPACE IV PH2/3/4	
ESPACE V	
EXTRA	
KADJAR	•
KADJAR CN	•
KANGOO	•
KANGOO II	
KANGOO MUX	
KANGOO ZE/STOPSTART/PH2	
KOLEOS II/QM6	•
KOLEOS/QM5	
LAGUNA	•
LAGUNA II PH2	
LAGUNA III	•
LAGUNA PHASE 2	
LATITUDE/SM5	
LODGY LOGAN	
LOGAN LOGAN II/SANDERO II	
MASTER	
MASTER III	•
MASTER PH 2	•
MASTER PH 3	
MASTER RWD	•
MASTER RWD PH2	
MASTER RWD PH3	•
MEGANE II	•
MEGANE III/SCENIC III	
MEGANE IV	•
MEGANE IV SEDAN	•
MEGANE/SCENIC	•
MODUS	•
NEW SM3/FLUENCE/MEGANE	
R19 P21/SAVANNA	
R21/SAVANNA R25	
KZƏ SAFRANE	•
SARRANE SANDERO	
SERVERO	
SCENIC IV	
SPIDER	•
SUPER 5	•
0 0 1 DA 0	

TALISMAN/SM6	\bullet
THALIA/SYMB.2	
THALIA/SYMBL	
TRAFIC	\bullet
TRAFIC II	
TRAFIC II P2/3	
TRAFIC III	
TWINGO	
TWINGO II	
VEL SATIS	
VEL SATIS PH2	
XJA	
	INJ Function List
Injector Adaptives	
Cylinder Injector Code	
Injection Pump Adaptatives	
Fuel Pump Programming	
Injector Adaptives No 1,2,3,4	
Enter Injector Codes	
Enter Injector Calibration Data	

▲ : Nouvelle compatibilité sur ce modèle

Model	OIL
ALPINE A110	•
CLIO 2	•
CLIO III	•
DUSTER PH3	
ESPACE	
ESPACE IV	
ESPACE IV PH2/3/4	
ESPACE V	
KADJAR	
KADJAR CN	
KANGOO II	
KANGOO ZE/STOPSTART/PH2	
KOLEOS II CN/QM6 CN	
KOLEOS II/QM6	
KOLEOS/QM5	•
LAGUNA	•
LAGUNA II	•
LAGUNA II PH2	
LAGUNA III	
LAGUNA PHASE 2	
LATITUDE/SM5	
MASTER III	
MASTER RWD PH2	
MEGANE II	•
MEGANE III/SCENIC III	•
MEGANE IV	•
MEGANE IV SEDAN	•
MODUS	•
NEW SM3/FLUENCE/MEGANE	•
SCENIC II	•
SCENIC IV	•
SM7 - L47	
TALISMAN/SM6	
THALIA/SYMBL	•
TRAFIC II P2/3	
TWINGO II	•
TWINGO III	•
VEL SATIS	•
VEL SATIS PH2	•
0	IL Function List
Distance Before Next Oil Change	
Oil Change Interval In Km	
Oil Change Range: Current Value In Km	
Oil Change Interval In Months	
Oil Change Range:current Value In Months	
0il Change Interval In Miles	
0il Change Range:current Value In Miles	

Personalised Oil Change Frequency Distance Before Next Oil Change Configuration

iCarsoft France - Compatibilité Renault - SAS

Compatible * : Peut être compatible en fonction de l'état du véhicule ○ : N'est pas compatible ▲ : Nouvelle compatibilité sur ce modèle

Mode1	SAS
ALPINE A110	•
AVANTIME	•
CAPTUR/KAPTUR BR/IN/RU	•
CAPTUR/QM3/KABIN	•
CLIO II P2/3/4	
CLIO III	
CLIO IV	
DOKKER	
DUSTER PH2	
DUSTER PH3	
ESPACE IV	
ESPACE IV PH2/3/4	•
ESPACE V	
KADJAR	
KADJAR CN	
KANGOO II	
KANGOO ZE/STOPSTART/PH2	
KOLEOS II CN/QM6 CN	
KOLEOS II CN/QM6 CN KOLEOS II/QM6	
KOLEOS 11/ WIO KOLEOS/QM5	
LAGUNA III LATITUDE/SM5	
LODGY	
LOGAN II/SANDERO II	
MASTER III	
MASTER PH 3	
MEGANE II	
MEGANE III/SCENIC III	
MEGANE IV	
MEGANE IV SEDAN MEGANE/SCENIC	
MODUS	
NEW SM3/FLUENCE/MEGANE	
SCENIC II	
SCENIC II SCENIC IV	
SUPER 147	
TALISMAN/SM6	•
TRAFIC II P2/3	
TRAFIC III	•
TWINGO II	•
TWINGO III	•
VEL SATIS	•
VEL SATIS VEL SATIS PH2	•
WIND	•
XJA	•
ZOE	•
SAS Function List	
Steering Wheel Angle Offset Sensor	
Steering Wheel Angle Sensor Programming	
Steering Wheel Angle Sensor Steering Angle Sensor Initialisation	
Steering Angle Sensor Initialisation Steering Angle Offset	
Steatting vingte offset	

• : Compatible
 * : Peut être compatible en fonction de l'état du véhicule
 ○ : N'est pas compatible
 ▲ : Nouvelle compatibilité sur ce modèle

Model	ТРМ
AVANTIME	•
CLIO III	
ESPACE IV	\bullet
ESPACE IV PH2/3/4	\bullet
ESPACE V	\bullet
KADJAR CN	\bullet
KOLEOS II CN/QM6 CN	\bullet
KOLEOS II/QM6	•
KOLEOS/QM5	•
LAGUNA	•
LAGUNA II	\bullet
LAGUNA II PH2	•
LAGUNA III	•
LATITUDE/SM5	•
MEGANE II	•
MEGANE III/SCENIC III	•
MEGANE IV	•
MEGANE IV SEDAN	\bullet
MODUS	•
NEW SM3/FLUENCE/MEGANE	•
SCENIC II	\bullet
SCENIC IV	\bullet
SM7 - L47	•
TALISMAN/SM6	•
VEL SATIS	\bullet
VEL SATIS PH2	\bullet
TPM Function List	
Enter Recommended Pressures	
Programming A Valve Code	
Programming The Codes Of The Four Valves	
Read Valve Set And Memorised Codes	