CITROEN Diagnostic Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.▲ This function is the new feature

▲ This function is the new feature in this version.										
Mode1	Model Type	System Name	EcuInfo	Read Codes	Erase Codes	LiveData	Act			
BERLINGO	BERLINGO (1) (1996 - 2002)	ABS (ABS Electronic Distribution)	•	•	•	•	•			
BERLINGO	BERLINGO (1) (1996 - 2002)	CD (CD Player)	•	•	•	•	•			
BERLINGO	BERLINGO (1) (1996 - 2002)	ECM (Engine Control Module)	•	•	•	•	•			
BERLINGO	BERLINGO (1) (1996 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•			
BERLINGO	BERLINGO (1) (1996 - 2002)	RADIO1 (Radio Post-equipment(Autoradio 1))	•	•	•	•	•			
BERLINGO	BERLINGO (1) (1996 - 2002)	SRS (Autoliv/(SAC_AKF) Airbag)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	ABS (Anti-lock brake System)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	AH (Additional Heating(Chauff-add))	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	Alarm(Alarme_texton)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	BSI (Built-in Systems Interface)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	CD (CD Player(Changer-cd))	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	ECM (Engine Control Module)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	IP (Instrument Cluster Panel)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	PAM (Parking Assistance)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	RADIO2 (Radio Post-equipment(Autoradio 2))	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	RBS (Rain And Brightness Sensor(Pluie_luminosite))	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	SM (Services Module)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag 5.3)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (2002 - 2008)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•			
BERLINGO	BERLINGO (2) (M69)	ABS (Anti-lock brake System)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (M69)	BSI (Built-in Systems Interface)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (M69)	ECM (Engine Control Module)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (M69)	IP (Instrument Cluster Panel)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (M69)	SRS (Airbag)	•	•	•	•	•			
BERLINGO	BERLINGO (2) (M69)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	ABS (Anti-lock brake System)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	AC (AIR Conditioning Compressor)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	Alarm	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT (Battery Change Status Unit)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT (Traction Battery ECU)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BSI (Built-in Systems Interface)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	CD (CD Player)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	ECM (Engine Control Module)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	EMM (Electric Machine Management ECU)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	ERU (Engine Relay Unit)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	HFC (Hands Free Control Kit)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	HFR (High Frequency Receiver)	•	•	•	•	•			
BERLINGO	BERLINGO (B9)	IP (Instrument Cluster Panel)	•	•	•	•	•			

BERLINGO	BERLINGO (B9)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	Radio	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	AC (AIR Conditioning Compressor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Alarm	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Battery Change Status Unit)		•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Traction Battery ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-01 (Traction Battery Cells Management (Module 01))	•		•	•	
BERLINGO	BERLINGO Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 01))			•	$\overline{\cdot}$	•
BERLINGO	BERLINGO Electric (B9E)	BATT-03 (Traction Battery Cells Management (Module 03))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-04 (Traction Battery Cells Management (Module 04))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-05 (Traction Battery Cells Management (Module 05))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-07 (Traction Battery Cells Management (Module 07))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-08 (Traction Battery Cells Management (Module 08))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-09 (Traction Battery Cells Management (Module 09))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-10 (Traction Battery Cells Management (Module 10))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	CD (CD Player)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EMM (Electric Machine Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ERU (Engine Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	HFC (Hands Free Control Kit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	HFR (High Frequency Receiver)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Radio	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
C-CROSSER		ABS (Anti-lock brake System)	•	•	•	•	•
C-CROSSER		AC (Air Conditioning)	•	•	•	•	•
C-CROSSER		AFS	•	•	•	•	•
C-CROSSER		BSI (Built-in Systems Interface)	•	•	•	•	•
C-CROSSER		DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C-CROSSER		DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
C-CROSSER		DSPRRH (Rear RH Door Switch Panel)	•	•	•	•	•
	•	•	•				

C-CROSSER		ECM (Engine Control Module)	•	•	•	•	•
C-CROSSER		HFC (Hands Free Control Kit)	•	•	•	•	•
C-CROSSER		IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C-CROSSER		IP (Instrument Cluster Panel)	•	•	•	•	•
C-CROSSER		KEY (Electrionic Key Reader)	•	•	•	•	•
C-CROSSER		NAVI (Navigation)	•	•	•	•	•
C-CROSSER		PAM (Parking Assistance)	•	•	•	•	•
C-CROSSER		PDPC	•	•	•	•	•
C-CROSSER		PDPP	•	•	•	•	•
C-CROSSER		RBS (Rain And Brightness Sensor)	•	•	•	•	•
C-CROSSER		Radio	•	•	•	•	•
C-CROSSER		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C-CROSSER		SRS (Airbag)	•	•	•	•	•
C-CROSSER		Sunroof	•	•	•	•	•
C-CROSSER		TCM (Automatic Gearbox)	•	•	•	•	•
C-CROSSER		TCM (Gear Lever(Dct))	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	BSI (Built-in Systems Interface)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	CLC (Central Locking Control Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ECM (Engine Control Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	EPS (Electric Power Steering)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ESL (Electric Steering Lock)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	IP (Instrument Cluster Panel)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	KEY (Electrionic Key Reader)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	MAP (Multiplexed Addition Pump)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	MULS (Multifunction Screen)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	PAM (Parking Assistance)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	Radio	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SM (Services Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SRS (Airbag) CRS (Autalia Control Airbag)	•	•	•	•	
C-ELYSEE	C-ELYSEE	SRS (Autoliv Central Airbag)	•	•	•	•	
C-ELYSEE	C-ELYSEE	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	
C-ELYSEE C-ELYSEE	C-ELYSEE C-ELYSEE	Siren TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	·	•	•	•	•	
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox) TRU (Trailer Relay Unit)	•	•	•	-	_
C-ELYSEE	C-ELYSEE	VRD (Voltage Retaining Device)	•	•	•	•	-
C-ELYSEE	C-ELYSEE (R3)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	CLC (Central Locking Control Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	ECM (Engine Control Module)	•	•	•	•	
C-ELYSEE	C-ELYSEE (R3)	KEY (Electrionic Key Reader)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	SRS (Airbag)	•	•	•	•	
C-ELYSEE	C-ELYSEE (R3)	SRS (Autoliv Central Airbag)	•	•	•	•	
C-ELYSEE	C-ELYSEE (R3)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ABS (Anti-lock brake System)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	AC (Air Conditioning)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ALM (Anti-theft Alarm)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	BSI (Built-in Systems Interface)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	CD (CD Player)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	DDM (Driver's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ECM (Engine Control Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	EPS (Electric Power Steering)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ERU (Engine Relay Unit)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	HFC (Hands Free Control Kit)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	IP (Instrument Cluster Panel)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	MULS (Multifunction Screen)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	PAM (Parking Assistance)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	PDM (Passenger's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	Radio	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	SRS (Airbag)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
						· ·	

C-QUATRE C-QUATRE (4) ICM (Automatic Gearbox AL4)		• • • • • • • • • • • • • • • • • • •	•	•	
C-QUATRE		•	•	•	•
C-QUATRE C-QUATRE (5) ALM (Anti-theft Alarm) C-QUATRE C-QUATRE (5) ALM (Anti-theft Alarm) C-QUATRE C-QUATRE (5) BSI (Built-in Systems Interface) C-QUATRE C-QUATRE (5) EEM (Engine Control Module) C-QUATRE C-QUATRE (5) EFS (Electric Power Steering) EFS (Electric		•	•	•	•
C-QUATRE C-QUATRE C5 ALM (Anti-theft Alarm) C-QUATRE C-QUATRE C5 BSI (Built-in Systems Interface) C-QUATRE C-QUATRE C5 CD (CD Player) C-QUATRE C-QUATRE C5 DDM (Driver's Door Module) C-QUATRE C-QUATRE C5 ECM (Engine Control Module) C-QUATRE C-QUATRE C5 EFW (Engine Relay Unit) C-QUATRE C-QUATRE C5 ERU (Engine Relay Unit) C-QUATRE C-QUATRE C5 EFW (Engine Control Module) C-QUATRE C-QUATRE C5 EFW (Engine		•	•	•	•
C-QUATRE C-QUATRE (5) BSI (Built-in Systems Interface) C-QUATRE C-QUATRE (5) CD (CD Player) C-QUATRE C-QUATRE (5) DDM (Driver's Door Module) C-QUATRE C-QUATRE (5) ECM (Engine Control Module) C-QUATRE C-QUATRE (5) EPS (Electric Power Steering) C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) RRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox ALA) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CD (CD (CD Player)		•	•	•	•
C-QUATRE C-QUATRE (5) CD (CD Player) C-QUATRE C-QUATRE (5) DDM (Driver's Door Module) C-QUATRE C-QUATRE (5) ECM (Engine Control Module) C-QUATRE C-QUATRE (5) EPS (Electric Power Steering) C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) ERU (Engine Courted Source) ERU (Engine Accounted Source) ERU (Engine Accounted Source) ERU (Engine Accounted Source) ERU (Engine Accounted Source) ERU (Engine Eru (Engine Electric Stability Program) ERU (Engine Electric Stability Engine Electric Stabi		•	•	•	•
C-QUATRE C-QUATRE (5) DDM (Driver's Door Module) C-QUATRE C-QUATRE (5) ECM (Engine Control Module) C-QUATRE C-QUATRE (5) EPS (Electric Power Steering) C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox ALA) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)		•	•	•	•
C-QUATRE C-QUATRE (5) ECM (Engine Control Module) C-QUATRE C-QUATRE (5) EPS (Electric Power Steering) C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox ALA) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CDUATRE CDUATRE (5) CD (CD Player)		•	•	•	•
C-QUATRE C-QUATRE (5) EPS (Electric Power Steering) C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RSS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)		•	•	•	•
C-QUATRE C-QUATRE (5) EPS (Electric Power Steering) C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RSS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)		•	•	•	•
C-QUATRE C-QUATRE (5) ERU (Engine Relay Unit) C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)		•	•	•	
C-QUATRE C-QUATRE (5) HFC (Hands Free Control Kit) C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox ALA) C-QUATRE C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) AC (Air Conditioning) C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE C-TRIOMPHE CD (CD Player)		•	•		•
C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CD (CD Player)		•	•	_	
C-QUATRE C-QUATRE (5) MULS (Multifunction Screen) C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE AC (Air Conditioning) C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CD (CD Player)		•		•	•
C-QUATRE C-QUATRE (5) PAM (Parking Assistance) C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE COD (CD Player)		•		•	•
C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPH			•	•	•
C-QUATRE C-QUATRE (5) RBS (Rain And Brightness Sensor) C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CD (CD Player)			•	•	•
C-QUATRE C-QUATRE (5) Radio C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CD (CD Player)	• •	•	•	•	•
C-QUATRE C-QUATRE (5) SRS (Airbag) C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CC-TRIOMPHE CC-TRIOM	•	•	•	•	•
C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls) C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE AC (Air Conditioning) C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE C-TRIOMPHE CC-TRIOMPHE CC-T					
C-QUATRE C-QUATRE (5) TCM (Automatic Gearbox AL4) C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)	-	•	•	•	•
C-QUATRE C-QUATRE (5) TEU (Telematics Unit RT4) C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE AC (Air Conditioning) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)				_	
C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) C-TRIOMPHE AC (Air Conditioning) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)	_	•	•	•	•
C-TRIOMPHE AC (Air Conditioning) C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)	-	•	•	•	•
C-TRIOMPHE Alarm C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)	_	•	•	•	•
C-TRIOMPHE BSI (Built-in Systems Interface) C-TRIOMPHE CD (CD Player)	-	•	•	•	•
C-TRIOMPHE CD (CD Player)	-	•	•	•	•
	_	•	•	•	•
C-TRIOMPHE DDM (Driver's Door Module)	-	•	•	•	•
		•	•	•	•
C-TRIOMPHE DHL (Directional Headlamps)		•	•	•	•
C-TRIOMPHE ECM (Engine Control Module)		•	•	•	•
C-TRIOMPHE EPS (Electric Power Steering)		•	•	•	•
C-TRIOMPHE ERU (Engine Relay Unit)		•	•	•	•
C-TRIOMPHE HFC (Hands Free Control Kit)		•	•	•	•
C-TRIOMPHE IP (Instrument Cluster Panel)		•	•	•	•
C-TRIOMPHE MULD (Multifunction Display C)		•	•	•	•
C-TRIOMPHE PAM (Parking Assistance)		•	•	•	•
C-TRIOMPHE PDM (Passenger's Door Module)		•	•	•	•
C-TRIOMPHE RLS (Rain And Light Sensor)		•	•	•	•
C-TRIOMPHE Radio		•	•	•	•
C-TRIOMPHE SRS (Airbag)		•	•	•	•
C-TRIOMPHE SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C-TRIOMPHE TCM (Automatic Gearbox)		•	•	•	•
C-TRIOMPHE TEU (Telematics Unit RT3)		•	•	•	•
C-TRIOMPHE TRU (Trailer Relay Unit)	•	•	•	•	•
C-ZERO ABS (Anti-lock brake System)	•	•	•	•	•
C-ZERO AC (Air Conditioning)		•	•	•	•
C-ZERO BATT (Onboard Charger Of The Traction Battery)	,	•	•	•	•
C-ZERO BATT (Traction Battery ECU)	•	•	•	•	•
C-ZERO BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
C-ZERO BATT-02 (Traction Battery Cells Management (Module 02))	,	•	•	•	•
C-ZERO BATT-03 (Traction Battery Cells Management (Module 03))	,	•	•	•	•
C-ZERO BATT-04 (Traction Battery Cells Management (Module 04))	,	•	•	•	•
C-ZERO BATT-05 (Traction Battery Cells Management (Module 05))	-	•	•	•	•
C-ZERO BATT-07 (Traction Battery Cells Management (Module 07))	-	•	•	•	•
C-ZERO BATT-08 (Traction Battery Cells Management (Module 08))	_	•	•	•	•
C-ZERO BATT-09 (Traction Battery Cells Management (Module 09))		•	•	•	•
C-ZERO BATT-10 (Traction Battery Cells Management (Module 10))	-	•	•	•	•
C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) BATT-11 (Traction Battery Cells Management (Module 11))	-	•	$\overline{\cdot}$	•	
C-ZERO DVT (Direct Voltage (DC/DC) Transformer)	-	•	•	•	•
	+	•	•	•	
C-ZERO EPS (Electric Power Steering) C-ZERO EVM (Electric Vehicle Management ECU)	T	•	•	•	•
C-ZERO EVM (Electric Vehicle Management ECU)	-	•			

C-ZERO		GWH (Gateway Wiring Housing)	•	•	•	•	•
C-ZERO		IP (Instrument Cluster Panel)	•	•	•	•	•
C-ZERO		Radio	•	•	•	•	•
C-ZERO		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C-ZERO		SM (Services Module)	•	•	•	•	•
C-ZERO		SRS (Airbag)	•	•	•	•	•
C1	C1 (B0)	ABS (Anti-lock brake System)	•	•	•	•	•
C1	C1 (B0)	ECM (Engine Control Module)	•	•	•	•	•
C1	C1 (B0)	EPS (Electric Power Steering)	•	•	•	•	•
C1	C1 (B0)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C1	C1 (B0)	Radio	•	•	•	•	•
C1	C1 (B0)	SRS (Airbag)	•	•	•	•	•
C1	C1 (B0)	TCM (Automatic Gearbox)	•		•	$\overline{\cdot}$	•
C1	C1 (B4)	ABS (Anti-lock brake System)	•		•	•	-
C1	C1 (B4)	AC (Air Conditioning)	•	•	•	_	_
		-	•	•	•	•	
C1	C1 (B4)	ECM (Engine Control Module)	_	•			
C1	C1 (B4)	EPS (Electric Power Steering) IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access	•	_	•	•	•
C1	C1 (B4)	Electric Module)	•	•	•	•	•
C1	C1 (B4)	IP (Instrument Cluster Panel)	•	•	•	•	•
C1	C1 (B4)	MULC/RD (Multifunction Video Camera And Remote Detection By	•	•	•	•	•
C1	C1 (B4)	Laser Assembly) MULS (Multifunction Screen)	•	•	•	•	•
C1	C1 (B4)	SRS (Airbag)	•		•	$\overline{\cdot}$	•
C1	C1 (B4)	SSC (Stop And Start Control ECU)	•	•	•	•	•
C1	C1 (B4)	TCM (Automatic Gearbox)	•	•	•	•	•
C15	C1 (B1)	ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	ABS (Anti-lock brake System)	•	•	•	$\overline{\cdot}$	•
	C2 (CAN) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	Alarm	•	•	•	•	•
C2	C2 (CAN) (2006 -)		•		•	$\overline{\cdot}$	-
C2 C2	C2 (CAN) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	-	•
C2	C2 (CAN) (2006 -)	CD (CD Player) ECM (Engine Control Module)	•	•	•	•	-
C2	C2 (CAN) (2006 -)	EPS (Electric Power Steering)	•		•	$\overline{\cdot}$	-
C2	C2 (CAN) (2006 -)	ERU (Engine Relay Unit)	•		•	$\overline{}$	-
	, , , , , ,					_	_
		HFC (Hands Free Control Kit)		•	-	_	_
C2	C2 (CAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	
C2	C2 (CAN) (2006 -) C2 (CAN) (2006 -)	MULS (Multifunction Screen C)	•	•			
C2		PAM (Parking Assistance)	_	_	•	•	
C2	C2 (CAN) (2006 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	Radio	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SRS (Airbag)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SSC (ECU Reversible Stopstart Alternator)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	TEU (Telematics Unit RT4)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C2	C2 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
	C2 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2	C2 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C2	C2 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C2	C2 (CHINA)	SRS (Airbag)	•	•	•	•	•
	C2 (CHINA)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
	C2 (CHINA)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	ABS (Anti-lock brake System TEVES MK70)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	Alarm	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	CD (CD Player)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	EPS (Electric Power Steering)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	ESP (Electronic Stability Program TEVES MK60)	•	•	•	•	•
				_	_	_	-

3 3 3 3 3 3 3 3 3 3								
2 10 10 10 10 10 10 10	C2	C2 (VAN) (2003 - 2006)	IP (Instrument Cluster Panel)		•	•	•	•
2				+				
Carrier Carr				+ -				
102 102				<u> </u>	<u> </u>			
Column C								
2 1906 1909 1909 190				+				
12 15 15 15 15 15 15 15				+				
C C C C C C C C C C				+				
32 3002 2005				+			_	
C C C C C C C C C C			,	+ -	<u> </u>			
Column	-	· ·		+			_	
C 1992 - 2000							_	-
Care				+ -				
C 1992 - 2000 O 1992 O O O O O O O O O								
Col. Color 2000				+				
Col.				+ -			_	
California Cal		·		+				
California Cal				+				
C3				_				
Care				+			_	
State	C3			+				
C3 C3 C3 C3 C3 C3 C3 C3	C3			+ <u>*</u>				
Color Colo	C3			+			_	
STATE Company Compan	C3			+ -				
C3	C3			•				— <u> </u>
G G G G G G G G G G G G G G G G G G G	C3			•			•	•
C3	C3		EPS (Electric Power Steering)	•	•	•	•	•
C3 C3 C3002 C3000 FFC (Blands Free Control Kit)	C3	·		•	•	•	•	•
C3	C3	C3 (2002 - 2006)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3	C3 (2002 – 2006)	HFC (Hands free Control Unit)	•	•	•	•	•
C3	C3	C3 (2002 – 2006)	HFR (High Frequency Receiver)	•	•	•	•	•
C3 (2002 - 2006) REY (Electrionic Key Render)	C3	C3 (2002 – 2006)	HHV (High Head Vision)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3		·	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MULS (Multifunction Screen A)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	PAM (Parking Assistance)	•	•	•	•	•
C3 C3 (2002 - 2006) Radio ● <td>C3</td> <td>C3 (2002 - 2006)</td> <td>RBS (Rain And Brightness Sensor)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C3	C3 (2002 - 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3 C3 (2002 - 2006) SB (Seat Belts Not Fastened LED Unit) ●	C3	C3 (2002 - 2006)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	Radio	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C3 C3 (2002 - 2006) SRS (SAC TEMIC) • • • • • • • • • • • • • • • • • • •	C3	C3 (2002 - 2006)	SM (Services Module)	•	•	•	•	•
C3 C3 (2002 - 2006) SRS (SAC TEMIC) • • • • • • • • • • • • • • • • • • •	C3	C3 (2002 - 2006)	SRS (Airbag)	•	•	•	•	•
C3	C3	C3 (2002 - 2006)		•	•	•	•	•
C3 C3 (2002 - 2006) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● ● ● C3 C3 (2002 - 2006) SWSM (Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (2002 - 2006) SWSM (Switch Module Under The Steering Wheel (Top Of Column)) ● ● ● ● C3 C3 (2002 - 2006) Siren ● ● ● ● ● C3 C3 (2002 - 2006) TCM (Automatic Gearbox) ● ● ● ● ● C3 C3 (2002 - 2006) TCM (Controlled Manual Gearbox ECU) ● ● ● ● ● C3 C3 (2002 - 2006) TEU (Telematics Unit Independent) ● ● ● ● ● C3 C3 (2002 - 2006) TEU (Telematics Unit RT3) ● ● ● ● ● C3 C3 (2002 - 2006) TEU (Telematics Unit RT5) ● ● ● ● C3 C3 (2002 - 2006) TEU (Telematics Unit RT5) ● ● ● ●	C3			•	•	•	•	•
C3 (2002 - 2006) SWSM (Switch Module At The Steering Wheel)	C3			•	•	•	•	•
C3 (2002 - 2006) SWSM(Switch Module Under The Steering Wheel(Top Of Column))	C3	· ·		•	•		•	•
C3	C3	·		•	•	•	•	•
C3	C3	·		+				
C3 (2002 - 2006) TCM (Controlled Manual Gearbox ECU)	C3			+				
C3	C3			+				
C3		·		+				
C3	C3			+ -				
C3 (2002 - 2006) TEU (Telematics Unit) • • • • •	C3	· · · · · · · · · · · · · · · · · · ·		+ -				
	C3			+ -			_	
Into (ituation nota) onto)				1 -				
		<u>'</u>	, ,	1 -		-	-	

C3	C3 (2002 – 2006)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (A51)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (A51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (A51)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (A51)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (A51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (A51)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (A51)	DSM (Driver's School Module)	•	•	•	•	•
C3	C3 (A51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (A51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (A51)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (A51)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (A51)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (A51)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (A51)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (A51)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (A51)	PAM (Parking Assistance)	•		•	•	
			•	•	•	•	-
C3	C3 (A51)	RBS (Rain And Brightness Sensor)		•	•	•	
C3	C3 (A51)	Radio SB (Seat Belts Reminder LED)	•	•	•	•	
C3	C3 (A51)		_	•			
C3	C3 (A51)	SM (Services Module)	•	_	•	•	
C3	C3 (A51)	SRS (Airbag)	•	•	•	•	•
	C3 (A51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (A51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (A51)	TEU (Telematics Unit Independent)	•	•	•	•	•
C3	C3 (A51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (A51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (A51)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	CD (External CD Player)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	Display	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	HHV (High Head Vision)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SM (Services Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	Siren	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	Alarm	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	IP (Instrument Cluster Panel)	•	•	•	•	•
	C3 (AIRCROSS) (Ai58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
			•				

C3	C3 (AIRCROSS) (Ai58)	Radio	•	•	•	•	•
	C3 (AIRCROSS) (Ai58)	SM (Services Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SRS (Airbag)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (Ai51)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (Ai51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (Ai51)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (Ai51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (Ai51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (Ai51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (Ai51)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (Ai51)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (Ai51)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	•
C3	C3 (Ai51)	Radio	•	•	•	•	•
C3	C3 (Ai51)	SM (Services Module)	•	•	•	•	•
C3	C3 (Ai51)	SRS (Airbag)	•	•	•	•	•
C3	C3 (Ai51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (Ai51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (Ai51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (Ai51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (B618)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (B618)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (B618)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (B618)	CD (External CD Player)	•	•	•	•	•
C3	C3 (B618)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (B618)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (B618)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (B618)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (B618)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (B618)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (B618)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (B618)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (B618)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (B618)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (B618)	SM (Services Module)	•	•	•	•	•
C3	C3 (B618)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (B618)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
С3	C3 (B618)	Siren	•	•	•	•	•
С3	C3 (B618)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (B618)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	MULS (Multifunction Screen)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	RBS (Rain And Brightness Sensor)	•	•	•	•	•

C3	C3 (PICASSO) (A58)	Radio	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SM (Services Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SRS (Airbag)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (PICASSO) (A58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PICASSO) (A158)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PICASSO) (A158)	ALM (Anti-theft Alarm)		•	•	•	
C3	C3 (PICASSO) (A158)	BSI (Built-in Systems Interface)		•	•	•	
C3	C3 (PICASSO) (A158)	ECM (Engine Control Module)	•	•	•	•	
	C3 (PICASSO) (A158)			•	•	•	
C3		EPS (Electric Power Steering)	<u> </u>				_
C3	C3 (PICASSO) (A:58)	IP (Instrument Cluster Panel)	•	H-	•	•	•
C3	C3 (PICASSO) (A:58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PICASSO) (A:58)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	Radio	•	•	•	•	•
C3	C3 (PICASSO) (A:58)	SM (Services Module)	•	•	•	•	•
C3	C3 (PICASSO) (A158)	SRS (Airbag)	•	•	•	•	•
C3	C3 (PICASSO) (A158)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	CD (CD Player)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	Radio	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	TEU (Telematics Unit RT5)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	Alarm	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	CD (CD Player)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	MULS (Multifunction Screen A)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	Radio	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	
C3	C3 (R) (2006 – 2009)	TCM (Automatic Gearbox)		•	•	•	•
C3	C3 (R) (2006 – 2009)	TEU (Telematics Unit RT3)	•	•	•	•	•
C3	C3 (XR)	ABS (Anti-lock brake System)	•	•	•	•	
C3	C3 (XR)	ASM (Anti-slip Mode Selector)			-	•	
	647	(Dirk mode solvett)	, -		_		

C3	C3 (XR)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (XR)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (XR)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (XR)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (XR)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (XR)	HFC (Hands free Control Unit)	•	•	•	•	•
C3	C3 (XR)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (XR)	KEY (Electrionic Key Reader)	•	•	•	•	•
C3	C3 (XR)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (XR)	MULS (Multifunction Screen)	•	•	•	•	•
C3	C3 (XR)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (XR)	Radio	•	•	•	•	•
C3	C3 (XR)	SM (Services Module)	•	•	•	•	•
C3	C3 (XR)	SRS (Airbag)	•	•	•	•	•
C3	C3 (XR)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (XR)	SWSM(Switch Module Under The Steering Wheel)	•	•	•	•	•
C3	C3 (XR)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (XR)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (XR)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (2004 - 2010)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (2004 - 2010)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (2004 - 2010)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (2004 - 2010)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (2004 - 2010)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C4	C4 (2004 - 2010)	AUTH (Starting Authorisation ECU)	•	•	•	•	•
C4	C4 (2004 - 2010)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	BCM (Body Control Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (2004 - 2010)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (2004 - 2010)	CD (CD Player)	•	•	•	•	•
C4	C4 (2004 - 2010)	CD (External CD Player)	•	•	•	•	•
C4	C4 (2004 - 2010)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (2004 - 2010)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (2004 - 2010)	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C4	C4 (2004 - 2010)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	Display/Telematics	•	•	•	•	•
C4	C4 (2004 - 2010)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (2004 - 2010)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (2004 - 2010)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (2004 - 2010)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (2004 - 2010)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (2004 - 2010)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (2004 - 2010)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (2004 - 2010)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (2004 - 2010)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	List_VEH_C_C4_SEDAN_	•	•	•	•	•
C4	C4 (2004 - 2010)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (2004 - 2010)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (2004 - 2010)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (2004 - 2010)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (2004 - 2010)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	•	•
C4	C4 (2004 - 2010)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
	C4 (2004 - 2010)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (2004 - 2010)	MULS (Multifunction Screen)	•	•	•	•	•

C4	C4 (2004 - 2010)	NAVI (Navigation)	•	•	•	•	•
C4	C4 (2004 - 2010)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (2004 - 2010)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (2004 - 2010)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	RLS (Rain And Light Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
C4	C4 (2004 - 2010)	Radio	•	•	•	•	•
C4	C4 (2004 - 2010)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (2004 - 2010)	SM (Services Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	SRS (Airbag)	•	•	•	•	•
C4	C4 (2004 - 2010)	SSC (Calculation Stop And Sart)	•	•	•	•	•
C4	C4 (2004 - 2010)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	SWIC (Steering Wheel With Integral Controls (VCI))		•	•	•	
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))		•	•	•	
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	SWSM (Switch Module Under The Steering Wheel)		•	•	•	
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	Swish (Switch module under the Steering wheel)		•	•	•	
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	TCM (Automatic Gearbox)		•	•	•	
C4	C4 (2004 - 2010)	TEU (Telematics Unit SMEG PLUS)		•	•	•	•
	C4 (2004 - 2010)	TEU (Telematics Unit)		•	•	•	•
C4	C4 (2004 - 2010) C4 (2004 - 2010)			•	•	•	
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	TRU (Trailer Relay Unit) TS (Touch Screen)		•	•	•	
				•	•	•	
C4	C4 (2004 - 2010)	UID (Under Inflation Detection(Dsg))		•	•	•	
C4	C4 (2004 - 2010) C4 (2004 - 2010)	VDA (Vehicle Distance Assistance)		•	•	•	
C4		VRD (Voltage Retaining Device)	 •	•	•	•	
C4	C4 (2004 - 2010)	Wiper (Windscreen Wiper)	-		_	_	
C4	C4 (AIRCROSS)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
	C4 (AIRCROSS)	ALM (Anti-theft Alarm)	-	_		•	
	C4 (AIRCROSS)	AUTH (Starting Authorisation ECU)	•	•	•	•	•
C4	C4 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (AIRCROSS)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (ATRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (AIRCROSS)	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C4	C4 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	EPS (Electric Power Steering)	•		•	•	•
C4	C4 (AIRCROSS)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (AIRCROSS)	NAVI (Navigation)	•	•	•	•	•
C4	C4 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (AIRCROSS)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (AIRCROSS)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
C4	C4 (AIRCROSS)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C4	C4 (AIRCROSS)	SRS (Airbag)	•	•	•	•	•
C4	C4 (AIRCROSS)	SSC (Calculation Stop And Sart)	•	•	•	•	•
C4	C4 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (B7) (2010 -)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (B7) (2010 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (B7) (2010 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (B7) (2010 -)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DSM (Driver's School Module)	•	•	•	•	•

C4	C4 (B7) (2010 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	Display/Telematics	•	•	•	•	•
C4	C4 (B7) (2010 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPS (Electric Power Steering Electric Pump Unit)		•	•	•	•
C4	C4 (B7) (2010 -)	ERU (Engine Relay Unit)			•	•	
	C4 (B7) (2010 -)			•	•	•	
C4		ESL (Electric Steering Lock)		•	•	•	•
C4	C4 (B7) (2010 -)	IP (Instrument Cluster Panel)	•				
C4	C4 (B7) (2010 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (B7) (2010 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (B7) (2010 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (B7) (2010 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (B7) (2010 -)	Radio	•	•	•	•	•
C4	C4 (B7) (2010 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (B7) (2010 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (B7) (2010 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (B7) (2010 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (B7) (2010 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
	C4 (BZ3) (CHINA)	ESL (Electric Steering Lock)			-		
C4	C4 (BZ3) (CHINA)		•	•	•	•	
	C4 (BZ3) (CHINA)	HFC (Hands free Control Unit)				•	
C4		IP (Instrument Cluster Panel)	- T	•		_	
C4	C4 (BZ3) (CHINA)	KEY (Electrionic Key Reader)	•		•	•	•
C4	C4 (BZ3) (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	Radio	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SM (Services Module)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SRS (Airbag)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	Siren	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TEU (Telematics Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (CACTUS)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (CACTUS)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (CACTUS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (CACTUS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (CACTUS)	CD (External CD Player)	•	•	•	•	•
C4	C4 (CACTUS)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (CACTUS)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (CACTUS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (CACTUS)	MCP (Multiplexed Control Panel)	•	•	•	•	•
-			-				

C4	C4 (CACTUS)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (CACTUS)	MULS (Multifunction Screen)	•	•	•	•	•
C4	C4 (CACTUS)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (CACTUS)	RLS (Rain And Light Sensor)	•	•	•	•	•
C4	C4 (CACTUS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (CACTUS)	SM (Services Module)	•	•	•	•	•
C4	C4 (CACTUS)	SRS (Airbag)	•	•	•	•	•
C4	C4 (CACTUS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (CACTUS)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
C4	C4 (CACTUS)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (CACTUS)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (CACTUS)	TS (Touch Screen)	 	•	•	•	•
C4	C4 (CACTUS)	VRD (Voltage Retaining Device)	 •	•	•	•	
C4	C4 (L) (B7)	ABS (Anti-lock brake System)	+ -	•	•	•	
C4	C4 (L) (B7)	AC (Air Conditioning)	+ -	•	•	•	
	C4 (L) (B7)		+	•	•	•	
C4	C4 (L) (B7)	ALM (Anti-theft Alarm)	_	•		•	
C4		AMP (Audio Amplifier)	•	•	•		
C4	C4 (L) (B7)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (L) (B7)	BSI (Built-in Systems Interface)	•	H-	•	•	•
C4	C4 (L) (B7)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (L) (B7)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (L) (B7)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (L) (B7)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (L) (B7)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (L) (B7)	Display/Telematics	•	•	•	•	•
C4	C4 (L) (B7)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (L) (B7)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (L) (B7)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (L) (B7)	ERU (Enging Relay Unit)	•	•	•	•	•
C4	C4 (L) (B7)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (L) (B7)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (L) (B7)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (L) (B7)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (L) (B7)	List_VEH_C_C4_SEDAN_	•	•	•	•	•
C4	C4 (L) (B7)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (L) (B7)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (L) (B7)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (L) (B7)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (L) (B7)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (L) (B7)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (L) (B7)	Radio	•	•	•	•	•
C4	C4 (L) (B7)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (L) (B7)	SM (Services Module)	•	•	•	•	•
C4	C4 (L) (B7)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (L) (B7)	SRS (Airbag)	•	•	•	•	•
C4	C4 (L) (B7)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (L) (B7)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (L) (B7)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (L) (B7)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (L) (B7)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (L) (B7)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	BCM (Body Control Module)	•	•	•	•	
C4	C4 (PICASSO) (2006 – 2013)	BSI (Built-in Systems Interface)	 	•	•	•	
C4	C4 (PICASSO) (2006 – 2013)	CD (CD Player)	 	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	CD (External CD Player)	+ -	•	•	•	•
C4 C4	C4 (PICASSO) (2006 – 2013)	DAF (Diesel Additive Function)	 •	•	•	-	
<u> </u>	(.10.000) (.0000 .0010)	(INGLEVIO I GHOVION)	<u>, , , , , , , , , , , , , , , , , , , </u>				

C4	C4 (PICASSO) (2006 - 2013)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Display/Telematics	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	ECM (Engine Control Module)	•	•	•	•	
C4	C4 (PICASSO) (2006 - 2013)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	HFC (Hands free Control Unit)		•	•	•	
C4	C4 (PICASSO) (2006 – 2013)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	IP (Instrument Cluster Panel)	•		•	•	
C4	C4 (PICASSO) (2006 – 2013)	KEY (Electrionic Key Reader)	•		•	•	
	C4 (PICASSO) (2006 – 2013)	·	•		•	•	
C4		LDWS (Lane Departure Warning System)	_				
C4	C4 (PICASSO) (2006 - 2013)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Radio	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SM (Services Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SRS (Airbag)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Siren	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	TEU (Telematics Unit SMEG_PLUS)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	BCM (Body Control Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	CD (External CD Player)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	EPS (Electric Power Steering)	•	•	•	•	
C4	C4 (PICASSO) (B78) (2013 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ESL (Electric Steering Lock)	•		•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	HFC (Hands free Control Unit)	•		•	•	
C4 C4	C4 (PICASSO) (B78) (2013 -)	IP (Instrument Cluster Panel)			-	•	
<u> </u>	(.10,000), (510), (5010)	(_		

C4	C4 (PICASSO) (B78) (2013 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MCP (Multiplexed Control Panel)	 •	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MDAP (Multiplexed Diesel Additive Pump)	۱÷	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Camera Or Multifunction Video Camera)	 •	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)		 •	•	•	•	•
	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Video Camera (CMF))	+ -	•	•	•	-
C4	C4 (PICASSO) (B78) (2013 -) C4 (PICASSO) (B78) (2013 -)	PAM (Parking Assistance) PVA (Panoramic Visual Assistance ECU)	 •	•	•	•	
C4		· ·	+ -	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	RBS (Rain And Brightness Sensor)	•	_		_	
C4	C4 (PICASSO) (B78) (2013 -)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Siren	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TEU (Telematics Unit SMEG_PLUS)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	CD (CD Player)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DSM (Driver's School Module)	•	•	•	•	•
	C4 (SEDAN) (2006 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Display/Telematics	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ECM (Engine Control Module)	 •	•	•	•	
C4	C4 (SEDAN) (2006 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	EPS (Electric Secondary Brake)	 •	•	•	•	•
	C4 (SEDAN) (2006 -)	ERU (Engine Relay Unit)	 •	•	•	•	•
C4	C4 (SEDAN) (2006 -) C4 (SEDAN) (2006 -)	HFC (Hands Free Control Kit)		•	•	•	-
C4			+ -				
C4	C4 (SEDAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Radio	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (2001 - 2004)	ABS (Anti-lock brake System TEVES MK60)	•	•	•	•	•
<u>-</u>							_

C5	C5 (2001 - 2004)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (2001 - 2004)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (2001 - 2004)	ADDG02	•	•	•	•	•
C5	C5 (2001 - 2004)	ADDG03	•	•	•	•	•
C5	C5 (2001 - 2004)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (2001 - 2004)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (2001 – 2004)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (2001 – 2004)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (2001 - 2004)	Alarm	•	•	•	•	•
C5	C5 (2001 – 2004)	BATT (Battery Change Status Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (2001 - 2004)	BHU (Body Height Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (2001 – 2004)	CD (CD Player)	•	•	•	•	•
C5	C5 (2001 – 2004)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (2001 - 2004)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (2001 – 2004)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	Display/Telematics	<u> </u>	•	•	•	•
C5	C5 (2001 - 2004) C5 (2001 - 2004)	ECM (Engine Control Module)		•	•	•	
C5	C5 (2001 – 2004)	EPB (Electric Secondary Brake)		•	•	•	•
C5	C5 (2001 – 2004)	EPS (Electric Power Steering)		•	•	•	•
C5	C5 (2001 - 2004)	ERU (Engine Relay Unit)		•	•	•	
C5	C5 (2001 – 2004)	ESL (Electric Steering Lock)	•	•	•	•	
C5	C5 (2001 – 2004)	ESP (Electronic Stability Program)	•	•	•	•	•
C5	C5 (2001 – 2004)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	C5 (2001 - 2004)			•	•	•	
C5	C5 (2001 – 2004)	HFR (High Frequency Receiver) IP (Instrument Cluster Panel)	-	•	•	•	
C5	C5 (2001 – 2004)			•	•	•	•
C5	C5 (2001 - 2004)	LDWS (Lane Departure Warning System)		•	•	•	
C5	C5 (2001 - 2004)	MCP (Multiplexed Control Panel) MDP CONDUCT		•	•	•	
	C5 (2001 - 2004) C5 (2001 - 2004)	MDP PASSAG		•	•	•	
C5	C5 (2001 - 2004)			•	•	•	•
C5 C5	C5 (2001 - 2004) C5 (2001 - 2004)	MULC (Multifunction Video Camera (CMF))		•	•	•	
		MULD (Multifunction Display SAGEM A)		•	•	•	
	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM C)	⊢ 	L -			
C5	C5 (2001 - 2004)	MULD (Multifunction Display)	•	•	•	•	•
C5	C5 (2001 - 2004)	PAM (Parking Assistance)	+ -				
C5	C5 (2001 - 2004)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (2001 - 2004)	RBS (Rain And Brightness Sensor)	<u> </u>	•			•
C5	C5 (2001 - 2004)	RLS (Rain And Light Sensor)	•		•	•	
C5	C5 (2001 - 2004)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (2001 - 2004)	Radio	•		•	•	•
C5	C5 (2001 - 2004)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (2001 - 2004)	SM (Services Module)	•	•	•	•	•
C5	C5 (2001 - 2004)	SRS (Airbag)	•	•	•	•	•
C5	C5 (2001 - 2004)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (2001 – 2004)	SSP (Suspension Control System)	•	•	•	•	•
C5	C5 (2001 - 2004)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (2001 – 2004)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (2001 - 2004)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (2001 – 2004)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (2001 - 2004)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (2001 - 2004)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (2001 - 2004)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (2001 - 2004)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (2001 - 2004)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (2001 – 2004)	Wiper (Windscreen Wiper)	•	•	•	•	•

C5	C5 (3rd Generation)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (3rd Generation)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (3rd Generation)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (3rd Generation)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (3rd Generation)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (3rd Generation)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (3rd Generation)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (3rd Generation)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (3rd Generation)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (3rd Generation)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (3rd Generation)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (3rd Generation)	SM (Services Module)		•	•	•	
	C5 (3rd Generation)			•	•	•	
C5	C5 (3rd Generation)	SRS (Airbag) SWIC (Stoering Wheel With Integral Controls (VCI))		•	•	•	
C5	C5 (3rd Generation) C5 (3rd Generation)	SWIC (Steering Wheel With Integral Controls (VCI)) SWSM(Switch Module Under The Steering Wheel (Top Of Column))		•	•	•	
C5		SWSM(Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox)		•		•	
C5	C5 (3rd Generation)	,	•		•	_	
C5	C5 (3rd Generation)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (3rd Generation)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (3rd Generation)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (AIRCROSS)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (AIRCROSS)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (AIRCROSS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (AIRCROSS)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	EPS (Electric Power Steering)	•	•	•	•	•
	C5 (AIRCROSS)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C5	C5 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (AIRCROSS)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (AIRCROSS)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (AIRCROSS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	SM (Services Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	SRS (Airbag)	•	•	•	•	•
C5	C5 (AIRCROSS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (AIRCROSS)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (AIRCROSS)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ADDG03	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	Alarm	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	CD (CD Player)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ESP (Electronic Stability Program)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	HFC (Hands Free Control Kit)	•	•	•	•	•
	C5 (R) (2004 - 2007)	IP (Instrument Cluster Panel)	•	•	•	•	•
-				-			

C5	C5 (R) (2004 - 2007)	MDP CONDUCT	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	MDP PASSAG	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	MULD (Multifunction Display SAGEM C)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	Radio	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 -)	ABS (Anti-lock brake System)	•	•	•	•	•
	C5 (X7) (2007 -)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (X7) (2007 -)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (X7) (2007 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (X7) (2007 -)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (X7) (2007 -)	-			•	•	
		BATT (Battery Change Status Unit)					
C5	C5 (X7) (2007 -)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BHU (Body Height Unit)	•		•	•	•
C5	C5 (X7) (2007 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (X7) (2007 -)	CD (CD Player)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DDM (Driver's Door Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Display/Telematics	•	•	•	•	•
C5	C5 (X7) (2007 -)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C5	C5 (X7) (2007 -)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (X7) (2007 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C5	C5 (X7) (2007 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (X7) (2007 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C5	C5 (X7) (2007 -)	MULD (Multifunction Display)	•	•	•	•	•
C5	C5 (X7) (2007 -)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (X7) (2007 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Radio	•	•	•	•	•
C5	C5 (X7) (2007 -)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SM (Services Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SRS (Airbag)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SSP (Suspension Control System)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (X7) (2007 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (X7) (2007 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6	AC (Air Conditioning)	•	•	•	•	•
C6	C6	AC (Rear Air Conditioning Panel)	•	•	•	•	•
C6	C6	AH (Additional Heating)	•	•	•	•	•
C6	C6	ALM (Anti-theft Alarm)	•	•	•	•	•
C6	C6	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6	BATT (Battery Change Status Unit)	•	•	•	•	•
C6	C6	BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6	BRU (Boot Relay Unit)	•		•	$\overline{\cdot}$	
C6	C6	BSI (Built-in Systems Interface)			•	•	
C6	C6	CD (CD Player)		•	•	•	-
C6	C6	DDC (Driver's Door Control Panel)		•	•	•	
C6	C6	DDM (Driver's Door Module)		•	•	•	
00		DOW (NITAGE 2 DOOF WORRIE)	_		•		

C6	C6	DHL (Directional Headlamps)	•	•	•	•	•
C6	C6	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C6	C6	Display/Telematics	•	•	•	•	•
C6	C6	ECM (Engine Control Module)	•	•	•	•	•
C6	C6	EPB (Electric Secondary Brake)	•	•	•	•	•
C6	C6	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6	HFC (Hands Free Control Kit)	•	•	•	•	•
C6	C6	HFR (High Frequency Receiver)	•	•	•	•	•
C6	C6	HHV (High Head Vision)	•	•	•	•	•
C6	C6	HLL (Left Hand Headlamp)	•	•	•	•	•
C6	C6	HLR (Right Hand Headlamp)	•	•	•	•	•
C6	C6	IP (Instrument Cluster Panel)	•	•	•	•	•
C6	C6	LDWS (Lane Departure Warning System)	•	•	•	•	•
C6	C6	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6	C6	MPD (Moving Panel Deflector)	•	•	•	•	•
C6	C6	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C6	C6	MULD (Multifunction Display)	•	•	•	•	•
C6	C6	PAM (Parking Assistance)	•	•	•	•	•
C6	C6	PDM (Passenger's Door Module)	•	•	•	•	•
C6	C6	PID (Pedestrian Impact Detection)	•	•	•	•	•
C6	C6	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	•
C6	C6	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C6	C6	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6	RSM (Rear Seat Memorising Unit)	•	•	•	•	•
C6	C6	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6	Radio	•	•	•	•	•
C6	C6	SM (Services Module)	•	•	•	•	•
C6	C6	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C6	C6	SRS (Airbag)	•	•	•	•	•
C6	C6	SSLH (LH Seat Switch Panel)	•	•	•	•	•
C6	C6	SSP (Suspension Control System)	•	•	•	•	•
C6	C6	SSRH (RH Seat Switch Panel)	•	•	•	•	•
C6	C6	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6	TRU (Trailer Relay Unit)	•	•	•	•	•
C6	C6	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C6	C6	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6	VRD (Voltage Retaining Device)	•	•	•	•	•
C6	C6	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6 (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C6	C6 (CHINA)	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C6	C6 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C6	C6 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C6	C6 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C6	C6 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6	C6 (CHINA)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C6	C6 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
C6	C6 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6 (CHINA)	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6 (CHINA)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6 (CHINA)	SM (Services Module)	•	•	•	•	•
C6	C6 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•

C6	C6 (CHINA)	SRS (Airbag)	•	•	•	•	•
C6	C6 (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6 (CHINA)	SWSM(Switch Module Under The Steering Wheel (Top Of Column))		•	•	•	
C6	C6 (CHINA)	TCM (Automatic Gearbox)		•	•	•	•
	C6 (CHINA)	VDA (Vehicle Distance Assistance)		•	•	•	•
C6	C6 (CHINA)			•	•	•	
C6	C6 (CHINA)	VRD (Voltage Retaining Device)		•	•	•	
C6	,	Wiper (Windscreen Wiper)		•	•	•	•
C8	C8 (CAN) (2005 -)	ABS (Anti-lock brake System)	<u> </u>	_		_	
C8	C8 (CAN) (2005 -)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	AH (Additional Heating)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	CD (CD Player)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DAF (Diesel Additive Function)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DDM (Driver's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	Display/Telematics	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ECM (Engine Control Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	EPS (Electric Power Steering)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HLL (Left Hand Headlamp)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HLR (Right Hand Headlamp)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Leds And Odometer ECU)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	MULD (Colour Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	MULD (Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	PAM (Parking Assistance)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	Radio	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-F (Front Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-M (Middle Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-R (Rear Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SRS (Airbag)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ADDG02	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	AH (Additional Heating)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	CD (CD Player)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ECM (Engine Control Module)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ESP (Electronic Stability Program BOSCH 5.7)		•	•	•	•
C8	C8 (VAN) (2002 – 2005)	IP (Instrument Cluster Panel)		•	•	•	•
C8	C8 (VAN) (2002 – 2005)	MDP CONDUCT		•	•	•	
C8	C8 (VAN) (2002 - 2005)	MDP PASSAG		•	•	-	
C8	C8 (VAN) (2002 - 2005)	MULD (Multifunction Display SAGEM B)		•	•	•	
C8	C8 (VAN) (2002 - 2005)	PAM (Parking Assistance)		•	•	•	
	C8 (VAN) (2002 - 2005) C8 (VAN) (2002 - 2005)			•	•	•	
C8		RPE (Radio Post-equipment)		•	•	•	
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag 5.7)					
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	TEU (Telematics Unit)	•	•	•	•	•
FUKANG	FUKANG	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•

FUKANG	FUKANG	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG	KEY (Electrionic Key Reader)	•	•	•	•	•
FUKANG	FUKANG	SRS (Airbag 5.3)	•	•	•	•	•
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
FUKANG	FUKANG (988)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG (988)	KEY (Electrionic Key Reader)	•	•	•	•	•
FUKANG	FUKANG (988)	SRS (Airbag 5.3)	•	•	•	•	•
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	TUMPER/RELAY (3) (2006 - 2011)	AC (Air Conditioning)	 	•	•	•	•
JUMPER/RELAY	TUMPER/RELAY (3) (2006 - 2011)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	EPS (Electric Power Steering)	+	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	LDWS (Lane Departure Warning System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	PAM (Parking Assistance)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SRS (Airbag)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SSP (Pneumatic Suspension)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TG (Tachograph)	 	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	AC (Air Conditioning)	 	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	AH (Additional Heating)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	BSI (Built-in Systems Interface)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	ECM (Engine Control Module)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	EPS (Electric Power Steering)	 •	•	•	•	
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	IP (Instrument Cluster Panel)	 •	•	•	•	•
,		LDWS (Lane Departure Warning System)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	SRS (Airbag)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	ABS (Anti-lock brake System)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	BSI (Built-in Systems Interface)	 •	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	ECM (Engine Control Module)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	EPS (Electric Power Steering)	+ :	•	•	•	
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	IP (Instrument Cluster Panel)	+ ÷		•	•	
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	PAM (Parking Assistance)	+ -	•	•	•	
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	SRS (Airbag)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	SSP (Pneumatic Suspension)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	TG (Tachograph)	 •	•	•	•	•
	JUMPY/DISPATCH (1) (1995 - 2004)	AH (Additional Heating)	+ -	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	CPH TEXTON	 •	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L DHX BOSCH AS3-VP20)	+ -	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L WJY LUCAS DCN2)	+ -	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHW BOSCH EDC15C2)	 	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHX BOSCH EDC15C2)	+ -	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHZ BOSCH EDC15C2)	+ ÷	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag 5.3)	+ -	•	•	•	•
JUMPY/DISPATCH JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004) JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag)	+ ÷	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	TCM (Automatic Gearbox AL4)	+ -	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	AH (Additional Heating)	+-	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 – 2007)	CPH TEXTON	-	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (1.9L WJY LUCAS DCN2)	+ ÷	•	•	•	
John 1, DISTRICH		(02 ·// 200/10 20/12)					

JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RFN MM48P)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHX BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag 5.3)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2007 - 2016)	ABS (Anti-lock brake System)		•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Air Conditioning)			•	•	•
					•	•	-
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Rear Air Conditioning Panel)	L -	⊢ Ŭ			
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	CD (CD Player)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Display/Telematics	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ECM (Engine Control Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ERU (Engine Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFC (Hands Free Control Kit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFR (High Frequency Receiver)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	IP (Instrument Cluster Panel)			•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	MULD (Multifunction Display)			•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)				•	•	
		PAM (Parking Assistance)		H-		_	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Radio	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TCM (Automatic Gearbox)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TRU (Trailer Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ECM (Engine Control Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ERU (Engine Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -) JUMPY/DISPATCH (KO) (2016 -)	ESL (Electric Steering Lock)		•	•	•	
JUMPY/DISPATCH JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -) JUMPY/DISPATCH (KO) (2016 -)	HHV (High Head Vision)			•	•	•
				•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	IP (Instrument Cluster Panel)	<u> </u>			_	
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RLS (Rain And Light Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SM (Services Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	Siren	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TCM (Automatic Gearbox)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TRU (Trailer Relay Unit)			•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VDA (Vehicle Distance Assistance)	 		•	_	
JOHL 1/ DISLATOR	Joint 1/DISERTON (RO) (2010 -)	The (sentete pistance assistance)			•	_	_

JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
NEMO		ABS (Anti-lock brake System)	•	•	•	•	•
NEMO		BSI (Built-in Systems Interface)	•	•	•	•	•
NEMO		ECM (Engine Control Module)	•	•	•	•	•
NEMO		IP (Instrument Cluster Panel)	•	•	•	•	•
NEMO		PAM (Parking Assistance)	•	•	•	•	•
NEMO		SRS (Airbag)	•	•	•	•	•
NEMO		TCM (Automatic Gearbox)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
SAXO		ECM (1. OL CDY/CDZ BOSCH MA3.1)	•	•	•	•	•
SAXO		ECM (1.4L KFW SAGEM S2000)	•	•	•	•	•
SAXO		ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
SAXO		ECM (1.4L KFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM48P)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.1)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP7.2)	•	•	•	•	•
SAXO		ECM (HFX/NFT/NFV - M744)	•	•	•	•	•
SAXO		KEY (Electrionic Key Reader)	•	•	•	•	•
SAXO		SRS (Central Airbag)	•	•	•	•	•
SAXO		TCM (Automatic Gearbox)	•	•	•	•	•
SPACETOURER		ABS (Anti-lock brake System)	•	•	•	•	•
SPACETOURER		AC (Air Conditioning)	•	•	•	•	•
SPACETOURER		AH (Additional Heating)	•	•	•	•	•
SPACETOURER		ALM (Anti-theft Alarm)	•	•	•	•	•
SPACETOURER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
SPACETOURER		BATT (Battery Change Status Unit)	•	•	•	•	•
SPACETOURER		BSI (Built-in Systems Interface)	•	•	•	•	•
SPACETOURER		ECM (Engine Control Module)	•	•	•	•	•
SPACETOURER		ERU (Engine Relay Unit)	•	•	•	•	•
SPACETOURER		ESL (Electric Steering Lock)	•	•	•	•	•
SPACETOURER		HHV (High Head Vision)	•	•	•	•	•
SPACETOURER		IP (Instrument Cluster Panel)	•	•	•	•	•
SPACETOURER		MCP (Multiplexed Control Panel)	•	•	•	•	•
SPACETOURER		MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
SPACETOURER		MULD (Multifunction Display)	•	•	•	•	•
SPACETOURER		PAM (Parking Assistance)	•	•	•	•	•
SPACETOURER		RLS (Rain And Light Sensor)	•	•	•	•	•
SPACETOURER		RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
SPACETOURER		SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
SPACETOURER		SM (Services Module)	•	•	•	•	•
SPACETOURER		SPMU (Supply Protection And Management Unit)	•	•	•	•	•
SPACETOURER		SRS (Airbag)	•	•	•	•	•
SPACETOURER		SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
SPACETOURER		SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
SPACETOURER		Siren	•	•	•	•	•
SPACETOURER		TCM (Automatic Gearbox)	•	•	•	•	•
SPACETOURER		TRU (Trailer Relay Unit)	•	•	•	•	•
SPACETOURER		VDA (Vehicle Distance Assistance)	•	•	•	•	•
SPACETOURER		VRD (Voltage Retaining Device)	•	•	•	•	•
SYNERGIE		ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
SYNERGIE		ECM (2.OL RFN MM48P)	•	•	•	•	•
SYNERGIE		ECM (2.OL RFV BOSCH MP7.3)	•	•	•	•	•
SYNERGIE		ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
SYNERGIE		ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		SRS (Airbag 5.3)	•	•	•	•	•
SYNERGIE		SRS (SAC CENT AUTOLIV)	•	•	•	•	•
SYNERGIE		TCM (Automatic Gearbox AL4)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.8L LFX MM1AP)	•	•	•	•	•
·							

NOTE NOTE CO								
MARTA MART	XANTIA	XANTIA (1)	ECM (1.8L LFY BOSCH MP5.1.1)	•	•	•	•	•
MATTAL M				•	•	•	•	•
MATTAL GATTAL GAT			ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
MARIE MAYCO C)				•	•	•	•	•
MOTITAL MOTITAL			ECM (2. OL RFT BOSCH MP3. 2)	•	•	•	•	•
MATTAL MATTAL C)				•	•		•	•
MOTES MOTES 11				•	•			
MOTTE MOTTE CENTER CENTER MOTTE CENTER MOTTE MOTTE CENTER CENTER		. ,			H			
MATTA CANTA CANT					-			
MATTALE MATT					H			
SAMID SCHIE SCHI		. ,	, ,		H			
MATTAL M								
MARTIA MATTA MAT			_					
MARTIA MARTIA C2								
ANTIA 121 ANTIA 121 ANTIA 121 ANTIA 122 ANTIA 123 ANTIA 124 ANTIA 123 ANTIA 123 ANTIA 123 ANTIA 124 ANTIA 124 ANTIA 125 ANTIA 124 ANTIA 125 ANTIA 124 ANTIA 125 ANTIA ANTIA 125 ANTIA ANTIA 125 ANTIA ANTIA 125 ANTIA ANTIA ANTIA 125 ANTIA ANTIA 125 ANTIA AN								
NATIA NATIA CO								
MATTAL MATTAL C2 MATTAL C2 MATTAL C3 MATTAL C4 MATTAL C5 MATTAL C4 MATTAL C5 MATTAL C6 MATTAL			·			-		
SASTIA SASTIA (2)								
MARTIA MARTIA C2 MARTIA C2 MARTIA C3 MARTIA C								
XANTIA (2011 (20)								
XANTIA XANTIA (2)					H			
NAMITA								
NAMITA NAMITA (23) NAMITA (24) SIS (Althog)	XANTIA							
EASTIA SANTIA (2) SSS (Airbag)								
XANTIA								
SANTIA SANTIA (2) SSS (Right Airbox)			•					
XANTIA	XANTIA		SRS (Left Airbag)	•			•	•
Miles Mile	XANTIA	XANTIA (2)	SRS (Right Airbag)	•		•	•	•
NA NA BOL (2. 0. ROF BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 1) NA NA BOL (2. 0. ROF P BOSCH MP5. 1) NA NA BOL (2. 0. ROF P BOSCH MP5. 1) NA NA BOL (2. 0. ROF P BOSCH MP5. 1) NA NA BOL (2. 0. ROF P BOSCH MP5. 1) NA NA BOL (2. 0. ROF P BOSCH MP5. 1) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. 0. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA NA BOL (2. ROF P BOSCH MP5. 2) NA ROF (2. ROF P BOSCH MP5. 2) NA	XANTIA	XANTIA (2)	SRS (TEVES_MK20E)	•	•	•	•	•
Mile	XM	XM	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
NI	XM	XM	ECM (2. OL R6E BOSCH MP5. 2)	•	•	•	•	•
MI	XM	XM	ECM (2. OL RFV BOSCH MP5. 1. 1)	•	•	•	•	•
NM	XM	XM	ECM (2. OL RFV BOSCH MP5. 2)	•	•	•	•	•
NM	XM	XM	ECM (2.OL RFZ BOSCH MP5.1)	•	•	•	•	•
MN	XM	XM	ECM (2.OL RGX BOSCH MP3.2)	•	•	•	•	•
NAM	XM	XM	ECM (2. OL RGY BOSCH MP3. 2)	•	•	•	•	•
XM	XM	XM	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
MI	XM	XM	ECM (2.5L THY BOSCH MSA11 VP36)	•	•	•	•	•
NA	XM	XM	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
XSARA XSARA XSARA (1) (1997 - 2000) ABS (ABS Electronic Distribution)	XM	XM (Mux)	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ABS (ABS Mechanical Distribution)	XM	XM (Mux)	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) AC (Air Conditioning)	XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Electronic Distribution)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) Alarm	XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Mechanical Distribution)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) BSI (Built-in Systems Interface) • • • • • • • • • • • • • • • • • • •	XSARA	XSARA (1) (1997 - 2000)	AC (Air Conditioning)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) BSI (Built-in Systems Interface) • • • • • • • • • • • • • • • • • • •	XSARA	XSARA (1) (1997 - 2000)	Alarm	•	•	•	•	•
XSARA	XSARA	XSARA (1) (1997 - 2000)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.4L KFX SAGEM SL96)	XSARA	XSARA (1) (1997 - 2000)	CD (CD Player)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.4L KFX SAGEM SL96)	XSARA	XSARA (1) (1997 - 2000)	ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 6L KFA/HFX/N6A/NFS/NFU - ME744)	XSARA		ECM (1.4L KFX SAGEM SL96)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 6L NFZ BOSCH MP5.2) • • • • • • • • • • • • • • • • • • •	XSARA		ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.6L NFZ BOSCH MP7.2) • • • • • • • • • • • • • • • • • • •	XSARA			•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.8L LFX MM1AP) ● <	XSARA			•	•		•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 8L LFY SAGEM SL96) • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (1. 9L DHV BOSCH AS3-VP20) • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. 0L RFS MM1AP) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. 0L RFV BOSCH MP5. 2) • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. 0L RHY BOSCH EDC15C2) • • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • • •	XSARA							•
XSARA XSARA (1) (1997 - 2000) ECM (1. 9L DHV BOSCH AS3-VP20) • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. 0L RFS MM1AP) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. 0L RFV BOSCH MP5. 2) • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. 0L RHY BOSCH EDC15C2) • • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • •	XSARA							•
XSARA XSARA (1) (1997 - 2000) ECM (2. OL RFS MM1AP) • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. OL RFV BOSCH MP5. 2) • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. OL RHY BOSCH EDC15C2) • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • •								
XSARA XSARA (1) (1997 - 2000) ECM (2. OL RFV BOSCH MP5. 2) • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. OL RHY BOSCH EDC15C2) • • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • •						-		
XSARA XSARA (1) (1997 - 2000) ECM (2. OL RHY BOSCH EDC15C2) • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • •								
XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • •								
XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • •					— —			
XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • •					-			
XSARA (1) (1997 - 2000) SRS (Airbag) • • • • •						-		
								
ADMINI (1) (1991 2000) TOM (NULUMBELLE GERLION ALT 11990)								
	лопип	Montaet (1) (1001 2000)	1000 (Macounatio ocation alt indo)	•		•	•	

XSARA	XSARA (2) (2000 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	AC (Air Conditioning)	$\ddot{}$	•	•	•	
XSARA	XSARA (2) (2000 – 2006)	BSI (BSI VAR C)	_	•	•	•	
XSARA	XSARA (2) (2000 – 2006)	CD (CD Player)		•	•	•	•
	XSARA (2) (2000 – 2006) XSARA (2) (2000 – 2006)	· · · · · · · · · · · · · · · · · · ·	$\ddot{}$	•	•	•	
XSARA		ECM (Engine Control Module)	$\ddot{}$	•			
XSARA	XSARA (2) (2000 – 2006)	ESP (Electronic Stability Program BOSCH 5.7)			•	•	
XSARA	XSARA (2) (2000 – 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	MULD (Multifunction Display A)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	Radio	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Alarm	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ADDGO2	•	•	•	•	•
	XSARA (PICASSO) (2002 - 2006)	Alarm		•		•	
			•	•	•	•	
XSARA	XSARA (PICASSO) (2002 - 2006) XSARA (PICASSO) (2002 - 2006)	BSI (Built-in Systems Interface)	$\dot{}$		•	•	-
XSARA		CD (CD Player)	$\ddot{}$	•	•	•	
XSARA	XSARA (PICASSO) (2002 – 2006)	ECM (Engine Control Module)					
XSARA	XSARA (PICASSO) (2002 - 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 – 2006)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
ZX	ZX (16)	ABS (Anti-lock brake System)	•	•	•	•	•
ZX	ZX (16)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
	•						

ZX	ZX (16)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (16)	ECM (2. OL RFS MM1AP)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA2000 AT)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA96 AT)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (2. OL RFS MM1AP)	•	•	•	•	•

CITROEN BLD Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

This function is the new		
Model	Model Type	BLD
BERLINGO	BERLINGO (2) (2002 - 2008)	•
BERLINGO	BERLINGO (2) (M69)	•
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	•
C-ELYSEE	C-ELYSEE	•
C-QUATRE	C-QUATRE (4)	•
C-QUATRE	C-QUATRE (5)	•
C-TRIOMPHE		•
C3	C3 (A51)	•
C3	C3 (Ai51)	•
C3	C3 (AIRCROSS) (A88)	•
C3 C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	•
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
C8	C8 (CAN) (2005 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•
	-	

CITRONE BLD Function List (Note:For reference only)

Bleeding

Bleeding Of The Hydraulic Block

Bleeding Of The Hydraulic Block ABS MK100

Bleeding Of The Hydraulic Block ASR8.0

Bleeding Of The Hydraulic Block ESP MK100

Bleeding Of The Hydraulic Circuit

CITROEN BMS Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Mode1	Model Type	BMS
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	•
C3	C3 (A51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•

CITRONE BMS Function List (Note:For reference only)

Manual Configuration

CITROEN DPF Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	DPF
BERLINGO	BERLINGO (2) (M69)	•
BERLINGO	BERLINGO (B9)	•
C-CROSSER		•
C-ELYSEE	C-ELYSEE	•
C2	C2 (CAN) (2006 -)	•
C3	C3 (A51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (CACTUS)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (2001 - 2004)	•
C5	C5 (R) (2004 - 2007)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C8	C8 (CAN) (2005 -)	•
C8	C8 (VAN) (2002 - 2005)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•
XSARA	XSARA (2) (2000 - 2006)	•
XSARA	XSARA (PICASSO) (2002 - 2006)	•
XSARA	XSARA (PICASSO) (CHINA)	•

CITRONE DPF Function List (Note:For reference only)

Filling Of The Diesel Additiv	ze Adding Reservoir
-------------------------------	---------------------

Forced Regeneration Of The Particle Emission Filter

Forced Regeneration Of The Particle Filter, Vehicle Stationary

Forced Regeneration Of The Particulate Filter While Driving

Forced Regeneration Vehicle Moving

Forced Regeneration Vehicle Stationary

Pariticle Filter Regeneration

Particulate Filter Replacement

Replacement Of The Diesel Additive Reservoir, Of The Pump Or Of The Pipes

Replacement Of The Differential Pressure Sensor

Replacement Of The Particle Emission Filter

Replacement Of The Particle Emission Filter Differential Pressure Sensor

CITROEN EPB Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

M 1 1		EDD
Mode1	Model Type	EPB
C-ELYSEE	C-ELYSEE	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (B618)	•
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•

CITRONE EPB Function List (Note:For reference only)

Cable Tensioning

Deactivation Of The Automatic Application Of The Electric Parking Brake Function

Electric Parking Brake Calibration

First Activation Of The Electric Parking Brake

Put In Fitting/Removal Position

Reactivation Of Automatic Application Of The Electric Parking Brake

Release Of The Motorised Brake Calipers

Replacement Of The Brake Pads

Replacement Of The Electric Parking Brake (FSE) Left-hand Actuator

Replacement Of The Electric Parking Brake (FSE) Right-hand Actuator

Replacement Of The Proportional Brake Switch

Replacement Of The Rear Left Motorised Brake Caliper

Replacement Of The Rear Right Motorised Brake Caliper

CITROEN ETC Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

BERLINGO BERLINGO (1) (1996 - 2002) BERLINGO BERLINGO (2) (2002 - 2008) BERLINGO BERLINGO (B9) C-ELYSEE C-ELYSEE C-FLYSEE C-ELYSEE (R3) C-QUATRE C-QUATRE (4) C-QUATRE C-QUATRE (5) C-TRIOMPHE C C2 C2 (CAN) (2006 -) C2 C2 (VAN) (2003 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (A151) C3 C3 (A151) C3 C3 (A151) C3 C3 (PICASSO) (A158) C4<	Model	Model Type	ETC
BERLINGO BERLINGO (2) (2002 - 2008) BERLINGO BERLINGO (89) C-ELYSEE C-ELYSEE C-ELYSEE C-LYSEE C-QUATRE C-QUATRE (4) C-QUATRE C-QUATRE (5) C-TRIOMPHE • C2 C2 (CAN) (2006 -) C2 C2 (CHINA) C2 C2 (VAN) (2003 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (A51) C3 C3 (A51) C3 C3 (AIRCROSS) (A58) C3 C3 (PICASSO) (A58) C4 C4 (PICASSO) (A			•
BERLINGO BERLINGO (B9) C-ELYSEE C-ELYSEE C-ELYSEE			•
C-ELYSEE C-ELYSEE (R3) C-QUATRE C-QUATRE (4) C-QUATRE C-QUATRE (5) C-TRIOMPHE ● C2 C2 (CAN) (2006 -) C2 C2 (CHINA) C3 C3 (2002 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (Ai51) C3 C3 (Ai51) C3 C3 (AICROSS) (Ai58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (Ai58) C3 C3 (PICASSO) (Ai58) C3 C3 (PICASSO) (Ai58) C3 C3 (R) (2006 - 2009) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (B7) (CAPARA) C4 C4 (B7) (CAPARA)	BERLINGO	() (•
C-QUATRE	C-ELYSEE	C-ELYSEE C-ELYSEE	•
C-QUATRE C-QUATRE (5) C-TRIOMPHE ● C2 C2 (CAN) (2006 -) C2 C2 (CHINA) C2 C2 (VAN) (2003 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (A51) C3 C3 (AIRCROSS) (A58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (A58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (R) (2006 - 2010) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (B7) (2010 -) C4 C4 (B7) (2010 -) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (878) (2013 -) C5 C5 (2001 - 2004) C5 C5 (R) (2004 - 2007) C5 C5 (R) (2004 - 2007) C5 C5 (R) (2004 - 2007) C5 C5 (R) (2004 - 2005)	C-ELYSEE	C-ELYSEE (R3)	•
C-TRIOMPHE C2 C2 (CAN) (2006 -) ■ C2 C2 (HINA) ■ C2 C2 (VAN) (2003 - 2006) ■ C3 C3 (2002 - 2006) ■ C3 C3 (A51) ■ C3 C3 (AiS1) ■ C3 C3 (AIRCROSS) (Ai58) ■ C3 C3 (PICASSO) (A58) ■ C3 C3 (PICASSO) (Ai58) ■ C3 C3 (PLURIEL) (2002 - 2009) ■ C3 C3 (R) (2006 - 2009) ■ C3 C3 (R) (2001 - 2009) ■ C4 C4 (2004 - 2010) ■ C4 C4 (87) (2010 -) ■ C4 C4 (BZ3) (CHINA) ■ C4 C4 (BZ3) (CHINA) ■ C4 C4 (PICASSO) (2006 - 2013) ■ C4 C4 (PICASSO) (2008 - 2013) ■ C4 C4 (PICASSO) (2008 - 2007) ■ C5 C5 (R) (2004 - 2007) </td <td>C-QUATRE</td> <td>C-QUATRE (4)</td> <td>•</td>	C-QUATRE	C-QUATRE (4)	•
C2 C2 (CAN) (2006 -) C2 C2 (CHINA) C2 C2 (VAN) (2003 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (Ai51) C3 C3 (AIRCROSS) (Ai58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (Ai58) C3 C3 (PLORESO) (Ai58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (XR) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (B7) (2010 -) C4 C4 (B7) (CO10 -) C4 C4 (EASSO) (EASS	C-QUATRE	C-QUATRE (5)	•
C2 C2 (CHINA) C2 C2 (VAN) (2003 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (Ai51) C3 C3 (AiFCROSS) (Ai58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (A58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (XR) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (BZ3) (CHINA) C4 C4 (BZ3) (CHINA) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (878) (2013 -) C4 C4 (SEDAN) (2006 -) C5 C5 (2001 - 2004) C5 C5 (R) (2004 - 2007) C5 C5 (X7) (2007 -) C6 C6 C8 C8 (CAN) (2005 -) C8 C8 (CAN) (2000 - 2006) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)	C-TRIOMPHE		•
C2 C2 (VAN) (2003 - 2006) C3 C3 (2002 - 2006) C3 C3 (A51) C3 C3 (Ai51) C3 C3 (AIRCROSS) (Ai58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (Ai58) C3 C3 (R) (2006 - 2009) C4 C4 (2000 - 2010) C4 C4 (2004 - 2010) C4 C4 (BZ3) (CHINA) C4 C4 (D1 (B7) C4 C4 (D1 (B7) C4 C4 (PICASSO) (B78) (2013 -) C4 C4 (PICASSO) (B78) (2013 -) C5 C5 (2001 - 2004) C5 C5 (2001 - 2004) C5 C5 (R) (2004		C2 (CAN) (2006 -)	•
C3 C3 (2002 - 2006) ● C3 C3 (A51) ● C3 C3 (Ai51) ● C3 C3 (AIRCROSS) (Ai58) ● C3 C3 (PICASSO) (A588) ● C3 C3 (PICASSO) (Ai58) ● C3 C3 (PLURIEL) (2002 - 2009) ● C3 C3 (R) (2006 - 2009) ● C3 C3 (XR) ● C4 C4 (2004 - 2010) ● C4 C4 (B7) (2010 -) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (878) (2013 -) ● C4 C4 (PICASSO) (878) (2013 -) ● C5 C5 (2001 - 2004) ● C5 C5 (2001 - 2004) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 <td< td=""><td></td><td>C2 (CHINA)</td><td>•</td></td<>		C2 (CHINA)	•
C3 C3 (A51) ● C3 C3 (Ai51) ● C3 C3 (AIRCROSS) (Ai58) ● C3 C3 (PICASSO) (Ai58) ● C3 C3 (PLURIEL) (2002 - 2009) ● C3 C3 (PLURIEL) (2002 - 2009) ● C3 C3 (R) (2006 - 2009) ● C3 C3 (XR) ● C4 C4 (2004 - 2010) ● C4 C4 (B7) (2010 -) ● C4 C4 (B7) (2010 -) ● C4 C4 (BZ3) (CHINA) ● C4 C4 (E)CASSO) (2006 - 2013) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C5 C5 (2001 - 2004) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●<	C2		•
C3 C3 (Ai51) C3 C3 (AIRCROSS) (Ai58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (Ai58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (XR) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (B7) (2010 -) C4 C4 (B7) (2010 -) C4 C4 (B7) (C010 -) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (E006 - 2013) C4 C4 (PICASSO) (B78) (2013 -) C5 C5 (2001 - 2004) C5 C5 (2001 - 2004) C5 C5 (R) (2004 - 2007) C5 C5 (X7) (2007 -) C6 C6 C8 C8 (CAN) (2005 -) C8 C8 (VAN) (2002 - 2005) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)		C3 (2002 - 2006)	•
C3 C3 (AIRCROSS) (Ai58) C3 C3 (PICASSO) (A58) C3 C3 (PICASSO) (Ai58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (XR) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (B73) (CHINA) C4 C4 (B73) (CHINA) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (B78) (2013 -) C4 C4 (SEDAN) (2006 -) C5 C5 (2001 - 2004) C5 C5 (R) (2004 - 2007) C5 C5 (X7) (2007 -) C6 C6 C8 C8 (CAN) (2005 -) C8 C8 (VAN) (2002 - 2005) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)		C3 (A51)	•
C3 C3 (PICASSO) (A58) C3 C3 (PLORSSO) (Ai58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (XR) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (BZ3) (CHINA) C4 C4 (BZ3) (CHINA) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (878) (2013 -) C4 C4 (SEDAN) (2006 -) C5 C5 (2001 - 2004) C5 C5 (2001 - 2004) C5 C5 (R) (2004 - 2007) C5 C5 (X7) (2007 -) C6 C6 C8 C8 (CAN) (2005 -) C8 C8 (VAN) (2002 - 2005) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)	C3	C3 (Ai51)	•
C3 C3 (PICASSO) (Ai58) C3 C3 (PLURIEL) (2002 - 2009) C3 C3 (R) (2006 - 2009) C3 C3 (XR) C4 C4 (2004 - 2010) C4 C4 (B7) (2010 -) C4 C4 (BZ3) (CHINA) C4 C4 (I) (B7) C4 C4 (PICASSO) (2006 - 2013) C4 C4 (PICASSO) (B78) (2013 -) C4 C4 (SEDAN) (2006 -) C5 C5 (2001 - 2004) C5 C5 (X7) (2007 -) C5 C5 (X7) (2007 -) C6 C6 C8 C8 (CAN) (2005 -) C8 C8 (VAN) (2002 - 2005) XSARA XSARA (2) (2000 - 2006) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)	C3	C3 (AIRCROSS) (Ai58)	•
C3 C3 (PLURIEL) (2002 - 2009) ● C3 C3 (R) (2006 - 2009) ● C4 C4 (2004 - 2010) ● C4 C4 (B7) (2010 -) ● C4 C4 (BZ3) (CHINA) ● C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C4 C4 (SEDAN) (2006 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●		C3 (PICASSO) (A58)	•
C3 C3 (R) (2006 - 2009) ● C3 C3 (XR) ● C4 C4 (2004 - 2010) ● C4 C4 (B7) (2010 -) ● C4 C4 (BZ3) (CHINA) ● C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C5 C5 (2001 - 2004) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●		C3 (PICASSO) (Ai58)	•
C3 C3 (XR) ● C4 C4 (2004 - 2010) ● C4 C4 (B7) (2010 -) ● C4 C4 (BZ3) (CHINA) ● C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C4 C4 (SEDAN) (2006 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C4 C4 (2004 - 2010) ● C4 C4 (B7) (2010 -) ● C4 C4 (BZ3) (CHINA) ● C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C5 C5 (2001 - 2004) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●		C3 (R) (2006 - 2009)	•
C4 C4 (B7) (2010 -) ● C4 C4 (BZ3) (CHINA) ● C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●		C3 (XR)	•
C4 C4 (BZ3) (CHINA) ● C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C4 C4 (L) (B7) ● C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C4 C4 (SEDAN) (2006 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●		C4 (B7) (2010 -)	•
C4 C4 (PICASSO) (2006 - 2013) ● C4 C4 (PICASSO) (B78) (2013 -) ● C5 C4 (SEDAN) (2006 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●		C4 (BZ3) (CHINA)	•
C4 C4 (PICASSO) (B78) (2013 -) ● C4 C4 (SEDAN) (2006 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C4 C4 (SEDAN) (2006 -) ● C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C5 C5 (2001 - 2004) ● C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C5 C5 (R) (2004 - 2007) ● C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●	C4		•
C5 C5 (X7) (2007 -) ● C6 C6 ● C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C6 C6 C8 C8 (CAN) (2005 -) C8 C8 (VAN) (2002 - 2005) XSARA XSARA (2) (2000 - 2006) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)			•
C8 C8 (CAN) (2005 -) ● C8 C8 (VAN) (2002 - 2005) ● XSARA XSARA (2) (2000 - 2006) ● XSARA XSARA (PICASSO) (1999 - 2002) ● XSARA XSARA (PICASSO) (2002 - 2006) ●			•
C8 C8 (VAN) (2002 - 2005) XSARA XSARA (2) (2000 - 2006) XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)			•
XSARA XSARA (2) (2000 - 2006) ■ XSARA XSARA (PICASSO) (1999 - 2002) ■ XSARA XSARA (PICASSO) (2002 - 2006) ■			•
XSARA XSARA (PICASSO) (1999 - 2002) XSARA XSARA (PICASSO) (2002 - 2006)			•
XSARA (PICASSO) (2002 - 2006)			•
		, , ,	•
XSARA (PICASSO) (CHINA)			•
	XSARA	XSARA (PICASSO) (CHINA)	•

CITRONE ETC Function List (Note:For reference only)

Initialisation Of The EGR Throttle

Initialising The Autoadaptives

Motorised Throttle Unit

Replacement Of Exhaust Gas Recycling Electric Throttle

Throttle Learning

CITROEN Diagnostic Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.▲ This function is the new feature in this version.

▲ This function is the new feature in this version.								
Mode1	Model Type	System Name	EcuInfo	Read Codes	Erase Codes	LiveData	Act	
BERLINGO	BERLINGO (1) (1996 - 2002)	ABS (ABS Electronic Distribution)	•	•	•	•	•	
BERLINGO	BERLINGO (1) (1996 - 2002)	CD (CD Player)	•	•	•	•	•	
BERLINGO	BERLINGO (1) (1996 - 2002)	ECM (Engine Control Module)	•	•	•	•	•	
BERLINGO	BERLINGO (1) (1996 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•	
BERLINGO	BERLINGO (1) (1996 - 2002)	RADIO1 (Radio Post-equipment(Autoradio 1))	•	•	•	•	•	
BERLINGO	BERLINGO (1) (1996 - 2002)	SRS (Autoliv/(SAC_AKF) Airbag)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	ABS (Anti-lock brake System)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	AH (Additional Heating(Chauff-add))	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	Alarm(Alarme_texton)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	BSI (Built-in Systems Interface)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	CD (CD Player(Changer-cd))	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	ECM (Engine Control Module)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	IP (Instrument Cluster Panel)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	PAM (Parking Assistance)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	RADIO2 (Radio Post-equipment(Autoradio 2))	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	RBS (Rain And Brightness Sensor(Pluie_luminosite))	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	SM (Services Module)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag 5.3)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (2002 - 2008)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•	
BERLINGO	BERLINGO (2) (M69)	ABS (Anti-lock brake System)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (M69)	BSI (Built-in Systems Interface)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (M69)	ECM (Engine Control Module)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (M69)	IP (Instrument Cluster Panel)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (M69)	SRS (Airbag)	•	•	•	•	•	
BERLINGO	BERLINGO (2) (M69)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	ABS (Anti-lock brake System)	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	AC (AIR Conditioning Compressor)	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	Alarm	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT (Battery Change Status Unit)	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT (Traction Battery ECU)	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT-01 (Traction Battery Cells Management (Module 01))	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT-02 (Traction Battery Cells Management (Module 02))	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT-03 (Traction Battery Cells Management (Module 03))	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT-04 (Traction Battery Cells Management (Module 04))	•	•	•	•	•	
BERLINGO	BERLINGO (B9)	BATT-05 (Traction Battery Cells Management (Module 05))	•	•	•	•	•	
BERLINGO BERLINGO	BERLINGO (B9) BERLINGO (B9)	BATT-07 (Traction Battery Cells Management (Module 07)) BATT-08 (Traction Battery Cells Management (Module 08))		•	•	•	•	
	BERLINGO (B9)			•	•	•	•	
BERLINGO BERLINGO	BERLINGO (B9)	BATT-09 (Traction Battery Cells Management (Module 09)) BATT-10 (Traction Battery Cells Management (Module 10))			•	•	•	
BERLINGO	BERLINGO (B9)	BSI (Built-in Systems Interface)		•	•	•	•	
	BERLINGO (B9)	BWCU (Bodywork Conversion Unit)		•	•	•	$\ddot{\bullet}$	
BERLINGO BERLINGO	BERLINGO (B9)	CD (CD Player)		•	•	•	•	
BERLINGO	BERLINGO (B9)	ECM (Engine Control Module)		•	•	•	•	
BERLINGO	BERLINGO (B9)	EMM (Electric Machine Management ECU)		•	•	•	•	
BERLINGO BERLINGO	BERLINGO (B9)	EPS (Electric Power Steering Electric Pump Unit)		•	•	•	•	
BERLINGO BERLINGO	BERLINGO (B9)	ERU (Engine Relay Unit)		•		•	•	
BERLINGO	BERLINGO (B9)	EVM (Electric Vehicle Management ECU)		•	•	•		
BERLINGO	BERLINGO (B9)	HFC (Hands Free Control Kit)		•	•	•	$\ddot{\bullet}$	
BERLINGO	BERLINGO (B9)	HFR (High Frequency Receiver)		•	•	•		
BERLINGO	BERLINGO (B9)	IP (Instrument Cluster Panel)		•	•	•	•	
BERLINGO	BERLINGO (B9)	MDAP (Multiplexed Diesel Additive Pump)		•	•	•		
DEILETINGO	DERETHOO (DV)	mbri (martipitated bioser naurtive rump)		_		•		

BERLINGO	BERLINGO (B9)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	Radio	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	AC (AIR Conditioning Compressor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Alarm	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Battery Change Status Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Traction Battery ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-01 (Traction Battery Cells Management (Module 01))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-02 (Traction Battery Cells Management (Module 02))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-03 (Traction Battery Cells Management (Module 03))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-04 (Traction Battery Cells Management (Module 04))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-05 (Traction Battery Cells Management (Module 05))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-07 (Traction Battery Cells Management (Module 07))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-08 (Traction Battery Cells Management (Module 08))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-09 (Traction Battery Cells Management (Module 09))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-10 (Traction Battery Cells Management (Module 10))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	CD (CD Player)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ECM (Engine Control Module)	•	•	•	•	
BERLINGO	BERLINGO Electric (B9E)	EMM (Electric Machine Management ECU)	•		•	•	
BERLINGO	BERLINGO Electric (B9E)				_		
BERLINGO	BERLINGO Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit) ERU (Engine Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EVM (Electric Vehicle Management ECU)	•		•	•	
BERLINGO	BERLINGO Electric (B9E)	HFC (Hands Free Control Kit)			•	•	
BERLINGO	BERLINGO Electric (B9E)	HFR (High Frequency Receiver)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO BERLINGO	BERLINGO Electric (B9E)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	
BERLINGO	BERLINGO Electric (B9E)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Radio	•	•	•	•	•
BERLINGO BERLINGO	BERLINGO Electric (B9E)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	
BERLINGO BERLINGO	BERLINGO Electric (B9E)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO BERLINGO	BERLINGO Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
C-CROSSER	DENETHOO ETECTIFC (DSE)	ABS (Anti-lock brake System)	•	•	•	•	
C-CROSSER C-CROSSER		AC (Air Conditioning)			•	•	
-		AC (Air conditioning) AFS	•	•	•	•	•
C-CROSSER C-CROSSER			•	•	•	•	•
		BSI (Built-in Systems Interface)		•	•	•	
C-CROSSER		DPCRF (Rear Final Drive Piloted Clutch)	•				
C-CROSSER		DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
C-CROSSER C-CROSSER		DSPRRH (Rear RH Door Switch Panel) ECM (Engine Control Module)	•	•	•	•	•
O CROSSER		LOW (PUBLIE COULTOI MOUNTE)		•	•	•	

C-CROSSER		HFC (Hands Free Control Kit)	•	•	•	•	•
C-CROSSER		IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C-CROSSER		IP (Instrument Cluster Panel)	•	•	•	•	•
C-CROSSER		KEY (Electrionic Key Reader)	•	•	•	•	•
C-CROSSER		NAVI (Navigation)	•	•	•	•	•
C-CROSSER		PAM (Parking Assistance)	•	•	•	•	•
C-CROSSER		PDPC	•	•	•	•	•
C-CROSSER		PDPP	•	•	•	•	•
C-CROSSER		RBS (Rain And Brightness Sensor)	•	•	•	•	•
C-CROSSER		Radio	•	•	•	•	•
C-CROSSER		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C-CROSSER		SRS (Airbag)	•	•	•	•	•
C-CROSSER		Sunroof	•	•	•	•	•
C-CROSSER		TCM (Automatic Gearbox)	•	•	•	•	•
C-CROSSER		TCM (Gear Lever(Dct))	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System BOSCH 8.1)	 •	•	•	•	•
-				•	•	•	
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System)	+	-			
C-ELYSEE	C-ELYSEE	BSI (Built-in Systems Interface)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	CLC (Central Locking Control Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ECM (Engine Control Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	EPS (Electric Power Steering)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ESL (Electric Steering Lock)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	IP (Instrument Cluster Panel)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	KEY (Electrionic Key Reader)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	MAP (Multiplexed Addition Pump)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	MULS (Multifunction Screen)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	PAM (Parking Assistance)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	Radio	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SM (Services Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SRS (Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SRS (Autoliv Central Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C-ELYSEE	C-ELYSEE	Siren	•	•	•	•	•
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	TRU (Trailer Relay Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	VRD (Voltage Retaining Device)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	CLC (Central Locking Control Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	ECM (Engine Control Module)	•		•	•	•
			 •	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	KEY (Electrionic Key Reader)	 	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	SRS (Airbag)	+	-			
C-ELYSEE	C-ELYSEE (R3)	SRS (Autoliv Central Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ABS (Anti-lock brake System)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	AC (Air Conditioning)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ALM (Anti-theft Alarm)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	BSI (Built-in Systems Interface)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	CD (CD Player)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	DDM (Driver's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ECM (Engine Control Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	EPS (Electric Power Steering)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ERU (Engine Relay Unit)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	HFC (Hands Free Control Kit)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	IP (Instrument Cluster Panel)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	MULS (Multifunction Screen)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	PAM (Parking Assistance)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	PDM (Passenger's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	Radio	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	SRS (Airbag)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
		· · · · · · · · · · · · · · · · · · ·	1	<u> </u>		1	

Column								
OCCURR SURGER St.	C-QUATRE	C-QUATRE (4)	TEU (Telematics Unit RT3)	•	•	•	•	•
C 020722	C-QUATRE	C-QUATRE (5)	ABS (Anti-lock brake System)	•	•	•	•	•
CHARTER D. C. C. C. C. C. C.	C-QUATRE	C-QUATRE (5)	AC (Air Conditioning)	•	•	•	•	•
OCAMINE OCAMINE <t< td=""><td>C-QUATRE</td><td>C-QUATRE (5)</td><td>ALM (Anti-theft Alarm)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C-QUATRE	C-QUATRE (5)	ALM (Anti-theft Alarm)	•	•	•	•	•
CORDITE CORTITE CORTITE <t< td=""><td>C-QUATRE</td><td>C-QUATRE (5)</td><td>BSI (Built-in Systems Interface)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C-QUATRE	C-QUATRE (5)	BSI (Built-in Systems Interface)	•	•	•	•	•
COUNTY	C-QUATRE	C-QUATRE (5)		•	•	•	•	•
COUNTED CONTENT STATE	C-QUATRE	C-QUATRE (5)	DDM (Driver's Door Module)	•	•	•	•	•
COMMENT CONTRUE (S)	C-QUATRE	C-QUATRE (5)	ECM (Engine Control Module)	•	•	•	•	•
C-SMADE COMMEN	C-QUATRE	C-QUATRE (5)	EPS (Electric Power Steering)	•	•	•	•	•
C-GANTER C-GANTER (5)	C-QUATRE	C-QUATRE (5)	ERU (Engine Relay Unit)	•	•	•	•	•
CONTINE CONTINE CO	C-QUATRE	C-QUATRE (5)	HFC (Hands Free Control Kit)	•	•	•	•	•
COUNTRY COUNTRY (3) NM (Parking Variationarch)	C-QUATRE	C-QUATRE (5)	IP (Instrument Cluster Panel)	•	•	•	•	•
C-0001002 C-0000002 C-00000002 C-0000002 C-0000002 C-0000002 C-0000002 C-0000002 C-0000002 C-0000002 C-0000002 C-000002 C-00002 C	C-QUATRE	C-QUATRE (5)	MULS (Multifunction Screen)	•	•	•	•	•
C-QUATER C-QUATER CS	C-QUATRE	C-QUATRE (5)	PAM (Parking Assistance)	•	•	•	•	•
C-000708	C-QUATRE	C-QUATRE (5)	PDM (Passenger's Door Module)	•	•	•	•	•
C-003782	C-QUATRE	C-QUATRE (5)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C-GRIDER C-GRIDER GO		C-QUATRE (5)		•	•	•	•	•
C-GATTRE C-GATTRE (3) SPEC. (Stoceing Roof Birth Fired Courted Courted (3) C-GATTRE		C-QUATRE (5)	SRS (Airbag)	•	•	•	•	•
C-GATTE				•	•	•	•	
C-QUARTE C-QUARTE (5) TEU (Tolematics Unit NEO)								
C-TELORPEE				•				
C-TRIMBURE	•							
C-PECONNEE				•	•	•	•	•
C-PRICONFILE				•		•	•	•
C-TRIMBURE Dr. (CD Player)				_				
C-TRICONFEE								
C-TRICOPPIE BUIL COLFED Module								
C-TRICAMPRE								
C-TRIOMPHE				_				
C-TRICAMPRE								
C-TRIOMPHE								
C-TRICAMPRE						_		•
C-TRIONPHE				_				
C-TRIOMPHE				_				
C-TRIOMPHE								
C-TRIOMPHE				_				
C-TRIOMPHE					1	_		
C-TRIOMPHE SRS (Airbag)								
C-TRIOMPHE						_		
C-TRIOMPHE TCM (Automatic Gearbox)								
C-TRIOMPHE								
C-TRIOMPHE	<u> </u>							
C-ZERO								
C-ZERO								
C-ZERO				_				
C-ZERO								
BATT-01 (Traction Battery Cells Management (Module 01)) C-ZERO BATT-02 (Traction Battery Cells Management (Module 02)) BATT-03 (Traction Battery Cells Management (Module 03)) C-ZERO BATT-04 (Traction Battery Cells Management (Module 04)) C-ZERO BATT-05 (Traction Battery Cells Management (Module 05)) BATT-06 (Traction Battery Cells Management (Module 05)) BATT-07 (Traction Battery Cells Management (Module 07)) C-ZERO BATT-08 (Traction Battery Cells Management (Module 08)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 11)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 10))								
BATT-02 (Traction Battery Cells Management (Module 02)) C-ZERO BATT-03 (Traction Battery Cells Management (Module 03)) C-ZERO BATT-04 (Traction Battery Cells Management (Module 04)) C-ZERO BATT-05 (Traction Battery Cells Management (Module 05)) C-ZERO BATT-07 (Traction Battery Cells Management (Module 07)) C-ZERO BATT-08 (Traction Battery Cells Management (Module 07)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 08)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 10)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 10)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-10 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) D-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) D-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) D-ZERO BATT-11 (Traction Battery Cells								
BATT-03 (Traction Battery Cells Management (Module 03)) C-ZERO BATT-04 (Traction Battery Cells Management (Module 04)) C-ZERO BATT-05 (Traction Battery Cells Management (Module 05)) C-ZERO BATT-07 (Traction Battery Cells Management (Module 07)) C-ZERO BATT-08 (Traction Battery Cells Management (Module 08)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 08)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) C-ZERO BATT-10 (Module 11) C-ZERO BATT-09 (Traction Battery Cells Management (Module 11)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-09 (Module 10) C-ZERO BATT-09 (Traction Battery Cells Manage				_		_		
BATT-04 (Traction Battery Cells Management (Module 04)) C-ZERO BATT-05 (Traction Battery Cells Management (Module 05)) C-ZERO BATT-07 (Traction Battery Cells Management (Module 07)) C-ZERO BATT-08 (Traction Battery Cells Management (Module 08)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 08)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-09 (Traction Battery Cells Management (Module 09)) C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) C-ZERO DVT (Direct Voltage (DC/DC) Transformer) C-ZERO EMM (Electric Machine Management ECU) C-ZERO EVM (Electric Power Steering) C-ZERO EVM (Electric Vehicle Management ECU)								
BATT-05 (Traction Battery Cells Management (Module 05))				_				
C-ZERO BATT-07 (Traction Battery Cells Management (Module 07)) ● ● ● ● C-ZERO BATT-08 (Traction Battery Cells Management (Module 08)) ● ● ● ● C-ZERO BATT-09 (Traction Battery Cells Management (Module 09)) ● ● ● ● C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) ● ● ● ● C-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) ● ● ● ● C-ZERO DVT (Direct Voltage (DC/DC) Transformer) ● ● ● ● ● C-ZERO EMM (Electric Machine Management ECU) ● ● ● ● ● C-ZERO EPS (Electric Power Steering) ● ● ● ● ● ● C-ZERO EVM (Electric Vehicle Management ECU) ● <								
BATT-08 (Traction Battery Cells Management (Module 08))				_				
BATT-09 (Traction Battery Cells Management (Module 09))								
C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) C-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) C-ZERO DVT (Direct Voltage (DC/DC) Transformer) C-ZERO EMM (Electric Machine Management ECU) C-ZERO EPS (Electric Power Steering) EVM (Electric Vehicle Management ECU) EVM (Electric Vehicle Management ECU)								
C-ZERO BATT-11 (Traction Battery Cells Management (Module 11)) C-ZERO DVT (Direct Voltage (DC/DC) Transformer) C-ZERO EMM (Electric Machine Management ECU) C-ZERO EPS (Electric Power Steering) C-ZERO EVM (Electric Vehicle Management ECU) EVM (Electric Vehicle Management ECU)								
C-ZERO DVT (Direct Voltage (DC/DC) Transformer) • • • • • • C-ZERO EMM (Electric Machine Management ECU) • • • • • C-ZERO EPS (Electric Power Steering) • • • • • • C-ZERO EVM (Electric Vehicle Management ECU) • • • • • •				_				
C-ZERO EMM (Electric Machine Management ECU) C-ZERO EPS (Electric Power Steering) C-ZERO EVM (Electric Vehicle Management ECU) EVM (Electric Vehicle Management ECU)								
C-ZERO EPS (Electric Power Steering) • • • • • C-ZERO EVM (Electric Vehicle Management ECU) • • • • •	1				1	_	_	
C-ZERO EVM (Electric Vehicle Management ECU)								
Unit (vareway militing invioling)								
	S ELIKO		our (occount) withing mounting)			•		

C-ZERO		IP (Instrument Cluster Panel)	•	•	•	•	•
C-ZERO		Radio	•	•	•	•	•
C-ZERO		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C-ZERO		SM (Services Module)	•	•	•	•	•
C-ZERO		SRS (Airbag)	•	•	•	•	•
C1	C1 (B0)	ABS (Anti-lock brake System)	•	•	•	•	•
C1	C1 (B0)	ECM (Engine Control Module)	•	•	•	•	•
C1	C1 (B0)	EPS (Electric Power Steering)	•	•	•	•	•
C1	C1 (B0)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C1	C1 (B0)	Radio	•	•	•	•	•
C1	C1 (B0)	SRS (Airbag)	•	•	•	•	•
C1	C1 (B0)	TCM (Automatic Gearbox)	•	•	•	•	•
C1	C1 (B4)	ABS (Anti-lock brake System)	•	•	•	•	•
C1	C1 (B4)	AC (Air Conditioning)	•	•	•	•	•
C1	C1 (B4)	ECM (Engine Control Module)	•	•	•	•	•
C1	C1 (B4)	EPS (Electric Power Steering)	•	•	•	•	•
C1	C1 (B4)	IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access	•	•	•	•	•
		Electric Module)		_	_		
C1	C1 (B4)	IP (Instrument Cluster Panel) MULC/RD (Multifunction Video Camera And Remote Detection By	•	•	•	•	•
C1	C1 (B4)	MULC/RD (Multifunction video camera and Remote Detection By Laser Assembly)	•	•	•	•	•
C1	C1 (B4)	MULS (Multifunction Screen)	•	•	•	•	•
C1	C1 (B4)	SRS (Airbag)	•	•	•	•	•
C1	C1 (B4)	SSC (Stop And Start Control ECU)	•	•	•	•	•
C1	C1 (B4)	TCM (Automatic Gearbox)	•	•	•	•	•
C15		ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	Alarm	•	•	•	•	•
C2	C2 (CAN) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	CD (CD Player)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	ECM (Engine Control Module)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	EPS (Electric Power Steering)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	MULS (Multifunction Screen C)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	Radio	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SRS (Airbag)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SSC (ECU Reversible Stopstart Alternator)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	TEU (Telematics Unit RT4)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C2	C2 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
C2	C2 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2	C2 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C2	C2 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C2	C2 (CHINA)	SRS (Airbag)	•	•	•	•	•
C2	C2 (CHINA)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C2	C2 (CHINA)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	ABS (Anti-lock brake System TEVES MK70)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	Alarm	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	CD (CD Player)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	EPS (Electric Power Steering)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	ESP (Electronic Stability Program TEVES MK60)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•

C2	C2 (VAN) (2003 - 2006)	MULS (Multifunction Screen A)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	Radio	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	SRS (Airbag)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	SWSM (Switch Module Under Steering Wheel)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	
	C2 (VAN) (2003 – 2006)			•	•	•	
C2	C3 (2002 – 2006)	TEU (Telematics Unit)	•	•	•	•	
C3		ABS (Anti-lock brake System TEVES MK70)		•	•	•	
C3	C3 (2002 - 2006) C3 (2002 - 2006)	ABS (Anti-lock brake System)		•	•	•	
C3		AC (Air Conditioning)	-	_			
C3	C3 (2002 – 2006)	ADDG02	•	•	•	•	•
C3	C3 (2002 – 2006)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (2002 - 2006)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C3	C3 (2002 – 2006)	Alarm	•	•	•	•	•
C3	C3 (2002 - 2006)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (2002 – 2006)	CD (CD Player)	•	•	•	•	•
C3	C3 (2002 – 2006)	CD (External CD Player)	•	•	•	•	•
C3	C3 (2002 – 2006)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	DSM (Driver's School Module)	•	•	•	•	•
C3	C3 (2002 - 2006)	Display	•	•	•	•	•
C3	C3 (2002 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (2002 - 2006)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (2002 - 2006)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (2002 - 2006)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (2002 - 2006)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (2002 - 2006)	HFC (Hands free Control Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (2002 – 2006)	HHV (High Head Vision)	•	•	•	•	•
C3	C3 (2002 – 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (2002 - 2006)	KEY (Electrionic Key Reader)	•	•	•	•	•
C3	C3 (2002 - 2006)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (2002 - 2006)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (2002 - 2006)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (2002 – 2006)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULS (Multifunction Screen A)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3 (2002 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (2002 – 2006)	RBS (Rain And Brightness Sensor)		•	•	•	
C3	C3 (2002 – 2006)	RLS (Rain And Light Sensor)		•	•	•	
C3	C3 (2002 – 2006)	RADIO RADIO LIGHT SENSOR)	•	•	•	•	
C3	C3 (2002 – 2006)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	
	C3 (2002 - 2006)	SB (Seat Belts Not rastened LED Unit) SB (Seat Belts Reminder LED)	•	•	•	•	
C3			•	•	•	•	•
C3	C3 (2002 – 2006)	SM (Services Module) SDS (Airbor)	•	•	•	•	•
C3	C3 (2002 – 2006)	SRS (Airbag)					
C3	C3 (2002 - 2006)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (2002 – 2006)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
C3	C3 (2002 - 2006)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (2002 – 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C3	C3 (2002 – 2006)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (2002 - 2006)	Siren	•	•	•	•	•
C3	C3 (2002 - 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (2002 - 2006)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C3	C3 (2002 – 2006)	TEU (Telematics Unit Independent)	•	•	•	•	•
C3	C3 (2002 – 2006)	TEU (Telematics Unit RT3)	•	•	•	•	•
C3	C3 (2002 – 2006)	TEU (Telematics Unit RT5)	•	•	•	•	•
C3	C3 (2002 – 2006)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	VRD (Voltage Retaining Device)	•	•	•	•	•

C3 C3 (A51) AC (Air Conditioning) • • • • • • • • • • • • • • • • • • •								
Columb	C3	C3 (A51)	ABS (Anti-lock brake System)	•	•	•	•	•
G	C3	C3 (A51)	AC (Air Conditioning)	•	•	•	•	•
13	C3	C3 (A51)	ALM (Anti-theft Alarm)	•	•	•	•	•
12 12 15 15 15 15 15 15	C3	C3 (A51)	BATT (Battery Change Status Unit)	•	•	•	•	•
12 12 15 15 15 15 15 15	C3	C3 (A51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C C GS1	C3	C3 (A51)	DDM (Driver's Door Module)	•	•	•	•	•
25 25 26 26 27 27	C3	C3 (A51)	DSM (Driver's School Module)	•	•	•	•	•
Col.	C3	C3 (A51)	ECM (Engine Control Module)	•	•	•	•	•
Col.	C3	C3 (A51)	EPS (Electric Power Steering)	•	•	•	•	•
2 5.51	C3	C3 (A51)	ERU (Engine Relay Unit)	•	•	•	•	•
2 503	C3	C3 (A51)	HFC (Hands Free Control Kit)	•	•	•	•	•
Column	C3	C3 (A51)	HFR (High Frequency Receiver)	•	•	•	•	•
G	C3	C3 (A51)	IP (Instrument Cluster Panel)	•	•	•	•	•
Color	C3	C3 (A51)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
Col.	C3	C3 (A51)	MULD (Multifunction Display)	•	•	•	•	•
C	C3	C3 (A51)	PAM (Parking Assistance)	•	•	•	•	•
Col.	C3			•	•	•	•	•
Care	C3	C3 (A51)	Radio	•	•	•	•	•
Care	C3			•	•	•	•	•
C3	C3			•	•		•	•
Signature Sign	C3		,	•				
GG	C3			+	•			
GG	C3			•	•		•	
C3	C3			+				
GG			· · · · · · · · · · · · · · · · · · ·	•	•		•	•
GG				-				
C3				-				
G3				+				
C3	-			•	•		•	•
C3			-	+				
C3				+				
C3							•	•
C3				•				
C3				+				
C3				+				
C3					•		•	•
C3								
C3				+				
C3				+ -				
C3				-				
C3				+				
C3			*	<u> </u>				
C3 (AIRCROSS) (A88) RLS (Rain And Light Sensor)				+				
C3 C3 (AIRCROSS) (A88) SB (Seat Belts Not Fastened LED Unit) ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●				+				
C3 C3 (AIRCROSS) (A88) SM (Services Module) ● <td></td> <td></td> <td></td> <td>+</td> <td></td> <td></td> <td></td> <td></td>				+				
C3 C3 (AIRCROSS) (A88) SWIC (Steering Wheel With Integral Controls (VCI)) ●			,	+				
C3 C3 (AIRCROSS) (A88) SWSM(Switch Module Under The Steering Wheel (Top Of Column)) ● <t< td=""><td></td><td></td><td></td><td>+</td><td></td><td></td><td></td><td></td></t<>				+				
C3								
C3 C3 (AIRCROSS) (A88) TCM (Automatic Gearbox) ●								
C3				+				
C3				-				
C3				-				
C3 C3 (AIRCROSS) (Ai58) AC (Air Conditioning) • • • • • • • • C3 C3 (AIRCROSS) (Ai58) Alarm • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) BSI (Built-in Systems Interface) • • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) ECM (Engine Control Module) • • • • • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) EPS (Electric Power Steering) • • • • • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) IP (Instrument Cluster Panel) • • • • • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) PAM (Parking Assistance) • • • • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) RBS (Rain And Brightness Sensor) • • • • • • • • • • • •	-							
C3 C3 (AIRCROSS) (Ai58) Alarm • • • • • • C3 C3 (AIRCROSS) (Ai58) BSI (Built-in Systems Interface) • • • • • • • C3 C3 (AIRCROSS) (Ai58) ECM (Engine Control Module) • • • • • • • • C3 C3 (AIRCROSS) (Ai58) EPS (Electric Power Steering) • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) IP (Instrument Cluster Panel) • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) PAM (Parking Assistance) • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) RBS (Rain And Brightness Sensor) • • • • • • • • • • •					_			
C3 C3 (AIRCROSS) (Ai58) BSI (Built-in Systems Interface) • • • • • • • • • • • • • • • • • • •			-					
C3								
C3 C3 (AIRCROSS) (Ai58) EPS (Electric Power Steering) • • • • • • • C3 C3 (AIRCROSS) (Ai58) IP (Instrument Cluster Panel) • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) PAM (Parking Assistance) • • • • • • • • • • C3 C3 (AIRCROSS) (Ai58) RBS (Rain And Brightness Sensor) • • • • • • • • • • •				 				
C3 C3 (AIRCROSS) (Ai58) IP (Instrument Cluster Panel) • • • • • • C3 C3 (AIRCROSS) (Ai58) PAM (Parking Assistance) • • • • • • • C3 C3 (AIRCROSS) (Ai58) RBS (Rain And Brightness Sensor) • • • • • • • • •				 				
C3 C3 (AIRCROSS) (Ai58) PAM (Parking Assistance) • • • • • • C3 C3 (AIRCROSS) (Ai58) RBS (Rain And Brightness Sensor) • • • • • • • •	-			_	_		_	
C3 C3 (AIRCROSS) (Ai58) RBS (Rain And Brightness Sensor) • • • •				<u> </u>				
				+				
THE STATE OF THE S				 				
		,, , ,,,,,,,,,,,,,,,,,,,,,,,,,,	<u> </u>		_	-	-	

C3	C3 (AIRCROSS) (Ai58)	SM (Services Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SRS (Airbag)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (Ai51)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (Ai51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (Ai51)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (Ai51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (Ai51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (Ai51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (Ai51)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (Ai51)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (Ai51)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	•
C3	C3 (Ai51)	Radio	•	•	•	•	•
C3	C3 (Ai51)	SM (Services Module)	•	•	•	•	•
C3	C3 (Ai51)	SRS (Airbag)	•	•	•	•	•
C3	C3 (Ai51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (Ai51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (Ai51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (Ai51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (B618)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (B618)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (B618)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (B618)	CD (External CD Player)	•	•	•	•	•
C3	C3 (B618)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (B618)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (B618)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (B618)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (B618)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (B618)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (B618)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (B618)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (B618)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (B618)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (B618)	SM (Services Module)	•	•	•	•	•
C3	C3 (B618)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (B618)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (B618)	Siren	•	•	•	•	•
C3	C3 (B618)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (B618)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	MULS (Multifunction Screen)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	Radio	_ •	•	•	•	•

2								
Columb C	C3	C3 (PICASSO) (A58)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C	-			•	•	•	•	•
2				•	•	•	•	•
S. PHILSMON (2000)				•	•			•
C C C C C C C C C C		, , , ,		+				
C C C C C C C C C C				+				
C				<u> </u>				
1 9 9712885 (1.88)				+ -				
C PFLANSE (1989)				+ -				
C		, , , ,		+				
Color Colo				+				
2 17105803 (4109)				+	_			
12 17 17 17 17 17 17 17				<u> </u>				
Col.								
1			*	•				
C3				•				
C3				•			_	
Color								
C3				+	_			
C3				+ -				
C3				+ -				
C3	C3		SWSM(Switch Module Under The Steering Wheel(Top Of Column))	+	_			
C3	C3		TCM (Automatic Gearbox)	+				
C3	C3	C3 (PICASSO) (Ai58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3	C3 (PICASSO) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	AC (Air Conditioning)	•	•	•	•	•
C3 C3 C1 C2 C2 C2 C2 C2 C2 C2	C3	C3 (PLURIEL) (2002 - 2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	CD (CD Player)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	ERU (Engine Relay Unit)	•	•	•	•	•
C3 C3 C7 C7 C7 C7 C7 C7	C3	C3 (PLURIEL) (2002 - 2009)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	PAM (Parking Assistance)	•	•	•	•	•
C3				•	•	•	•	•
C3	C3	C3 (PLURIEL) (2002 - 2009)	Radio	•	•	•	•	•
C3		C3 (PLURIEL) (2002 - 2009)	SRS (SAC TEMIC)	•	•	•	•	•
C3 C3 (PLURIEL) (2002 - 2009) TCM (Controlled Manual Gearbox ECU) ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●		C3 (PLURIEL) (2002 - 2009)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C3				•	•	•	•	•
C3				•	•	•	•	•
C3			,	 	_		_	
C3				+				
C3				+				
C3				+ -				
C3 C3 (R) (2006 - 2009) ECM (Engine Control Module) ● ● ● ● C3 C3 (R) (2006 - 2009) EPS (Electric Power Steering) ● ● ● ● C3 C3 (R) (2006 - 2009) ERU (Engine Relay Unit) ● ● ● ● ● C3 C3 (R) (2006 - 2009) HFC (Hands Free Control Kit) ●				+	_			
C3 C3 (R) (2006 - 2009) EPS (Electric Power Steering) ● ● ● ● C3 C3 (R) (2006 - 2009) ERU (Engine Relay Unit) ●				+				
G3 C3 (R) (2006 - 2009) ERU (Engine Relay Unit) ● ● ● G3 C3 (R) (2006 - 2009) HFC (Hands Free Control Kit) ● ● ● ● C3 C3 (R) (2006 - 2009) IP (Instrument Cluster Panel) ● ● ● ● C3 C3 (R) (2006 - 2009) MULS (Multifunction Screen A) ● ● ● ● C3 C3 (R) (2006 - 2009) PAM (Parking Assistance) ● ● ● ● C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● ● ● ● C3 C3 (R) (2006 - 2009) Radio ● ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● <td></td> <td></td> <td></td> <td>+</td> <td></td> <td></td> <td></td> <td></td>				+				
C3 C3 (R) (2006 - 2009) HFC (Hands Free Control Kit) ● ● ● ● C3 C3 (R) (2006 - 2009) IP (Instrument Cluster Panel) ● ● ● ● C3 C3 (R) (2006 - 2009) MULS (Multifunction Screen A) ● ● ● ● C3 C3 (R) (2006 - 2009) PAM (Parking Assistance) ● ● ● ● C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● ● ● ● C3 C3 (R) (2006 - 2009) Radio ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ●								
C3 C3 (R) (2006 - 2009) IP (Instrument Cluster Panel) ● ● ● C3 C3 (R) (2006 - 2009) MULS (Multifunction Screen A) ● ● ● C3 C3 (R) (2006 - 2009) PAM (Parking Assistance) ● ● ● ● C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● ● ● ● C3 C3 (R) (2006 - 2009) Radio ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●	-			<u> </u>				
C3 C3 (R) (2006 - 2009) MULS (Multifunction Screen A) ● ● ● ● C3 C3 (R) (2006 - 2009) PAM (Parking Assistance) ● ● ● ● ● C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● ● ● ● ● C3 C3 (R) (2006 - 2009) Radio ● ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●				+				
C3 C3 (R) (2006 - 2009) PAM (Parking Assistance) ● ● ● ● C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● ● ● ● C3 C3 (R) (2006 - 2009) Radio ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●								
C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● ● ● ● C3 C3 (R) (2006 - 2009) Radio ● ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●				+ -				
C3 C3 (R) (2006 - 2009) Radio ● ● ● ● C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●				+ -				
C3 C3 (R) (2006 - 2009) SRS (SAC TEMIC) ● ● ● ● C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●				+ -				
C3 C3 (R) (2006 - 2009) SWSM(Switch Module At The Steering Wheel) ● ● ● ● C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) ● ● ● ● C3 C3 (XR) ABS (Anti-lock brake System) ● ● ● ● C3 C3 (XR) ASM (Anti-slip Mode Selector) ● ● ● ●				+	_			
C3 C3 (R) (2006 - 2009) TCM (Automatic Gearbox) • • • • • C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) • • • • • C3 C3 (XR) ABS (Anti-lock brake System) • • • • • • C3 C3 (XR) ASM (Anti-slip Mode Selector) • • • • • •				+ -				
C3 C3 (R) (2006 - 2009) TEU (Telematics Unit RT3) • • • • • C3 C3 (XR) ABS (Anti-lock brake System) • • • • • • C3 C3 (XR) ASM (Anti-slip Mode Selector) • • • • • •				+				
C3 C3 (XR) ABS (Anti-lock brake System) • • • • • C3 C3 (XR) ASM (Anti-slip Mode Selector) • • • • • •								
C3 C3 (XR) ASM (Anti-slip Mode Selector) • • • •				+				
				+	_			
[C2 (VD) DATT (D Ct Ct tillt)	-			•	_			
DAII (Battery Charge Status Unit)	C3	C3 (XR)	BATT (Battery Charge Status Unit)	•	•	•	•	•

C3	
C3	
C3 C3 (XR) KEY (Electrionic Key Reader) • • • • • • • • • • • • • • • • • • •	
C3 C3 (XR) MCP (Multiplexed Control Panel) ● ● C3 C3 (XR) MULS (Multiplexed Control Panel) ● ● C3 C3 (XR) PAM (Parking Assistance) ● ● C3 C3 (XR) Radio ● ● C3 C3 (XR) SM (Services Module) ● ● C3 C3 (XR) SKS (Airbag) ● ● C3 C3 (XR) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake	
C3 C3 (XR) MULS (Multifunction Screen) ● ● C3 C3 (XR) PAM (Parking Assistance) ● ● C3 C3 (XR) Radio ● ● C3 C3 (XR) SM (Services Module) ● ● C3 C3 (XR) SRS (Airbag) ● ● C3 C3 (XR) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ●	
C3 C3 (XR) PAM (Parking Assistance) ● ● ● C3 C3 (XR) Radio ● ● ● C3 C3 (XR) SM (Services Module) ● ● ● C3 C3 (XR) SRS (Airbag) ● ● ● C3 C3 (XR) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● C4 C4 (2004 – 2010) ABS (Anti-lock brake System) ● ● C4 C4 (2004 – 2010) AC (Air Conditioning) ● ● C4 C4 (2004 – 2010) ALM (Anti-theft Alarm) ● ● C4 C4 (2004 – 2010) AMP (Audio Amplifier) ● ● C4 C4 (2004 –	
C3 C3 (XR) Radio ● ● ● ● C3 C3 (XR) SM (Services Module) ● ● ● ● C3 C3 (XR) SRS (Airbag) ● ● ● ● C3 C3 (XR) SWEC (Steering Wheel With Integral Controls (VCI)) ● ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● ● C4 C4 (2004 – 2010) ABS (Anti-lock brake System) ● ● ● C4 C4 (2004 – 2010) AC (Air Conditioning) ● ● ● ● C4 C4 (2004 – 2010) ALM (Anti-theft Alarm) ● ● ● ● ● C4 C4 (2004 – 2010) AMP (Audio Amplifier) ● ● ● ● ● C4 C4	
G3 C3 (XR) SM (Services Module) ● ● ● ● C3 C3 (XR) SRS (Airbag) ● ● ● ● C3 C3 (XR) SWSM (Switch Module Under The Steering Wheel) ● ● ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ● ● ● ● C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) ● ● ● ● C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) ● <	• • • • • • • • • • • • • • • • • • •
G3 C3 (XR) SRS (Airbag) ● ● ● C3 C3 (XR) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ● ● ● C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) ● ● ● C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) ● ● ● C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) ● ● ●	•
C3 C3 (XR) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● ● C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ● ● ● C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) ● ● ● C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) ● ● ● C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) ● ● ●	
C3 C3 (XR) SWSM(Switch Module Under The Steering Wheel) ● ● ● C3 C3 (XR) TCM (Automatic Gearbox) ● ● ● C3 C3 (XR) TEU (Telematics Unit) ● ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ● ● ● C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) ● ● ● C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) ● ● ● C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) ● ● ●	•
C3	•
C3 C3 (XR) TEU (Telematics Unit) ● ● ● C3 C3 (XR) VRD (Voltage Retaining Device) ● ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ● ● ● C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) ● ● ● C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) ● ● ● ● C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) ● ● ● ●	•
C3 C3 (XR) VRD (Voltage Retaining Device) ● ● ● C4 C4 (2004 - 2010) ABS (Anti-lock brake System) ● ● ● C4 C4 (2004 - 2010) AC (Air Conditioning) ● ● ● C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) ● ● ● C4 C4 (2004 - 2010) AMP (Audio Amplifier) ● ● ● C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) ● ● ● C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) ● ● ● C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) ● ● ●	•
C4 C4 (2004 - 2010) ABS (Anti-lock brake System) • • • • • C4 C4 (2004 - 2010) AC (Air Conditioning) • • • • • • C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) • • • • • • C4 C4 (2004 - 2010) AMP (Audio Amplifier) • • • • • C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) • • • • • C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) • • • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • • • • •	•
C4 C4 (2004 - 2010) AC (Air Conditioning) • • • • • C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) • • • • • C4 C4 (2004 - 2010) AMP (Audio Amplifier) • • • • C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) • • • • • C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) • • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • • • •	•
C4 C4 (2004 - 2010) ALM (Anti-theft Alarm) • • • • • C4 C4 (2004 - 2010) AMP (Audio Amplifier) • • • • • C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) • • • • • • C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) • • • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • • • •	•
C4 C4 (2004 - 2010) AMP (Audio Amplifier) • • • • • C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) • • • • • C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) • • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • • • •	•
C4 C4 (2004 - 2010) ASM (Anti-slip Mode Selector) • • • • C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • • •	•
C4 C4 (2004 - 2010) AUTH (Starting Authorisation ECU) • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • •	•
C4	•
	•
	•
C4 C4 (2004 - 2010) BATT (Battery Charge Status Unit)	-
C4	
C4 C4 (2004 - 2010) BSI (Built-in Systems Interface) • • •	
C4	•
C4 C4 (2004 - 2010) DPCRF (Rear Final Drive Piloted Clutch) \bullet \bullet \bullet	•
C4	•
C4 C4 (2004 - 2010) EPS (Electric Power Steering Electric Pump Unit) • • •	•
C4	•
C4 C4 (2004 - 2010) IMMO (Locking And Immobiliser Control Module) • • •	•
C4	•
C4 C4 (2004 - 2010) MSI (Matrix Screen Integral To The Instrument Panel)	•
C4 C4 (2004 - 2010) MULC (Multifunction Camera Or Multifunction Video Camera)	•
C4	•

1								
03	C4	C4 (2004 - 2010)	PAM (Parking Assistance)	•	•	•	•	•
St.	C4	C4 (2004 - 2010)	PDM (Passenger's Door Module)	•	•	•	•	•
St. Command Command	C4	C4 (2004 - 2010)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
St	C4	C4 (2004 - 2010)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
GEORGIA CRESS CR	C4	C4 (2004 - 2010)	RCU (Rev Counter Unit)	•	•	•	•	•
G. G. G. G. G. G. G. G.	C4	C4 (2004 - 2010)	RLS (Rain And Light Sensor)	•	•	•	•	•
Cal	C4	C4 (2004 - 2010)		•	•	•	•	•
C. C. C. C. C. C. C. C.	C4	C4 (2004 - 2010)	Radio	•	•	•	•	•
St. COM 1998	C4	C4 (2004 - 2010)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
G. G. C. C. C. C. C. C.	C4	C4 (2004 - 2010)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
1	C4	C4 (2004 - 2010)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
Col.	C4	C4 (2004 - 2010)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
St. St.	C4	C4 (2004 - 2010)	SFB (Signalling Fuse Box)	•	•	•	•	•
St. 1004 - 2010 St. Supply Projection List Management Unit St. St.		C4 (2004 - 2010)		•	•	•	•	•
George Group Gro			SPMU (Supply Protection And Management Unit)	•	•	•	•	•
Georgia		·		•	•	•	•	•
G		·		•	•	•	•	•
Section Sect	C4	,		•	•	•	•	•
C4	C4	· ·	* *	•	_		•	•
George	C4	·		•				
Care	C4	·		_				
C4		· ·		-	•			•
C1 C2004 - 2010		·		•				
George G		·		•	•		•	•
G4				•	•		•	•
C4 C2004 - 2010		·		-	_			
C1				-	_			
C4 C4 C2094 - 2010 V0A (Vehicle Distance Assistance)		·		-				
C4 ○4 (2004 - 2010) VRD (Voltage Retaining Device) ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●		· ·	·	•	•	•	•	•
C4	-	·		+ -				
C4 C4 (AIRCROSS) ABS (Anti-lock brake System) ●<		·		-				
C1							•	•
C4								
C4 C4 (AIRCROSS) AUTH (Starting Authorisation ECU) ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●		, ,		_				
C4	-			+ -				
C4 C4 (AIRCROSS) DDM (Driver's Door Module) • • • • • • • • • • • • • • • • • • •				-	•	•	•	•
C4 C4 (AIRCROSS) DHL (Directional Headlamps) • • • • • • • • • • • • • • • • • • •				+				
C4				-				
C4				+ -	_			
C4	-			-	_			
C4 C4 (AIRCROSS) 1MM0 (Locking And Immobiliser Control Module) ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●				+ -				
C4 C4 (AIRCROSS) IP (Instrument Cluster Panel) • • • • • • • • • • • • • • • • • • •				 				
C4 C4 (AIRCROSS) NAVI (Navigation) Image: Capture of the content				-				
C4 C4 (AIRCROSS) PAM (Parking Assistance) ●				-				
C4 C4 (AIRCROSS) RBS (Rain And Brightness Sensor) ● <t< td=""><td></td><td></td><td></td><td>+ -</td><td></td><td></td><td></td><td></td></t<>				+ -				
C4 C4 (AIRCROSS) ROR (Radio Or Radiotelephone (Radio Part)) ● ● <td>C4</td> <td></td> <td></td> <td>-</td> <td>_</td> <td></td> <td></td> <td></td>	C4			-	_			
C4 C4 (AIRCROSS) SAS (Steering Wheel Angle Sensor) ● <	-			+ -				
C4 C4 (AIRCROSS) SRS (Airbag) Image: Capter of the content of the			-					
C4 C4 (AIRCROSS) SSC (Calculation Stop And Sart) • • • • • • • • • • • • • • • • • • •	C4			_				
C4 C4 (AIRCROSS) TCM (Automatic Gearbox) C4 C4 (B7) (2010 -) ABS (Anti-lock brake System) C4 C4 (B7) (2010 -) AC (Air Conditioning) C4 C4 (B7) (2010 -) ALM (Anti-theft Alarm) C4 C4 (B7) (2010 -) AMP (Audio Amplifier) C4 C4 (B7) (2010 -) BATT (Battery Charge Status Unit) C4 C4 (B7) (2010 -) BSI (Built-in Systems Interface) C4 C4 (B7) (2010 -) BSM (Monitoring Of The Blind Spot) C4 C4 (B7) (2010 -) DDM (Driver's Door Module) C4 C4 (B7) (2010 -) DHL (Directional Headlamps) C4 C4 (B7) (2010 -) DSM (Driver's School Module)				-				
C4				-	_			
C4 C4 (B7) (2010 -) AC (Air Conditioning) • • • • • • • C4 C4 (B7) (2010 -) ALM (Anti-theft Alarm) • • • • • • • C4 C4 (B7) (2010 -) AMP (Audio Amplifier) • • • • • • C4 C4 (B7) (2010 -) BATT (Battery Charge Status Unit) • • • • • • • C4 C4 (B7) (2010 -) BSI (Built-in Systems Interface) • • • • • • • C4 C4 (B7) (2010 -) BSM (Monitoring Of The Blind Spot) • • • • • • • C4 C4 (B7) (2010 -) DDM (Driver's Door Module) • • • • • • • C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • • • •	C4			-	_			
C4 C4 (B7) (2010 -) ALM (Anti-theft Alarm) • • • • • • C4 C4 (B7) (2010 -) AMP (Audio Amplifier) • • • • • • C4 C4 (B7) (2010 -) BATT (Battery Charge Status Unit) • • • • • • • C4 C4 (B7) (2010 -) BSI (Built-in Systems Interface) • • • • • • • C4 C4 (B7) (2010 -) BSM (Monitoring Of The Blind Spot) • • • • • • • • C4 C4 (B7) (2010 -) DDM (Driver's Door Module) • • • • • • • • C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • • • • • •	C4			-	_			
C4 C4 (B7) (2010 -) AMP (Audio Amplifier) • • • • • • • C4 C4 (B7) (2010 -) BATT (Battery Charge Status Unit) • • • • • • • • • C4 C4 (B7) (2010 -) BSI (Built-in Systems Interface) • • • • • • • • • • C4 C4 (B7) (2010 -) BSM (Monitoring Of The Blind Spot) • • • • • • • • • • C4 C4 (B7) (2010 -) DDM (Driver's Door Module) • • • • • • • • • • C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • • • • • •	C4			•	•			•
C4 C4 (B7) (2010 -) BATT (Battery Charge Status Unit) • • • • • • • C4 C4 (B7) (2010 -) BSI (Built-in Systems Interface) • • • • • • • • • C4 C4 (B7) (2010 -) BSM (Monitoring Of The Blind Spot) • • • • • • • • • C4 C4 (B7) (2010 -) DDM (Driver's Door Module) • • • • • • • • • C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • • • •	C4			•	•			
C4 C4 (B7) (2010 -) BSI (Built-in Systems Interface) • • • • • • • • • • • • • • • • • • •	C4			•	•		•	•
C4 C4 (B7) (2010 -) BSM (Monitoring Of The Blind Spot) • • • • • • C4 C4 (B7) (2010 -) DDM (Driver's Door Module) • • • • • • • C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • • • •	C4			•				
C4 C4 (B7) (2010 -) DDM (Driver's Door Module) • • • • • • C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • • •	C4			•			_	
C4 C4 (B7) (2010 -) DHL (Directional Headlamps) • • • • • C4 C4 (B7) (2010 -) DSM (Driver's School Module) • • • • • •	C4			_	_		_	
C4	C4			+ -				
	C4			-	_			
				•				
		•	•	•				

C4	C4 (B7) (2010 -)	Display/Telematics	•	•	•	•	•
C4	C4 (B7) (2010 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (B7) (2010 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (B7) (2010 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (B7) (2010 -)	PAM (Parking Assistance)	•	•	•	•	
C4	C4 (B7) (2010 -)			•	•	•	
	C4 (B7) (2010 -)	RBS (Rain And Brightness Sensor)		•	•	•	
C4		Radio	-		_		
C4	C4 (B7) (2010 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (B7) (2010 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (B7) (2010 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (B7) (2010 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (B7) (2010 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	Radio	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SM (Services Module)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SRS (Airbag)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	Siren	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TEU (Telematics Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (CACTUS)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (CACTUS)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (CACTUS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (CACTUS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (CACTUS)	CD (External CD Player)	•	•	•	•	•
C4	C4 (CACTUS)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (CACTUS)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (CACTUS)	IP (Instrument Cluster Panel)	•	•	•	•	
C4	C4 (CACTUS)	MCP (Multiplexed Control Panel)	•	•	•	•	
C4 C4	C4 (CACTUS)	MDAP (Multiplexed Diesel Additive Pump)		•	•	•	
	,	,			_	-	

C4	C4 (CACTUS)	MULS (Multifunction Screen)	•	•	•	•	•
C4	C4 (CACTUS)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (CACTUS)	RLS (Rain And Light Sensor)	•	•	•	•	•
C4	C4 (CACTUS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (CACTUS)	SM (Services Module)	•	•	•	•	•
C4	C4 (CACTUS)	SRS (Airbag)	•	•	•	•	
C4	C4 (CACTUS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (CACTUS)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
C4	C4 (CACTUS)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (CACTUS)	TRU (Trailer Relay Unit)	—	•	•	•	
C4	C4 (CACTUS)	TS (Touch Screen)		•	•	•	
				•	•	•	
C4	C4 (CACTUS)	VRD (Voltage Retaining Device)	—	•	•	•	
C4	C4 (L) (B7)	ABS (Anti-lock brake System)	—	•	•	•	
C4	C4 (L) (B7)	AC (Air Conditioning)	-	H	_		
C4	C4 (L) (B7)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (L) (B7)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (L) (B7)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (L) (B7)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (L) (B7)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (L) (B7)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (L) (B7)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (L) (B7)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (L) (B7)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (L) (B7)	Display/Telematics	•	•	•	•	•
C4	C4 (L) (B7)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (L) (B7)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (L) (B7)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (L) (B7)	ERU (Enging Relay Unit)	•	•	•	•	•
C4	C4 (L) (B7)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (L) (B7)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (L) (B7)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (L) (B7)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (L) (B7)	List_VEH_C_C4_SEDAN_	•	•	•	•	•
C4	C4 (L) (B7)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (L) (B7)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (L) (B7)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (L) (B7)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (L) (B7)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (L) (B7)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (L) (B7)	Radio	•	•	•	•	•
C4	C4 (L) (B7)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (L) (B7)	SM (Services Module)	•	•	•	•	•
C4	C4 (L) (B7)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (L) (B7)	SRS (Airbag)	•	•	•	•	•
C4	C4 (L) (B7)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (L) (B7)	SWSM(Switch Module Under The Steering Wheel (Top Of Column))	•	•	•	•	•
C4	C4 (L) (B7)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (L) (B7)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (L) (B7)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (L) (B7)	VRD (Voltage Retaining Device)	•	•	•	•	
C4	C4 (PICASSO) (2006 – 2013)	ABS (Anti-lock brake System)	—	•	•	•	
C4	C4 (PICASSO) (2006 – 2013)	AC (Air Conditioning)	—	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	ALM (Anti-theft Alarm)	 •	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	ALM (Anti-theit Alarm) AMP (Audio Amplifier)	-	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)			•	•	•	•
-		BATT (Battery Change Status Unit)	+	_			
C4	C4 (PICASSO) (2006 - 2013)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	BCM (Body Control Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	CD (CD Player)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	CD (External CD Player)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DDM (Driver's Door Module)	•	•	•	•	•

C4	C4 (PICASSO) (2006 - 2013)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Display/Telematics	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 – 2013)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	EPS (Electric Power Steering)	•	•	•	•	
C4	C4 (PICASSO) (2006 – 2013)	ERU (Engine Relay Unit)	•	•	•	•	
	C4 (PICASSO) (2006 – 2013)	ESL (Electric Steering Lock)	•	•	•	•	
C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands Free Control Kit)	•	•	•	•	
C4	C4 (PICASSO) (2006 - 2013) C4 (PICASSO) (2006 - 2013)	HFC (Hands free Control Unit)	•	•	•	•	
C4				•	•	•	
C4	C4 (PICASSO) (2006 - 2013)	HFR (High Frequency Receiver)	-	_			
C4	C4 (PICASSO) (2006 - 2013)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Radio	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SM (Services Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SRS (Airbag)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Siren	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	TEU (Telematics Unit SMEG_PLUS)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Wiper (Windscreen Wiper)	•	•	•	•	•
	C4 (PICASSO) (B78) (2013 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	BATT (Battery Charge Status Unit)	•	•	•	•	
C4	C4 (PICASSO) (B78) (2013 -)	BCM (Body Control Module)	•	•	•	•	
C4 C4	C4 (PICASSO) (B78) (2013 -)	BSI (Built-in Systems Interface)	•	•	•	•	
C4 C4	C4 (PICASSO) (B78) (2013 -)	CD (External CD Player)	•	•	•	•	
	C4 (PICASSO) (B78) (2013 -)	DDM (Driver's Door Module)	•	•	•	•	
C4	C4 (PICASSO) (B78) (2013 -)		•	•	•	•	•
C4		DHL (Directional Headlamps)	•	•	•	•	•
C4		DSMU (Driver's Seat Memory Unit)	-	_		_	
C4	C4 (PICASSO) (B78) (2013 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	KEY (Electrionic Key Reader)	•	•	•	•	•

C4	C4 (PICASSO) (B78) (2013 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Siren	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TEU (Telematics Unit SMEG PLUS)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	CD (CD Player)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Display/Telematics	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Radio	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (2001 - 2004)	ABS (Anti-lock brake System TEVES MK60)	•	•	•	•	•
C5	C5 (2001 - 2004)	ABS (Anti-lock brake System)	•	•	•	•	•

C5	C5 (2001 - 2004)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (2001 - 2004)	ADDGO2	•	•	•	•	•
C5	C5 (2001 - 2004)	ADDG03	•	•	•	•	•
C5	C5 (2001 - 2004)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (2001 - 2004)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (2001 - 2004)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (2001 - 2004)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (2001 - 2004)	Alarm	•	•	•	•	•
C5	C5 (2001 - 2004)	BATT (Battery Change Status Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (2001 - 2004)	BHU (Body Height Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (2001 - 2004)	CD (CD Player)	•	•	•	•	•
C5	C5 (2001 - 2004)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (2001 - 2004)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (2001 - 2004)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	Display/Telematics	•	•	•	•	•
C5	C5 (2001 – 2004)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (2001 – 2004)	EPB (Electric Secondary Brake)	•	•	•	•	•
C5	C5 (2001 – 2004)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (2001 – 2004)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (2001 – 2004)	ESP (Electronic Stability Program)	•	•	•	•	•
C5	C5 (2001 – 2004)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	C5 (2001 – 2004)	HFR (High Frequency Receiver)	•	•	•	•	•
C5	C5 (2001 – 2004)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (2001 – 2004)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C5	C5 (2001 – 2004)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (2001 – 2004)	MDP CONDUCT	•	•	•	•	•
C5	C5 (2001 – 2004)	MDP PASSAG	•	•	•	•	•
C5	C5 (2001 - 2004)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C5	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
C5	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM C)	•	•	•	•	•
	C5 (2001 - 2004)	MULD (Multifunction Display)	•	•	•	•	•
C5	C5 (2001 - 2004)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (2001 - 2004)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (2001 - 2004)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (2001 – 2004)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (2001 – 2004)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (2001 – 2004)	Radio	•	•	•	•	•
C5	C5 (2001 – 2004)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (2001 – 2004)	SM (Services Module)	•	•	•	•	•
C5	C5 (2001 – 2004)	SRS (Airbag)	•	•	•	•	•
C5	C5 (2001 – 2004)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (2001 – 2004)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (2001 – 2004)	SSP (Suspension Control System)	•	•	•	•	•
C5	C5 (2001 – 2004)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (2001 – 2004)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (2001 – 2004)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (2001 – 2004)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
C5	C5 (2001 – 2004)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (2001 – 2004)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (2001 – 2004)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (2001 – 2004)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (2001 – 2004)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (2001 – 2004)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (2001 – 2004)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (3rd Generation)	ABS (Anti-lock brake System)	•	•	•	•	•
	<u>, , , , , , , , , , , , , , , , , , , </u>	· ′					

C5	C5 (3rd Generation)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (3rd Generation)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (3rd Generation)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (3rd Generation)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (3rd Generation)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (3rd Generation)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (3rd Generation)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (3rd Generation)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (3rd Generation)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (3rd Generation)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (3rd Generation)	SM (Services Module)	•	•	•	•	•
C5	C5 (3rd Generation)	SRS (Airbag)	•	•	•	•	•
C5	C5 (3rd Generation)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (3rd Generation)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (3rd Generation)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (3rd Generation)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (3rd Generation)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (3rd Generation)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (AIRCROSS)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (AIRCROSS)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (AIRCROSS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (AIRCROSS)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (AIRCROSS)	ESL (Electric Steering Lock)	•	•	•	•	•
	C5 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	MCP (Multiplexed Control Panel)	•	•	•	•	•
	C5 (AIRCROSS)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C5	C5 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (AIRCROSS)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (AIRCROSS)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (AIRCROSS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	SM (Services Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	SRS (Airbag)	•	•	•	•	•
C5	C5 (AIRCROSS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (AIRCROSS)	SWSM(Switch Module Under The Steering Wheel (Top Of Column))	•	•	•	•	•
C5	C5 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (AIRCROSS)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	ADDG03	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	Alarm	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	CD (CD Player)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	EPS (Electric Power Steering)	 •	•	•	•	•
C5	C5 (R) (2004 – 2007)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	ESP (Electronic Stability Program)	+ -	•	•	•	•
C5	(-0) (2001 2001)		+ -				•
· -	C5 (R) (2004 - 2007)	HFC (Hands Free Control Kit)		•	•	•	
C5	C5 (R) (2004 - 2007) C5 (R) (2004 - 2007)	HFC (Hands Free Control Kit) IP (Instrument Cluster Panel)	•	•	•	•	•
C5 C5	C5 (R) (2004 – 2007) C5 (R) (2004 – 2007) C5 (R) (2004 – 2007)	HFC (Hands Free Control Kit) IP (Instrument Cluster Panel) MDP CONDUCT	+				

C5	C5 (R) (2004 - 2007)	MDP PASSAG	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	MULD (Multifunction Display SAGEM C)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	Radio	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (X7) (2007 -)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (X7) (2007 -)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (X7) (2007 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (X7) (2007 -)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BHU (Body Height Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (X7) (2007 -)	CD (CD Player)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DDM (Driver's Door Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Display/Telematics	•	•	•	•	•
C5	C5 (X7) (2007 -)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C5	C5 (X7) (2007 -)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (X7) (2007 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C5	C5 (X7) (2007 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (X7) (2007 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C5	C5 (X7) (2007 -)	MULD (Multifunction Display)	•	•	•	•	•
C5	C5 (X7) (2007 -)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (X7) (2007 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Radio	•	•	•	•	•
C5	C5 (X7) (2007 -)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SM (Services Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SRS (Airbag)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SSP (Suspension Control System)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (X7) (2007 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (X7) (2007 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6	AC (Air Conditioning)	•	•	•	•	•
C6	C6	AC (Rear Air Conditioning Panel)	•	•	•	•	•
C6	C6	AH (Additional Heating)	•	•	•	•	•
C6	C6	ALM (Anti-theft Alarm)	•	•	•	•	•
C6	C6	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6	BATT (Battery Change Status Unit)	•	•	•	•	•
C6	C6	BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6	BRU (Boot Relay Unit)	•	•	•	•	•
C6	C6	BSI (Built-in Systems Interface)	•	•	•	•	•
C6	C6	CD (CD Player)	•	•	•	•	•
C6	C6	DDC (Driver's Door Control Panel)	•	•	•	•	•
C6	C6	DDM (Driver's Door Module)	•	•	•	•	•
C6	C6	DHL (Directional Headlamps)	•	•	•	•	•

C6	C6	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C6	C6	Display/Telematics	•	•	•	•	•
C6	C6	ECM (Engine Control Module)	•	•	•	•	•
C6	C6	EPB (Electric Secondary Brake)	•	•	•	•	•
C6	C6	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6	HFC (Hands Free Control Kit)	•	•	•	•	•
C6	C6	HFR (High Frequency Receiver)	•	•	•	•	•
C6	C6	HHV (High Head Vision)	•	•	•	•	•
C6	C6	HLL (Left Hand Headlamp)	•	•	•	•	•
C6	C6	HLR (Right Hand Headlamp)	•	•	•	•	•
C6	C6	IP (Instrument Cluster Panel)	•	•	•	•	•
C6	C6	LDWS (Lane Departure Warning System)	•	•	•	•	•
C6	C6	MCP (Multiplexed Control Panel)	•		•	•	•
C6	C6	MPD (Moving Panel Deflector)	•	•	•	•	•
	C6		•	•	•	•	•
C6		MULC (Multifunction Video Camera (CMF))		•	•		
C6	C6	MULD (Multifunction Display)	•			•	•
C6	C6	PAM (Parking Assistance)	•	•	•	•	•
C6	C6	PDM (Passenger's Door Module)	•	•	•	•	•
C6	C6	PID (Pedestrian Impact Detection)	•	•	•	•	•
C6	C6	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	•
C6	C6	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C6	C6	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6	RSM (Rear Seat Memorising Unit)	•	•	•	•	•
C6	C6	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6	Radio	•	•	•	•	•
C6	C6	SM (Services Module)	•	•	•	•	•
C6	C6	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C6	C6	SRS (Airbag)	•	•	•	•	•
C6	C6	SSLH (LH Seat Switch Panel)	•	•	•	•	•
C6	C6	SSP (Suspension Control System)	•	•	•	•	•
C6	C6	SSRH (RH Seat Switch Panel)	•	•	•	•	•
C6	C6	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6	TRU (Trailer Relay Unit)	•	•	•	•	•
C6	C6	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C6	C6	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6	VRD (Voltage Retaining Device)	•	•	•	•	•
C6	C6	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6 (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C6	C6 (CHINA)	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C6	C6 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C6	C6 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C6	C6 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	
C6	C6 (CHINA)	IP (Instrument Cluster Panel)	•	•		•	•
C6	C6 (CHINA)		•	•	•	•	•
	C6 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6		MULC (Multifunction Video Camera (CMF))					
C6	C6 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
C6	C6 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6 (CHINA)	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6 (CHINA)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6 (CHINA)	SM (Services Module)	•	•	•	•	•
C6	C6 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C6	C6 (CHINA)	SRS (Airbag)	•	•	•	•	•

C6	C6 (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6 (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6 (CHINA)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6 (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
C6	C6 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	AH (Additional Heating)	•		•	•	
C8	C8 (CAN) (2005 -)	ALM (Anti-theft Alarm)	•		•	•	
C8	C8 (CAN) (2005 -)	BSI (Built-in Systems Interface)	•		•	•	
		·	•	•	•	•	
C8	C8 (CAN) (2005 -)	CD (CD Player)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DAF (Diesel Additive Function)					
C8	C8 (CAN) (2005 -)	DDM (Driver's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	Display/Telematics	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ECM (Engine Control Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	EPS (Electric Power Steering)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HLL (Left Hand Headlamp)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HLR (Right Hand Headlamp)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Leds And Odometer ECU)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	MULD (Colour Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	MULD (Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	PAM (Parking Assistance)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	Radio	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-F (Front Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-M (Middle Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-R (Rear Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SRS (Airbag)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ADDG02	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	AH (Additional Heating)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	CD (CD Player)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ECM (Engine Control Module)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ESP (Electronic Stability Program BOSCH 5.7)	•		•	•	
C8	C8 (VAN) (2002 – 2005)	IP (Instrument Cluster Panel)	•		•	•	
C8	C8 (VAN) (2002 - 2005)	MDP CONDUCT	•		•	•	
C8	C8 (VAN) (2002 - 2005)	MDP PASSAG	•	•	•	•	
C8	C8 (VAN) (2002 – 2005) C8 (VAN) (2002 – 2005)		•	•	•	•	
		MULD (Multifunction Display SAGEM B)	•	•	•	•	
C8	C8 (VAN) (2002 - 2005)	PAM (Parking Assistance)	_				
C8	C8 (VAN) (2002 - 2005)	RPE (Radio Post-equipment)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag 5.7)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	TEU (Telematics Unit)	•	•	•	•	•
FUKANG	FUKANG	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•

FUKANG	FUKANG	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG	KEY (Electrionic Key Reader)	•	•	•	•	•
FUKANG	FUKANG	SRS (Airbag 5.3)	•	•	•	•	•
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
FUKANG	FUKANG (988)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG (988)	KEY (Electrionic Key Reader)	•	•	•	•	•
FUKANG	FUKANG (988)	SRS (Airbag 5.3)	•	•	•	•	•
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA96)	+ -	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ABS (Anti-lock brake System)	+ -	•	•	•	
	TUMPER/RELAY (3) (2006 - 2011)	•	—	•	•	•	
JUMPER/RELAY	TUMPER/RELAY (3) (2006 - 2011)	AC (Air Conditioning) AH (Additional Heating)	+ -	•	•	•	
JUMPER/RELAY		, ,	•	•	•	•	
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	BSI (Built-in Systems Interface)					
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	LDWS (Lane Departure Warning System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SRS (Airbag)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TG (Tachograph)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	SRS (Airbag)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	SRS (Airbag)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	TG (Tachograph)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	AH (Additional Heating)	-	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	CPH TEXTON	+ -	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L DHX BOSCH AS3-VP20)	+ -	•	•	•	
JUMPY/DISPATCH JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004) JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L DHA BUSCH ASS-VP2U) ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	
			•	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004) JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHW BOSCH EDC15C2) ECM (2. OL RHX BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH			-	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHZ BOSCH EDC15C2)	_	_			
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag 5.3)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	CPH_TEXTON	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RFN MM48P)	•	•	•	•	•

JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHX BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag 5.3)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
	JUMPY/DISPATCH (3) (2007 - 2016)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Air Conditioning)	•	•	•	•	•
	JUMPY/DISPATCH (3) (2007 - 2016)	-	•		•	•	-
JUMPY/DISPATCH		AC (Rear Air Conditioning Panel)		•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AH (Additional Heating)	<u> </u>				
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	CD (CD Player)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Display/Telematics	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ECM (Engine Control Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ERU (Engine Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFC (Hands Free Control Kit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFR (High Frequency Receiver)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	PAM (Parking Assistance)			•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	RBS (Rain And Brightness Sensor)		•	•	•	•
					_	_	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Radio	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TCM (Automatic Gearbox)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TRU (Trailer Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ECM (Engine Control Module)		•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ERU (Engine Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ESL (Electric Steering Lock)	•	•	•	•	
		,	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	HHV (High Head Vision)					
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RLS (Rain And Light Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SM (Services Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	Siren	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TCM (Automatic Gearbox)	•	•	•	•	•
				•	•	•	•
JUMPY/DISPATCH		TRU (Trailer Relay Unit)		•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VDA (Vehicle Distance Assistance)		•		_	
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VRD (Voltage Retaining Device)		•	•	•	•

NEMO		ABS (Anti-lock brake System)	•	•	•	•	•
NEMO		BSI (Built-in Systems Interface)	•	•	•	•	•
NEMO		ECM (Engine Control Module)	•	•	•	•	•
NEMO		IP (Instrument Cluster Panel)	•	•	•	•	•
NEMO		PAM (Parking Assistance)	•	•	•	•	•
NEMO		SRS (Airbag)	•	•	•	•	•
NEMO		TCM (Automatic Gearbox)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
SAXO		ECM (1. OL CDY/CDZ BOSCH MA3. 1)	•	•	•	•	•
SAXO		ECM (1.4L KFW SAGEM S2000)	•	•	•	•	•
SAX0		ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
SAX0		ECM (1.4L KFX MM1AP)	•	•	•	•	•
SAX0		ECM (1.6L NFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM48P)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.1)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP7.2)	•	•	•	•	•
SAXO		ECM (HFX/NFT/NFV - M744)	•	•	•	•	•
SAXO		KEY (Electrionic Key Reader)	•	•	•	•	•
SAXO		SRS (Central Airbag)	•	•	•	•	•
SAXO		TCM (Automatic Gearbox)	•	•	•	•	•
SPACETOURER		ABS (Anti-lock brake System)	•	•	•	•	•
SPACETOURER		AC (Air Conditioning)	•	•	•	•	•
SPACETOURER		AH (Additional Heating)	•	•	•	•	•
SPACETOURER		ALM (Anti-theft Alarm)	•	•	•	•	•
SPACETOURER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
SPACETOURER		BATT (Battery Change Status Unit)	•	•	•	•	•
SPACETOURER		BSI (Built-in Systems Interface)	•	•	•	•	•
SPACETOURER		ECM (Engine Control Module)	•	•	•	•	•
SPACETOURER		ERU (Engine Relay Unit)	•	•	•	•	•
SPACETOURER		ESL (Electric Steering Lock)	•	•	•	•	•
SPACETOURER		HHV (High Head Vision)	•	•	•	•	•
SPACETOURER		IP (Instrument Cluster Panel)	•	•	•	•	
SPACETOURER		MCP (Multiplexed Control Panel)	•		•	•	
SPACETOURER		MULC (Multiplexed control raner) MULC (Multiplexed control raner)	•	•	•	•	•
SPACETOURER		MULD (Multifunction Video Camera (CMT/)	•	•	•	•	
SPACETOURER		PAM (Parking Assistance)		•	•	•	
SPACETOURER SPACETOURER		RLS (Rain And Light Sensor)			•	•	
SPACETOURER		RTTC (Radio Telephone Transceiver Control)		•	•	•	
SPACETOURER SPACETOURER		SB (Seat Belts Not Fastened LED Unit)		•	•	•	
SPACETOURER		SM (Services Module)	•	•	•	•	
SPACETOURER SPACETOURER			•	•	•	•	
		SPMU (Supply Protection And Management Unit)		•	•	•	
SPACETOURER SPACETOURER		SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
SPACETOURER			•	•	•	•	
SPACETOURER		SWSM(Switch Module Under The Steering Wheel(Top Of Column))		•	•	•	
SPACETOURER		Siren TCM (Automotic Coorbox)	•	•	•	•	•
SPACETOURER		TCM (Automatic Gearbox)	_				•
SPACETOURER		TRU (Trailer Relay Unit)	•	•	•	•	
SPACETOURER		VDA (Vehicle Distance Assistance)	•	•	•	•	•
SPACETOURER		VRD (Voltage Retaining Device)	•	•	•	•	•
SYNERGIE		ECM (1. 9L DHX BOSCH AS3-VP20)	•	•	•	•	•
SYNERGIE		ECM (2. OL RFN MM48P)	•	•	•	•	•
SYNERGIE		ECM (2. OL RFV BOSCH MP7. 3)	•	•	•	•	•
SYNERGIE		ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
SYNERGIE		ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		SRS (Airbag 5.3)	•	•	•	•	•
SYNERGIE		SRS (SAC CENT AUTOLIV)	•	•	•	•	•
SYNERGIE		TCM (Automatic Gearbox AL4)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.8L LFX MM1AP)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.8L LFY BOSCH MP5.1.1)	•	•	•	•	•

NATITA SATITA								
MART	XANTIA	XANTIA (1)	ECM (1.8L LFY SAGEM SL96)	•	•	•	•	•
MATTAL ADDITAL CITY				•	•	•	•	•
MATTAL ADDRESS MATT				•	•	•	•	•
MATHER MATCH ADDRESS M				•	•	•	•	•
MOTITAL MOTITAL C)				•	•			
MATTA MATTA C)								
MORTER M				•	•			
MATTER M				_				
MATTA CANTA CANT				_	_			
MATTALE MATT								
MAIL			,					
MARTIA MARTIA CONTIA CD			_					
NAMES SANTIA CONTIN CD								
AMAPTIA MARTIA PRINCE MILE								
NAMITA DANTA (2)					-		_	
SANTIA COST COST								
ANTIA ANTIA C2				_				
SASTIA SASTIA (2)				_				
MARTIA MARTIA C2 MIX C2 MIX MIX C3 MIX MIX C3 MIX MIX								
XASTIA XASTIA CO				_				
SANTIA CONTIA (2)								
SANTIA SANTIA (2) SIX (A.10 SAYZ 1985H 197, 0)					-			
NANTIA (2) NES (Airbag)								
NAMITA NAMITA (2) SUS (Geft Airburg)								
SANTIA SANTIA C2			-					
SANTIA SANTIA C2								
NI				_				
NM NM ECW (2.0, RFF ECKCH MF5.1)	XANTIA		SRS (TEVES_MK20E)	•		•	•	•
NN NN NN ECR (2. OL RBY BOSCH NPS. L. 1) NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2. OL RBY BOSCH NPS. 2) NN NN NN BOSC (2.	XM	XM	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
MN	XM	XM	ECM (2. OL R6E BOSCH MP5. 2)	•	•	•	•	•
MI	XM	XM	ECM (2. OL RFV BOSCH MP5. 1. 1)	•	•	•	•	•
Miles Mile	XM	XM	ECM (2. OL RFV BOSCH MP5. 2)	•	•	•	•	•
NM	XM	XM	ECM (2. OL RFZ BOSCH MP5.1)	•	•	•	•	•
NM	XM	XM	ECM (2. OL RGX BOSCH MP3.2)	•	•	•	•	•
MN	XM	XM	ECM (2. OL RGY BOSCH MP3. 2)	•	•	•	•	•
XM	XM	XM	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
MI	XM	XM	ECM (2.5L THY BOSCH MSA11 VP36)	•	•	•	•	•
March Marc	XM	XM	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ABS (ABS Electronic Distribution)	XM	XM (Mux)	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
XSARA XSAR	XM	XM (Mux)	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) AC (Air Conditioning)	XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Electronic Distribution)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) Alarm	XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Mechanical Distribution)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) BSI (Built—in Systems Interface)	XSARA	XSARA (1) (1997 - 2000)	AC (Air Conditioning)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.4L KFX BOSCH MP7.3)	XSARA	XSARA (1) (1997 - 2000)	Alarm	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.4L KFX BOSCH MP7.3)	XSARA	XSARA (1) (1997 - 2000)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 4L KFX SAGEM SL96)	XSARA	XSARA (1) (1997 - 2000)	CD (CD Player)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 4L KFX SAGEM SL96)	XSARA	XSARA (1) (1997 - 2000)	ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
XSARA XSAR	XSARA			•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 6L NFZ BOSCH MP5.2)	XSARA		ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1. 8L LFX MM1AP)	XSARA			•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.8L LFX MM1AP) • • • • • • • • • • • • • • • • • • •	XSARA			•	•	•	•	•
XSARA XSARA (1) (1997 - 2000) ECM (1.8L LFY SAGEM SL96)	XSARA			_	•			
XSARA XSARA (1) (1997 - 2000) ECM (1.9L DHV BOSCH AS3-VP20) • • • • • • • • • • • • • • • • • • •	XSARA			_	•			•
XSARA XSARA (1) (1997 - 2000) ECM (2. OL RFS MM1AP) • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. OL RFV BOSCH MP5. 2) • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. OL RHY BOSCH EDC15C2) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • • • • • • •				_				
XSARA XSARA (1) (1997 - 2000) ECM (2. OL RFV BOSCH MP5.2) • • • • • • • • • XSARA XSARA (1) (1997 - 2000) ECM (2. OL RHY BOSCH EDC15C2) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • • • • • • •				_			_	
XSARA XSARA (1) (1997 - 2000) ECM (2.0L RHY BOSCH EDC15C2) • • • • • • • XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • • • • •				_				
XSARA XSARA (1) (1997 - 2000) IP (Instrument Cluster Panel) • • • • • • • XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • • • • •								
XSARA XSARA (1) (1997 - 2000) MULD (Multifunction Display SAGEM B) • • • • • XSARA XSARA (1) (1997 - 2000) Radio • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • •				_				
XSARA XSARA (1) (1997 - 2000) Radio • • • • • • • • • XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • • • • • • • • • • •								
XSARA XSARA (1) (1997 - 2000) SRS (Airbag) • • • • • • • • XSARA XSARA (1) (1997 - 2000) TCM (Automatic Gearbox AL4 TA96) • • • • • •								
XSARA								
				_				
ADD (AILCE TOOK DEAKE SYSTEM DOSCIE 3. 3)								
	лопип	Montaet (2) (2000 2000)	Amer rook brake bystem booth 5.0/	•		-	•	

XSARA	XSARA (2) (2000 - 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	BSI (BSI VAR C)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	CD (CD Player)		•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	ECM (Engine Control Module)	•	•	•	•	•
			•	•	•	•	
XSARA	XSARA (2) (2000 – 2006)	ESP (Electronic Stability Program BOSCH 5.7)		•	•	•	
XSARA	XSARA (2) (2000 – 2006)	IP (Instrument Cluster Panel)	•				
XSARA	XSARA (2) (2000 – 2006)	MULD (Multifunction Display A)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	Radio	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Alarm	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	Alarm	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	BSI (Built-in Systems Interface)		•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	IP (Instrument Cluster Panel)	•	•	•	•	
	XSARA (PICASSO) (2002 - 2006)		•	•	•	•	-
XSARA		MULD (Multifunction Display VDO B)	•	•	•	•	
XSARA		PAM (Parking Assistance)	•	•			
XSARA	XSARA (PICASSO) (2002 - 2006)	RBS (Rain And Brightness Sensor)			•	•	
XSARA	XSARA (PICASSO) (2002 - 2006)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
ZX	ZX (16)	ABS (Anti-lock brake System)	•	•	•	•	•
ZX	ZX (16)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (16)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
-							

ZX	ZX (16)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (16)	ECM (2. OL RFS MM1AP)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA2000 AT)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA96 AT)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (2. OL RFS MM1AP)	•	•	•	•	•

CITROEN INJ Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	INJ
BERLINGO	BERLINGO (2) (M69)	•
BERLINGO	BERLINGO (B9)	•
C-ELYSEE	C-ELYSEE C-	•
C-QUATRE	C-QUATRE (4)	•
C-QUATRE	C-QUATRE (5)	•
C3	C3 (A51)	•
C3	C3 (Ai51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	•
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (CACTUS)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
C8	C8 (CAN) (2005 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•

CITRONE INJ Function List (Note:For reference only)

Classification Of Injector

Configuration Of The Characterisation Of Diesel Injector

Diesel Injectors Programming Procedure

Initialisation Of Diesel Injector

Injector Replacement

Injectors

Reinitialisation Following Replacement Of The Urea Injector

Replacement Of Injector

Replacement Of One Or More Petrol Injectors

Replacement Of One Or Several Injectors

Replacement Of The Cyliner Head Or Programming Of The Injectors

CITROEN OIL Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Mode1	Model Type	OIL
BERLINGO	BERLINGO (2) (2002 - 2008)	OIL
BERLINGO	BERLINGO (2) (M69)	
BERLINGO	BERLINGO (B9)	
BERLINGO	BERLINGO (B9)	
C-CROSSER	DEKLINGO Electric (B9E)	<u> </u>
C-ELYSEE	C-ELYSEE	<u> </u>
C-ELTSEE	C3 (A51)	
C3	, ,	
C3	C3 (Ai51)	•
	C3 (AIRCROSS) (A88)	•
C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	•
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (AIRCROSS)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (CACTUS)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
C8	C8 (CAN) (2005 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	
NEMO	50.00 17 510 17 (10) (2010)	
SPACETOURER		
SPACETOURER		•

CITROEN OIL Function List (Note:For reference only)

Configuration Of A New Maintenance Plan

Maintenance Indicator

Maintenance Indicator Reset

Maintenance Limit

Maintenance Mileage Zero Reset + Maintenance Number

Maintenance Number Zero Reset

Maintenance Number Zero Reset Carried Out

Oil Parameter Reinitialisation

Replacement Of The Engine Oil

Reset Service

Zeroing Of The Service Indicator

CITROEN SAS Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

▲ This function is the new		
Model	Model Type	SAS
BERLINGO	BERLINGO (2) (2002 - 2008)	•
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	•
C-CROSSER		•
C-ELYSEE	C-ELYSEE	•
C-TRIOMPHE		•
C-ZERO		•
C1	C1 (B4)	•
C2	C2 (CAN) (2006 -)	•
C3 C3	C3 (A51)	•
C3	C3 (Ai51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	•
C3	C3 (PLURIEL) (2002 - 2009)	•
C3	C3 (R) (2006 - 2009)	•
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (AIRCROSS)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
C8	C8 (CAN) (2005 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
NEMO	, , , , ,	•
SPACETOURER		•
XSARA	XSARA (PICASSO) (1999 - 2002)	•
XSARA	XSARA (PICASSO) (2002 - 2006)	•
XSARA	XSARA (PICASSO) (CHINA)	•
	/· · - · · / / - · · · · · · · · /	<u> </u>

CITROEN SAS Function List (Note:For reference only)

Calibration Of The Steering Wheel Angle Sensor

Calibration Of The Yaw Speed Sensor

Calibration/Decalibration Of The Steering Wheel Angle Sensor

Longitudinal Acceleration Sensor Calibration

Steering Wheel Angle Sensor Programming