

DS Diagnostic Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData	Act
DS 3	DS 3	ABS (Anti-lock brake System)	●	●	●	●	●
DS 3	DS 3	AC (Air Conditioning)	●	●	●	●	●
DS 3	DS 3	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 3	DS 3	BATT (Battery Change Status Unit)	●	●	●	●	●
DS 3	DS 3	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 3	DS 3	Display/Telematics	●	●	●	●	●
DS 3	DS 3	ECM (Engine Control Module)	●	●	●	●	●
DS 3	DS 3	EPS (Electric Power Steering)	●	●	●	●	●
DS 3	DS 3	ERU (Engine Relay Unit)	●	●	●	●	●
DS 3	DS 3	HFC (Hands Free Control Kit)	●	●	●	●	●
DS 3	DS 3	HFR (High Frequency Receiver)	●	●	●	●	●
DS 3	DS 3	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 3	DS 3	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
DS 3	DS 3	MULD (Multifunction Display)	●	●	●	●	●
DS 3	DS 3	PAM (Parking Assistance)	●	●	●	●	●
DS 3	DS 3	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 3	DS 3	Radio	●	●	●	●	●
DS 3	DS 3	SB (Seat Belts Reminder LED)	●	●	●	●	●
DS 3	DS 3	SM (Services Module)	●	●	●	●	●
DS 3	DS 3	SRS (Airbag)	●	●	●	●	●
DS 3	DS 3	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 3	DS 3	TCM (Automatic Gearbox)	●	●	●	●	●
DS 3	DS 3	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 3	DS 3	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 4	DS 4	ABS (Anti-lock brake System)	●	●	●	●	●
DS 4	DS 4	AC (Air Conditioning)	●	●	●	●	●
DS 4	DS 4	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 4	DS 4	AMP (Audio Amplifier)	●	●	●	●	●
DS 4	DS 4	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 4	DS 4	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 4	DS 4	BSM (Monitoring Of The Blind Spot)	●	●	●	●	●
DS 4	DS 4	DDC (Driver's Door Control Panel)	●	●	●	●	●
DS 4	DS 4	DHL (Directional Headlamps)	●	●	●	●	●
DS 4	DS 4	DSM (Driver's School Module)	●	●	●	●	●
DS 4	DS 4	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 4	DS 4	Display	●	●	●	●	●
DS 4	DS 4	Display/Telematics	●	●	●	●	●
DS 4	DS 4	ECM (Engine Control Module)	●	●	●	●	●
DS 4	DS 4	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 4	DS 4	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
DS 4	DS 4	EPS (Electric Power Steering)	●	●	●	●	●
DS 4	DS 4	ERU (Engine Relay Unit)	●	●	●	●	●
DS 4	DS 4	ESL (Electric Steering Lock)	●	●	●	●	●
DS 4	DS 4	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 4	DS 4	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 4	DS 4	KEY (Electronic Key Reader)	●	●	●	●	●
DS 4	DS 4	LDWS (Lane Departure Warning System)	●	●	●	●	●
DS 4	DS 4	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 4	DS 4	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 4	DS 4	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 4	DS 4	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 4	DS 4	MULD (Multifunction Display)	●	●	●	●	●
DS 4	DS 4	PAM (Parking Assistance)	●	●	●	●	●

DS 4	DS 4	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 4	DS 4	Radio	●	●	●	●	●
DS 4	DS 4	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
DS 4	DS 4	SM (Services Module)	●	●	●	●	●
DS 4	DS 4	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 4	DS 4	SRS (Airbag)	●	●	●	●	●
DS 4	DS 4	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 4	DS 4	SWSM (Switch Module Under Steering Wheel)	●	●	●	●	●
DS 4	DS 4	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 4	DS 4	TCM (Automatic Gearbox)	●	●	●	●	●
DS 4	DS 4	TEU (Telematics Unit)	●	●	●	●	●
DS 4	DS 4	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 4	DS 4	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
DS 4	DS 4	UID (Under Inflation Detection)	●	●	●	●	●
DS 4	DS 4	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 4	DS 4 (S)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 4	DS 4 (S)	AC (Air Conditioning)	●	●	●	●	●
DS 4	DS 4 (S)	AMP (Audio Amplifier)	●	●	●	●	●
DS 4	DS 4 (S)	Alarm	●	●	●	●	●
DS 4	DS 4 (S)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 4	DS 4 (S)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 4	DS 4 (S)	DHL (Directional Headlamps)	●	●	●	●	●
DS 4	DS 4 (S)	Display	●	●	●	●	●
DS 4	DS 4 (S)	ECM (Engine Control Module)	●	●	●	●	●
DS 4	DS 4 (S)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 4	DS 4 (S)	EPS (Electric Power Steering)	●	●	●	●	●
DS 4	DS 4 (S)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 4	DS 4 (S)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 4	DS 4 (S)	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 4	DS 4 (S)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 4	DS 4 (S)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 4	DS 4 (S)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 4	DS 4 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 4	DS 4 (S)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 4	DS 4 (S)	PAM (Parking Assistance)	●	●	●	●	●
DS 4	DS 4 (S)	RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 4	DS 4 (S)	Radio	●	●	●	●	●
DS 4	DS 4 (S)	SM (Services Module)	●	●	●	●	●
DS 4	DS 4 (S)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 4	DS 4 (S)	SRS (Airbag)	●	●	●	●	●
DS 4	DS 4 (S)	SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 4	DS 4 (S)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 4	DS 4 (S)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 4	DS 4 (S)	TEU (Telematics Unit)	●	●	●	●	●
DS 4	DS 4 (S)	UID (Under Inflation Detection)	●	●	●	●	●
DS 4	DS 4 (S)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 5	DS 5	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5	BATT (Traction Battery ECU)	●	●	●	●	●
DS 5	DS 5	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5	Clock	●	●	●	●	●
DS 5	DS 5	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 5	DS 5	Display	●	●	●	●	●
DS 5	DS 5	Display/Telematics	●	●	●	●	●
DS 5	DS 5	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5	EPS (Electric Power Steering)	●	●	●	●	●

DS 5	DS 5	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5	HFC (Hands free Control Unit)	●	●	●	●	●
DS 5	DS 5	HHV (High Head Vision)	●	●	●	●	●
DS 5	DS 5	HMS (Hybrid Mode Selector)	●	●	●	●	●
DS 5	DS 5	HYC-1 (Hybrid Control ECU 1)	●	●	●	●	●
DS 5	DS 5	HYC-2 (Hybrid Control ECU 2)	●	●	●	●	●
DS 5	DS 5	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 5	DS 5	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
DS 5	DS 5	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 5	DS 5	MULD (Multifunction Display)	●	●	●	●	●
DS 5	DS 5	NAVI (Telematic Navigator)	●	●	●	●	●
DS 5	DS 5	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 5	DS 5	Radio	●	●	●	●	●
DS 5	DS 5	SB (Seat Belts Not Fastened LED Unit(TNB))	●	●	●	●	●
DS 5	DS 5	SM (Services Module)	●	●	●	●	●
DS 5	DS 5	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 5	DS 5	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 5	DS 5	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5	TEU (Telematics Unit)	●	●	●	●	●
DS 5	DS 5	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 5	DS 5	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5	VCU (Vibrators Control Unit)	●	●	●	●	●
DS 5	DS 5	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5	Wiper (Windscreen Wiper)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BATT (Traction Battery ECU)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Clock	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Display/Telematics	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	EPS (Electric Power Steering)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HFC (Hands free Control Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HHV (High Head Vision)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HMS (Hybrid Mode Selector)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HYC-1 (Hybrid Control ECU 1)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HYC-2 (Hybrid Control ECU 2)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MULD (Multifunction Display)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	NAVI (Telematic Navigator)	●	●	●	●	●

DS 5	DS 5 (Hybird 4)	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Radio	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SB (Seat Belts Not Fastened LED Unit(TNB))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SM (Services Module)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	VCU (Vibrators Control Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Wiper (Windscreen Wiper)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5 (L) (S)	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5 (L) (S)	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Alarm	●	●	●	●	●
DS 5	DS 5 (L) (S)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5 (L) (S)	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Display	●	●	●	●	●
DS 5	DS 5 (L) (S)	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5 (L) (S)	EPS (Electric Power Steering)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5 (L) (S)	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 5	DS 5 (L) (S)	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5 (L) (S)	RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Radio	●	●	●	●	●
DS 5	DS 5 (L) (S)	SM (Services Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5 (L) (S)	TEU (Telematics Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5 (L) (S)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 6		ABS (Anti-lock brake System)	●	●	●	●	●
DS 6		AC (Air Conditioning)	●	●	●	●	●
DS 6		AMP (Audio Amplifier)	●	●	●	●	●
DS 6		ASM (Anti-slip Mode Selector)	●	●	●	●	●
DS 6		Alarm	●	●	●	●	●
DS 6		BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 6		BCM (Body Control Module)	●	●	●	●	●
DS 6		BSI (Built-in Systems Interface)	●	●	●	●	●
DS 6		DHL (Directional Headlamps)	●	●	●	●	●
DS 6		Display	●	●	●	●	●
DS 6		ECM (Engine Control Module)	●	●	●	●	●
DS 6		EPB (Electric Secondary Brake)	●	●	●	●	●
DS 6		EPS (Electric Power Steering)	●	●	●	●	●
DS 6		ERU (Engine Relay Unit)	●	●	●	●	●
DS 6		ESL (Electric Steering Lock)	●	●	●	●	●

DS 6		HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 6		IP (Instrument Cluster Panel)	●	●	●	●	●
DS 6		KEY (Electronic Key Reader)	●	●	●	●	●
DS 6		MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 6		MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 6		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 6		PAM (Parking Assistance)	●	●	●	●	●
DS 6		RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 6		SFB (Signalling Fuse Box)	●	●	●	●	●
DS 6		SM (Services Module)	●	●	●	●	●
DS 6		SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 6		SRS (Airbag)	●	●	●	●	●
DS 6		SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 6		SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 6		TCM (Automatic Gearbox)	●	●	●	●	●
DS 6		TEU (Telematics Unit)	●	●	●	●	●
DS 6		UID (Under Inflation Detection)	●	●	●	●	●
DS 6		VRD (Voltage Retaining Device)	●	●	●	●	●
DS 7		ABS (Anti-lock brake System)	●	●	●	●	●
DS 7		AC (Air Conditioning)	●	●	●	●	●
DS 7		AMP (Audio Amplifier)	●	●	●	●	●
DS 7		BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 7		BCM (Body Control Module)	●	●	●	●	●
DS 7		BSI (Built-in Systems Interface)	●	●	●	●	●
DS 7		CD (External CD Player)	●	●	●	●	●
DS 7		Clock	●	●	●	●	●
DS 7		DMC (Driver Monitoring Camera)	●	●	●	●	●
DS 7		ECM (Engine Control Module)	●	●	●	●	●
DS 7		EPS (Electric Power Steering)	●	●	●	●	●
DS 7		ESL (Electric Steering Lock)	●	●	●	●	●
DS 7		IP (Instrument Cluster Panel)	●	●	●	●	●
DS 7		MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 7		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 7		NVE (Night Vision ECU)	●	●	●	●	●
DS 7		PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
DS 7		RLS (Rain And Light Sensor)	●	●	●	●	●
DS 7		SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
DS 7		SFB (Signalling Fuse Box)	●	●	●	●	●
DS 7		SM (Services Module)	●	●	●	●	●
DS 7		SRS (Airbag)	●	●	●	●	●
DS 7		SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 7		SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 7		Siren	●	●	●	●	●
DS 7		TCM (Automatic Gearbox)	●	●	●	●	●
DS 7		TRU (Trailer Relay Unit)	●	●	●	●	●
DS 7		VDA (Vehicle Distance Assistance)	●	●	●	●	●
DS 7		VRD (Voltage Retaining Device)	●	●	●	●	●

DS BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	BLD
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●

DS BLD Function List (Note:For reference only)

Bleeding

Bleeding Of The Hydraulic Block

Bleeding Of The Hydraulic Block ABS MK100

Bleeding Of The Hydraulic Block ASR8.0

Bleeding Of The Hydraulic Block ESP MK100

Bleeding Of The Hydraulic Circuit

DS BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Mode	Model Type	BMS
DS 3	DS 3	●
DS 4	DS 4	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 7		●

DS BMS Function List (Note:For reference only)

Manual Configuration

DS DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	DPF
DS 3	DS 3	●
DS 4	DS 4	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●

DS DPF Function List (Note:For reference only)

Filling Of The Diesel Additive Adding Reservoir

Forced Regeneration Of The Particle Emission Filter

Forced Regeneration Of The Particle Filter, Vehicle Stationary

Forced Regeneration Of The Particulate Filter While Driving

Forced Regeneration Vehicle Moving

Forced Regeneration Vehicle Stationary

Pariticle Filter Regeneration

Particulate Filter Replacement

Replacement Of The Diesel Additive Reservoir,Of The Pump Or Of The Pipes

Replacement Of The Differential Pressure Sensor

Replacement Of The Particle Emission Filter

Replacement Of The Particle Emission Filter Differential Pressure Sensor

DS EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	EPB
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●

DS EPB Function List (Note:For reference only)

Cable Tensioning

Deactivation Of The Automatic Application Of The Electric Parking Brake Function

Electric Parking Brake Calibration

First Activation Of The Electric Parking Brake

Put In Fitting/Removal Position

Reactivation Of Automatic Application Of The Electric Parking Brake

Release Of The Motorised Brake Calipers

Replacement Of The Brake Pads

Replacement Of The Electric Parking Brake (FSE) Left-hand Actuator

Replacement Of The Electric Parking Brake (FSE) Right-hand Actuator

Replacement Of The Proportional Brake Switch

Replacement Of The Rear Left Motorised Brake Caliper

Replacement Of The Rear Right Motorised Brake Caliper

DS ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	ETC
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●

DS ETC Function List (Note:For reference only)

Initialisation Of The EGR Throttle

Initialising The Autoadaptives

Motorised Throttle Unit

Replacement Of Exhaust Gas Recycling Electric Throttle

Throttle Learning

DS Diagnostic Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData	Act
DS 3	DS 3	ABS (Anti-lock brake System)	●	●	●	●	●
DS 3	DS 3	AC (Air Conditioning)	●	●	●	●	●
DS 3	DS 3	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 3	DS 3	BATT (Battery Change Status Unit)	●	●	●	●	●
DS 3	DS 3	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 3	DS 3	Display/Telematics	●	●	●	●	●
DS 3	DS 3	ECM (Engine Control Module)	●	●	●	●	●
DS 3	DS 3	EPS (Electric Power Steering)	●	●	●	●	●
DS 3	DS 3	ERU (Engine Relay Unit)	●	●	●	●	●
DS 3	DS 3	HFC (Hands Free Control Kit)	●	●	●	●	●
DS 3	DS 3	HFR (High Frequency Receiver)	●	●	●	●	●
DS 3	DS 3	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 3	DS 3	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
DS 3	DS 3	MULD (Multifunction Display)	●	●	●	●	●
DS 3	DS 3	PAM (Parking Assistance)	●	●	●	●	●
DS 3	DS 3	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 3	DS 3	Radio	●	●	●	●	●
DS 3	DS 3	SB (Seat Belts Reminder LED)	●	●	●	●	●
DS 3	DS 3	SM (Services Module)	●	●	●	●	●
DS 3	DS 3	SRS (Airbag)	●	●	●	●	●
DS 3	DS 3	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 3	DS 3	TCM (Automatic Gearbox)	●	●	●	●	●
DS 3	DS 3	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 3	DS 3	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 4	DS 4	ABS (Anti-lock brake System)	●	●	●	●	●
DS 4	DS 4	AC (Air Conditioning)	●	●	●	●	●
DS 4	DS 4	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 4	DS 4	AMP (Audio Amplifier)	●	●	●	●	●
DS 4	DS 4	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 4	DS 4	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 4	DS 4	BSM (Monitoring Of The Blind Spot)	●	●	●	●	●
DS 4	DS 4	DDC (Driver's Door Control Panel)	●	●	●	●	●
DS 4	DS 4	DHL (Directional Headlamps)	●	●	●	●	●
DS 4	DS 4	DSM (Driver's School Module)	●	●	●	●	●
DS 4	DS 4	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 4	DS 4	Display	●	●	●	●	●
DS 4	DS 4	Display/Telematics	●	●	●	●	●
DS 4	DS 4	ECM (Engine Control Module)	●	●	●	●	●
DS 4	DS 4	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 4	DS 4	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
DS 4	DS 4	EPS (Electric Power Steering)	●	●	●	●	●
DS 4	DS 4	ERU (Engine Relay Unit)	●	●	●	●	●
DS 4	DS 4	ESL (Electric Steering Lock)	●	●	●	●	●
DS 4	DS 4	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 4	DS 4	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 4	DS 4	KEY (Electronic Key Reader)	●	●	●	●	●
DS 4	DS 4	LDWS (Lane Departure Warning System)	●	●	●	●	●
DS 4	DS 4	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 4	DS 4	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 4	DS 4	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 4	DS 4	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 4	DS 4	MULD (Multifunction Display)	●	●	●	●	●
DS 4	DS 4	PAM (Parking Assistance)	●	●	●	●	●

DS 4	DS 4	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 4	DS 4	Radio	●	●	●	●	●
DS 4	DS 4	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
DS 4	DS 4	SM (Services Module)	●	●	●	●	●
DS 4	DS 4	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 4	DS 4	SRS (Airbag)	●	●	●	●	●
DS 4	DS 4	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 4	DS 4	SWSM (Switch Module Under Steering Wheel)	●	●	●	●	●
DS 4	DS 4	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 4	DS 4	TCM (Automatic Gearbox)	●	●	●	●	●
DS 4	DS 4	TEU (Telematics Unit)	●	●	●	●	●
DS 4	DS 4	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 4	DS 4	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
DS 4	DS 4	UID (Under Inflation Detection)	●	●	●	●	●
DS 4	DS 4	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 4	DS 4 (S)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 4	DS 4 (S)	AC (Air Conditioning)	●	●	●	●	●
DS 4	DS 4 (S)	AMP (Audio Amplifier)	●	●	●	●	●
DS 4	DS 4 (S)	Alarm	●	●	●	●	●
DS 4	DS 4 (S)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 4	DS 4 (S)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 4	DS 4 (S)	DHL (Directional Headlamps)	●	●	●	●	●
DS 4	DS 4 (S)	Display	●	●	●	●	●
DS 4	DS 4 (S)	ECM (Engine Control Module)	●	●	●	●	●
DS 4	DS 4 (S)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 4	DS 4 (S)	EPS (Electric Power Steering)	●	●	●	●	●
DS 4	DS 4 (S)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 4	DS 4 (S)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 4	DS 4 (S)	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 4	DS 4 (S)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 4	DS 4 (S)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 4	DS 4 (S)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 4	DS 4 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 4	DS 4 (S)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 4	DS 4 (S)	PAM (Parking Assistance)	●	●	●	●	●
DS 4	DS 4 (S)	RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 4	DS 4 (S)	Radio	●	●	●	●	●
DS 4	DS 4 (S)	SM (Services Module)	●	●	●	●	●
DS 4	DS 4 (S)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 4	DS 4 (S)	SRS (Airbag)	●	●	●	●	●
DS 4	DS 4 (S)	SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 4	DS 4 (S)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 4	DS 4 (S)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 4	DS 4 (S)	TEU (Telematics Unit)	●	●	●	●	●
DS 4	DS 4 (S)	UID (Under Inflation Detection)	●	●	●	●	●
DS 4	DS 4 (S)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 5	DS 5	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5	BATT (Traction Battery ECU)	●	●	●	●	●
DS 5	DS 5	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5	Clock	●	●	●	●	●
DS 5	DS 5	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 5	DS 5	Display	●	●	●	●	●
DS 5	DS 5	Display/Telematics	●	●	●	●	●
DS 5	DS 5	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5	EPS (Electric Power Steering)	●	●	●	●	●

DS 5	DS 5	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5	HFC (Hands free Control Unit)	●	●	●	●	●
DS 5	DS 5	HHV (High Head Vision)	●	●	●	●	●
DS 5	DS 5	HMS (Hybrid Mode Selector)	●	●	●	●	●
DS 5	DS 5	HYC-1 (Hybrid Control ECU 1)	●	●	●	●	●
DS 5	DS 5	HYC-2 (Hybrid Control ECU 2)	●	●	●	●	●
DS 5	DS 5	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 5	DS 5	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
DS 5	DS 5	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 5	DS 5	MULD (Multifunction Display)	●	●	●	●	●
DS 5	DS 5	NAVI (Telematic Navigator)	●	●	●	●	●
DS 5	DS 5	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 5	DS 5	Radio	●	●	●	●	●
DS 5	DS 5	SB (Seat Belts Not Fastened LED Unit(TNB))	●	●	●	●	●
DS 5	DS 5	SM (Services Module)	●	●	●	●	●
DS 5	DS 5	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 5	DS 5	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 5	DS 5	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5	TEU (Telematics Unit)	●	●	●	●	●
DS 5	DS 5	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 5	DS 5	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5	VCU (Vibrators Control Unit)	●	●	●	●	●
DS 5	DS 5	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5	Wiper (Windscreen Wiper)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ALM (Anti-theft Alarm)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BATT (Traction Battery ECU)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Clock	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Display/Telematics	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	EPS (Electric Power Steering)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HFC (Hands free Control Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HHV (High Head Vision)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HMS (Hybrid Mode Selector)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HYC-1 (Hybrid Control ECU 1)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	HYC-2 (Hybrid Control ECU 2)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	MULD (Multifunction Display)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	NAVI (Telematic Navigator)	●	●	●	●	●

DS 5	DS 5 (Hybird 4)	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Radio	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SB (Seat Belts Not Fastened LED Unit(TNB))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SM (Services Module)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	TRU (Trailer Relay Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	VCU (Vibrators Control Unit)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 5	DS 5 (Hybird 4)	Wiper (Windscreen Wiper)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ABS (Anti-lock brake System)	●	●	●	●	●
DS 5	DS 5 (L) (S)	AC (Air Conditioning)	●	●	●	●	●
DS 5	DS 5 (L) (S)	AMP (Audio Amplifier)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Alarm	●	●	●	●	●
DS 5	DS 5 (L) (S)	BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	BSI (Built-in Systems Interface)	●	●	●	●	●
DS 5	DS 5 (L) (S)	DHL (Directional Headlamps)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Display	●	●	●	●	●
DS 5	DS 5 (L) (S)	ECM (Engine Control Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	EPB (Electric Secondary Brake)	●	●	●	●	●
DS 5	DS 5 (L) (S)	EPS (Electric Power Steering)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ERU (Engine Relay Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	ESL (Electric Steering Lock)	●	●	●	●	●
DS 5	DS 5 (L) (S)	HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	IP (Instrument Cluster Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	KEY (Electronic Key Reader)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 5	DS 5 (L) (S)	PAM (Parking Assistance)	●	●	●	●	●
DS 5	DS 5 (L) (S)	RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 5	DS 5 (L) (S)	Radio	●	●	●	●	●
DS 5	DS 5 (L) (S)	SM (Services Module)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SRS (Airbag)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 5	DS 5 (L) (S)	TCM (Automatic Gearbox)	●	●	●	●	●
DS 5	DS 5 (L) (S)	TEU (Telematics Unit)	●	●	●	●	●
DS 5	DS 5 (L) (S)	UID (Under Inflation Detection)	●	●	●	●	●
DS 5	DS 5 (L) (S)	VRD (Voltage Retaining Device)	●	●	●	●	●
DS 6		ABS (Anti-lock brake System)	●	●	●	●	●
DS 6		AC (Air Conditioning)	●	●	●	●	●
DS 6		AMP (Audio Amplifier)	●	●	●	●	●
DS 6		ASM (Anti-slip Mode Selector)	●	●	●	●	●
DS 6		Alarm	●	●	●	●	●
DS 6		BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 6		BCM (Body Control Module)	●	●	●	●	●
DS 6		BSI (Built-in Systems Interface)	●	●	●	●	●
DS 6		DHL (Directional Headlamps)	●	●	●	●	●
DS 6		Display	●	●	●	●	●
DS 6		ECM (Engine Control Module)	●	●	●	●	●
DS 6		EPB (Electric Secondary Brake)	●	●	●	●	●
DS 6		EPS (Electric Power Steering)	●	●	●	●	●
DS 6		ERU (Engine Relay Unit)	●	●	●	●	●
DS 6		ESL (Electric Steering Lock)	●	●	●	●	●

DS 6		HFSM (Hands Free Starting Access Electronic Module)	●	●	●	●	●
DS 6		IP (Instrument Cluster Panel)	●	●	●	●	●
DS 6		KEY (Electronic Key Reader)	●	●	●	●	●
DS 6		MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 6		MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
DS 6		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 6		PAM (Parking Assistance)	●	●	●	●	●
DS 6		RSS (Rain-sunlight Sensor)	●	●	●	●	●
DS 6		SFB (Signalling Fuse Box)	●	●	●	●	●
DS 6		SM (Services Module)	●	●	●	●	●
DS 6		SPMU (Supply Protection And Management Unit)	●	●	●	●	●
DS 6		SRS (Airbag)	●	●	●	●	●
DS 6		SWC (Controls On The Steering Wheel)	●	●	●	●	●
DS 6		SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
DS 6		TCM (Automatic Gearbox)	●	●	●	●	●
DS 6		TEU (Telematics Unit)	●	●	●	●	●
DS 6		UID (Under Inflation Detection)	●	●	●	●	●
DS 6		VRD (Voltage Retaining Device)	●	●	●	●	●
DS 7		ABS (Anti-lock brake System)	●	●	●	●	●
DS 7		AC (Air Conditioning)	●	●	●	●	●
DS 7		AMP (Audio Amplifier)	●	●	●	●	●
DS 7		BATT (Battery Charge Status Unit)	●	●	●	●	●
DS 7		BCM (Body Control Module)	●	●	●	●	●
DS 7		BSI (Built-in Systems Interface)	●	●	●	●	●
DS 7		CD (External CD Player)	●	●	●	●	●
DS 7		Clock	●	●	●	●	●
DS 7		DMC (Driver Monitoring Camera)	●	●	●	●	●
DS 7		ECM (Engine Control Module)	●	●	●	●	●
DS 7		EPS (Electric Power Steering)	●	●	●	●	●
DS 7		ESL (Electric Steering Lock)	●	●	●	●	●
DS 7		IP (Instrument Cluster Panel)	●	●	●	●	●
DS 7		MCP (Multiplexed Control Panel)	●	●	●	●	●
DS 7		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
DS 7		NVE (Night Vision ECU)	●	●	●	●	●
DS 7		PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
DS 7		RLS (Rain And Light Sensor)	●	●	●	●	●
DS 7		SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
DS 7		SFB (Signalling Fuse Box)	●	●	●	●	●
DS 7		SM (Services Module)	●	●	●	●	●
DS 7		SRS (Airbag)	●	●	●	●	●
DS 7		SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
DS 7		SWSM (Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
DS 7		Siren	●	●	●	●	●
DS 7		TCM (Automatic Gearbox)	●	●	●	●	●
DS 7		TRU (Trailer Relay Unit)	●	●	●	●	●
DS 7		VDA (Vehicle Distance Assistance)	●	●	●	●	●
DS 7		VRD (Voltage Retaining Device)	●	●	●	●	●

DS INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	INJ
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●

DS INJ Function List (Note:For reference only)

Classification Of Injector

Configuration Of The Characterisation Of Diesel Injector

Diesel Injectors Programming Procedure

Initialisation Of Diesel Injector

Injector Replacement

Injectors

Reinitialisation Following Replacement Of The Urea Injector

Replacement Of Injector

Replacement Of One Or More Petrol Injectors

Replacement Of One Or Several Injectors

Replacement Of The Cyliner Head Or Programming Of The Injectors

DS OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	OIL
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●

DS OIL Function List (Note:For reference only)

Choice Of Maintenance Schedule

Configuration Of A New Maintenance Plan

Maintenance Indicator

Maintenance Indicator Reset

Maintenance Limit

Maintenance Mileage Zero Reset + Maintenance Number

Maintenance Number Zero Reset

Maintenance Number Zero Reset Carried Out

Oil Parameter Reinitialisation

Replacement Of The Engine Oil

Reset Service

Zeroing Of The Service Indicator

DS SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	SAS
DS 3	DS 3	●
DS 4	DS 4	●
DS 4	DS 4 (S)	●
DS 5	DS 5	●
DS 5	DS 5 (Hybird 4)	●
DS 5	DS 5 (L) (S)	●
DS 6		●
DS 7		●

DS SAS Function List (Note:For reference only)

Calibration Of The Steering Wheel Angle Sensor

Calibration Of The Yaw Speed Sensor

Calibration/Decalibration Of The Steering Wheel Angle Sensor

Longitudinal Acceleration Sensor Calibration

Steering Wheel Angle Sensor Programming