

ISUZU_Diagnostic_Function_List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Year	Vehicle
1998	(TBR)
1998	(TF) LUV
1998	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
1998	(UB) Trooper, Bighorn
1998	(UE) Rodeo/Amigo, Wizard/MU
1999	(TBR)
1999	(TF) LUV
1999	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
1999	(UB) Trooper, Bighorn
1999	(UC) Frontier ,LAO-Rodeo
1999	(UE) Rodeo/Amigo, Wizard/MU
1999	(UG) V-Cross
1999	<N*> ELF, NPR, NOR, VFR
2000	(TBR)
2000	(TF) LUV
2000	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
2000	(UB) Trooper, Bighorn
2000	(UC) Frontier ,LAO-Rodeo
2000	(UE) Rodeo/Amigo, Wizard/MU
2000	(UG) V-Cross
2000	<N*> ELF, NPR, NOR, VFR
2001	(TBR)
2001	(TF) LUV
2001	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
2001	(UB) Trooper, Bighorn
2001	(UC) Frontier ,LAO-Rodeo
2001	(UE) Rodeo/Amigo, Wizard/MU
2001	(UG) V-Cross
2001	<N*> ELF, NPR, NOR, VFR
2001	TF/UC Thailand
2002	(TF/UC) LUV, Frontier, LAO-Rodeo
2002	(UB) Trooper, Bighorn
2002	(UE) Rodeo/Amigo, Wizard/MU
2002	(UP) Axiom
2002	<C*, E*, L*, F*> Heavy, Medium Duty
2002	<N*> ELF, NPR, NOR, VFR
2002	TF/UC Thailand
2003	(TBR)
2003	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
2003	(UB) Trooper, Bighorn
2003	(UE) Rodeo/Amigo, Wizard/MU
2003	(UP) Axiom
2003	<C*, E*, L*, F*> Heavy, Medium Duty
2003	<N*> ELF, NPR, NOR, VFR
2004	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo

2004	(UE) Rodeo/Amigo, Wizard/MU				
2004	<C*,E*,L*,F*> Heavy, Medium Duty				
2004	<N*> ELF, NPR, NOR, VFR				
2005	(TF/UC)LUV, Rodeo/Frontier, LA0-Rodeo				
2005	<C*,E*,L*,F*> Heavy, Medium Duty				
2005	N Series Truck				
2005	OFF-Road Serial Industrial Engine				
2006	<C*,E*,L*,F*> Heavy, Medium Duty				
2006	N Series Truck				
2006	OFF-Road Serial Industrial Engine				
2006	TF/UC Series				
2007	C&E Series Truck				
2007	F&G Series Truck				
2007	LT/LV Series Bus				
2007	N Series Truck				
2007	OFF-Road Serial Industrial Engine				
2007	TF/UC Series				
2008	C&E Series Truck				
2008	F&G Series Truck				
2008	LT/LV Series Bus				
2008	N Series Truck				
2008	OFF-Road Serial Industrial Engine				
2008	TF/UC Series				
2009	C&E Series Truck				
2009	F&G Series Truck				
2009	LT/LV Series Bus				
2009	N Series Truck				
2009	OFF-Road Serial Industrial Engine				
2009	TF/UC Series				
2010	C&E Series Truck				
2010	F&G Series Truck				
2010	LT/LV Series Bus				
2010	N Series Truck				
2010	OFF-Road Serial Industrial Engine				
2010	TF/UC Series				
2011	C&E Series Truck				
2011	F&G Series Truck				
2011	LT/LV Series Bus				
2011	N Series Truck				
2011	TF/UC Series				
2012	C&E Series Truck				
2012	F&G Series Truck				
2012	LT/LV Series Bus				
2012	N Series Truck				
2012	TF/UC Series				
	System	ECU INFO.	Read Code	Clear Code	View Data
	ECM (2.2L L4 X22SE)	※	●	●	●
	ECM (2.4L LG1 Euro 3)	※	●	●	●
	ECM (2.5L 4JK1-TC)	※	●	●	●
	ECM (2.5L 4JK1-TC) (Delphi)	※	●	●	●
	ECM (2.5L 4JK1-TC) (TransTron)	※	●	●	●
	ECM (2.XL L4 HV240)	※	●	●	●
	ECM (3.0L 4JJ1-TC)	※	●	●	●
	ECM (3.0L 4JJ1-TC) (Delphi)	※	●	●	●

ECM (3.0L 4JJ1-TC) (TransTron)	※	●	●	●
ECM (3.0L L4 4JX1)	※	●	●	●
ECM (3.2L V6 6VD1)	※	●	●	●
ECM (3.2L V6 6VD1) (Hitachi)	※	●	●	●
ECM (3.5L V6 6VE1)	※	●	●	●
ECM (4HF1) (CNG)	※	●	●	●
ECM (4HG1) (LPG)	※	●	●	●
ECM (4HK1-TC) (C/Rail)	※	●	●	●
ECM (4HK1-TC) (C/Rail_NLT)	※	●	●	●
ECM (4HK1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (4HK1/4JJ1) (C/Rail_Euro2)	※	●	●	●
ECM (4HK1/4JJ1) (C/Rail_Euro3)	※	●	●	●
ECM (4HK1/6HK1) (C/Rail_Euro2)	※	●	●	●
ECM (4HK1/6HK1) (C/Rail_Euro3)	※	●	●	●
ECM (4HV1) (CNG)	※	●	●	●
ECM (4JA1-TC) (Bosch)	※	●	●	●
ECM (4JG2)	※	●	●	●
ECM (4JG2) (LPG)	※	●	●	●
ECM (4JH1-T Denso)	※	●	●	●
ECM (4JH1-TC) (Bosch)	※	●	●	●
ECM (4JJ1-TC) (C/Rail)	※	●	●	●
ECM (4JJ1-TC) (C/Rail_Mexico)	※	●	●	●
ECM (4JJ1-TC) (C/Rail_NLT)	※	●	●	●
ECM (4JJ1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (6HF1-TC) (CNG)	※	●	●	●
ECM (6HK1-TC) (C/Rail)	※	●	●	●
ECM (6HK1-TC) (C/Rail_Euro2)	※	●	●	●
ECM (6HK1-TC) (C/Rail_Euro3)	※	●	●	●
ECM (6HK1-TC) (C/Rail_NLT)	※	●	●	●
ECM (6HK1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (6UZ1-TC) (C/Rail)	※	●	●	●
ECM (6UZ1-TC) (C/Rail_Euro3)	※	●	●	●
ECM (6UZ1-TC) (C/Rail_NLT)	※	●	●	●
ECM (6UZ1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (6WG1-TC) (C/Rail)	※	●	●	●
ECM (6WG1-TC) (C/Rail_NLT)	※	●	●	●
ECM (6WG1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (AW30-40LE)	※	●	●	●
ECM (D-MAX) (4JH1-T Denso)	※	●	●	●
ECM (Engine Control Module)	※	●	●	●
ECM (Hybrid)	※	●	●	●
ECM (V6 Engine)	※	●	●	●
ABS ASR ADVICS	※	●	●	●
ABS (Anti-lock Braking System 6)	※	●	●	●
ABS (Anti-lock Braking System 8)	※	●	●	●
ABS (Anti-lock Braking System)	※	●	●	●
ABS (Anti-lock Braking System) (VPW)	※	●	●	●
ABS/ARS	※	●	●	●
ABS/IESC	※	●	●	●
AS (Air Suspension)	※	●	●	●
AT A460	※	●	●	●
AT Allison LCT	※	●	●	●
AT JR405E	※	●	●	●
AT (Automatic Transmission)	※	●	●	●

AT(Automatic Transmission) (AW30-40LE)	※	●	●	●
AT(Automatic Transmission) (JR405E)	※	●	●	●
Airbag	※	●	●	●
Airbag (VPW)	※	●	●	●
Airbag Siemens	※	●	●	●
BCM(Body Control Module)	※	●	●	●
DSR(Drive Security Reference)	※	●	●	●
EBS(Electronic Brake System)	※	●	●	●
ESC(Electronic Stability Control) (with EBS)	※	●	●	●
HR(Hydraulic Retarder)	※	●	●	●
Immobiliser	※	●	●	●
Millimeter wave radar cruise	※	●	●	●
Mimamori	※	●	●	●
PCM(Powertrain Interface Module)	※	●	●	●
Smoother / Smoother-Ex	※	●	●	●
Smoother / Smoother-Fx	※	●	●	●
Smoother-E	※	●	●	●
Smoother/Smoother-E Auto Shift	※	●	●	●
Speedometer Control Equipment	※	●	●	●

ISUZU Diagnostic Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Year	Vehicle
1998	(TBR)
1998	(TF) LUV
1998	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
1998	(UB) Trooper, Bighorn
1998	(UE) Rodeo/Amigo, Wizard/MU
1999	(TBR)
1999	(TF) LUV
1999	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
1999	(UB) Trooper, Bighorn
1999	(UC) Frontier ,LAO-Rodeo
1999	(UE) Rodeo/Amigo, Wizard/MU
1999	(UG) V-Cross
1999	<N*> ELF, NPR, NOR, VFR
2000	(TBR)
2000	(TF) LUV
2000	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
2000	(UB) Trooper, Bighorn
2000	(UC) Frontier ,LAO-Rodeo
2000	(UE) Rodeo/Amigo, Wizard/MU
2000	(UG) V-Cross
2000	<N*> ELF, NPR, NOR, VFR
2001	(TBR)
2001	(TF) LUV
2001	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
2001	(UB) Trooper, Bighorn
2001	(UC) Frontier ,LAO-Rodeo
2001	(UE) Rodeo/Amigo, Wizard/MU
2001	(UG) V-Cross
2001	<N*> ELF, NPR, NOR, VFR
2001	TF/UC Thailand
2002	(TF/UC) LUV, Frontier, LAO-Rodeo
2002	(UB) Trooper, Bighorn
2002	(UE) Rodeo/Amigo, Wizard/MU
2002	(UP) Axiom
2002	<C*, E*, L*, F*> Heavy, Medium Duty
2002	<N*> ELF, NPR, NOR, VFR
2002	TF/UC Thailand
2003	(TBR)
2003	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo
2003	(UB) Trooper, Bighorn
2003	(UE) Rodeo/Amigo, Wizard/MU
2003	(UP) Axiom
2003	<C*, E*, L*, F*> Heavy, Medium Duty
2003	<N*> ELF, NPR, NOR, VFR
2004	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo

2004	(UE) Rodeo/Amigo, Wizard/MU			
2004	<C*,E*,L*,F*> Heavy, Medium Duty			
2004	<N*> ELF, NPR, NOR, VFR			
2005	(TF/UC)LUV, Rodeo/Frontier, LA0-Rodeo			
2005	<C*,E*,L*,F*> Heavy, Medium Duty			
2005	N Series Truck			
2005	OFF-Road Serial Industrial Engine			
2006	<C*,E*,L*,F*> Heavy, Medium Duty			
2006	N Series Truck			
2006	OFF-Road Serial Industrial Engine			
2006	TF/UC Series			
2007	C&E Series Truck			
2007	F&G Series Truck			
2007	LT/LV Series Bus			
2007	N Series Truck			
2007	OFF-Road Serial Industrial Engine			
2007	TF/UC Series			
2008	C&E Series Truck			
2008	F&G Series Truck			
2008	LT/LV Series Bus			
2008	N Series Truck			
2008	OFF-Road Serial Industrial Engine			
2008	TF/UC Series			
2009	C&E Series Truck			
2009	F&G Series Truck			
2009	LT/LV Series Bus			
2009	N Series Truck			
2009	OFF-Road Serial Industrial Engine			
2009	TF/UC Series			
2010	C&E Series Truck			
2010	F&G Series Truck			
2010	LT/LV Series Bus			
2010	N Series Truck			
2010	OFF-Road Serial Industrial Engine			
2010	TF/UC Series			
2011	C&E Series Truck			
2011	F&G Series Truck			
2011	LT/LV Series Bus			
2011	N Series Truck			
2011	TF/UC Series			
2012	C&E Series Truck			
2012	F&G Series Truck			
2012	LT/LV Series Bus			
2012	N Series Truck			
2012	TF/UC Series			
System	ECU INFO.	Read Code	Clear Code	View Data
ECM (2.2L L4 X22SE)	※	●	●	●
ECM (2.4L LG1 Euro 3)	※	●	●	●
ECM (2.5L 4JK1-TC)	※	●	●	●
ECM (2.5L 4JK1-TC) (Delphi)	※	●	●	●
ECM (2.5L 4JK1-TC) (TransTron)	※	●	●	●
ECM (2.XL L4 HV240)	※	●	●	●
ECM (3.0L 4JJ1-TC)	※	●	●	●
ECM (3.0L 4JJ1-TC) (Delphi)	※	●	●	●

ECM (3.0L 4JJ1-TC) (TransTron)	※	●	●	●
ECM (3.0L L4 4JX1)	※	●	●	●
ECM (3.2L V6 6VD1)	※	●	●	●
ECM (3.2L V6 6VD1) (Hitachi)	※	●	●	●
ECM (3.5L V6 6VE1)	※	●	●	●
ECM (4HF1) (CNG)	※	●	●	●
ECM (4HG1) (LPG)	※	●	●	●
ECM (4HK1-TC) (C/Rail)	※	●	●	●
ECM (4HK1-TC) (C/Rail_NLT)	※	●	●	●
ECM (4HK1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (4HK1/4JJ1) (C/Rail_Euro2)	※	●	●	●
ECM (4HK1/4JJ1) (C/Rail_Euro3)	※	●	●	●
ECM (4HK1/6HK1) (C/Rail_Euro2)	※	●	●	●
ECM (4HK1/6HK1) (C/Rail_Euro3)	※	●	●	●
ECM (4HV1) (CNG)	※	●	●	●
ECM (4JA1-TC) (Bosch)	※	●	●	●
ECM (4JG2)	※	●	●	●
ECM (4JG2) (LPG)	※	●	●	●
ECM (4JH1-T Denso)	※	●	●	●
ECM (4JH1-TC) (Bosch)	※	●	●	●
ECM (4JJ1-TC) (C/Rail)	※	●	●	●
ECM (4JJ1-TC) (C/Rail_Mexico)	※	●	●	●
ECM (4JJ1-TC) (C/Rail_NLT)	※	●	●	●
ECM (4JJ1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (6HF1-TC) (CNG)	※	●	●	●
ECM (6HK1-TC) (C/Rail)	※	●	●	●
ECM (6HK1-TC) (C/Rail_Euro2)	※	●	●	●
ECM (6HK1-TC) (C/Rail_Euro3)	※	●	●	●
ECM (6HK1-TC) (C/Rail_NLT)	※	●	●	●
ECM (6HK1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (6UZ1-TC) (C/Rail)	※	●	●	●
ECM (6UZ1-TC) (C/Rail_Euro3)	※	●	●	●
ECM (6UZ1-TC) (C/Rail_NLT)	※	●	●	●
ECM (6UZ1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (6WG1-TC) (C/Rail)	※	●	●	●
ECM (6WG1-TC) (C/Rail_NLT)	※	●	●	●
ECM (6WG1-TC) (C/Rail_Tier3)	※	●	●	●
ECM (AW30-40LE)	※	●	●	●
ECM (D-MAX) (4JH1-T Denso)	※	●	●	●
ECM (Engine Control Module)	※	●	●	●
ECM (Hybrid)	※	●	●	●
ECM (V6 Engine)	※	●	●	●
ABS ASR ADVICS	※	●	●	●
ABS (Anti-lock Braking System 6)	※	●	●	●
ABS (Anti-lock Braking System 8)	※	●	●	●
ABS (Anti-lock Braking System)	※	●	●	●
ABS (Anti-lock Braking System) (VPW)	※	●	●	●
ABS/ARS	※	●	●	●
ABS/IESC	※	●	●	●
AS (Air Suspension)	※	●	●	●
AT A460	※	●	●	●
AT Allison LCT	※	●	●	●
AT JR405E	※	●	●	●
AT (Automatic Transmission)	※	●	●	●

AT(Automatic Transmission) (AW30-40LE)	※	●	●	●
AT(Automatic Transmission) (JR405E)	※	●	●	●
Airbag	※	●	●	●
Airbag (VPW)	※	●	●	●
Airbag Siemens	※	●	●	●
BCM(Body Control Module)	※	●	●	●
DSR(Drive Security Reference)	※	●	●	●
EBS(Electronic Brake System)	※	●	●	●
ESC(Electronic Stability Control) (with EBS)	※	●	●	●
HR(Hydraulic Retarder)	※	●	●	●
Immobiliser	※	●	●	●
Millimeter wave radar cruise	※	●	●	●
Mimamori	※	●	●	●
PCM(Powertrain Interface Module)	※	●	●	●
Smoother / Smoother-Ex	※	●	●	●
Smoother / Smoother-Fx	※	●	●	●
Smoother-E	※	●	●	●
Smoother/Smoother-E Auto Shift	※	●	●	●
Speedometer Control Equipment	※	●	●	●

ISUZU OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Year	Vehicle	OIL
2003-2005	Asoender	●
2006	Asoender	●
2007	Asoender	●
1998-1999	Oasis	●
2006	I-280	●
2006	I-350	●
2007	I-290	●
2007	I-370	●