

## Ford\_V11.10 Diag Function List(Note:For reference only)

### NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Module Year
(All MY05) Escape/Tribute/Maverick/Mariner	2005
626 / 626 Wagon / Telstar	1997 - 2001
Aerostar	1996 - 1997
Aspire	1996 - 1997
Aviator	2003 - 2005
B-Max	2012
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	1996 - 1999
Bantam	2001 2006
Blackwood	2002 - 2003
Blue Bird C-Class Vision	2012
Bongo / Bongo Brawny / Spectron	1999 - 2010
Bongo Brawny / Econovan / MAZDA E-Series	1997 - 2002
Bronco	1996
BT-50 / Ranger	2007
C-MAX	2013 - 2017
CAPELLA / CAPELLA W / Telstar / Telstar W	1997 - 1999
Cargo	2004 2009 2012
CF/LCF	2006 - 2009
Continental	2000 - 2002
Contour	1996 - 2000
Cougar	1996 - 2002
Crown Victoria	1995 - 2011
DEMIO / Festiva Mini Wagon	1996 - 2000
E-Series	1996 - 2017
E-Series Shuttle Bus	2006
Econovan	2008
EcoSport	2003 - 2018
Edge	2007 - 2019
Escape / Mariner Hybrid	2005 - 2007
Escape / Tribute	2003 2006
Escape / Tribute / Mariner	2008 - 2012
Escape / Tribute / Maverick	2001 - 2007
Escape / Kuga	2013 - 2018
Escort	1998 - 2003 2015
Everest / Endeavour	2007
Excursion	2000 - 2005
Expedition	1997 - 2018
Expedition EL	2007 - 2014
Explorer	1996 - 2018
Explorer Sport	2000 - 2003
Explorer SportTrac	2000 - 2010

F-150	1997 - 2018
F-150 SuperCrew (4 full size doors)	2001 - 2003
F-250	2006
F-250 Light Duty	1997 - 2000
F-Series	1996 - 1997
F-Series Super Duty	1999 - 2018
F-350/4000	2009
F-650/F-750	2000 - 2018
Fairlane / LTD	2003 - 2006
Fairmont	2003 - 2006
Falcon	2011
Falcon Forte S / Futura / XR / XT	2003 - 2010
Familia / Laser	1996 - 2002
Festiva	1999 - 2000
Fiesta	2002 - 2018
Fiesta / Ikon	2006
Fiesta / Mazda 121 / Bantam	1996 - 2001
Fiesta 3-Door	2002 - 2006
FIGO	2010 - 2011
Five Hundred	2006 - 2007
Five Hundred / Montego	2005
Flex	2009 - 2018
Focus	1999 - 2018
Focus C-MAX	2002 - 2011
FORD GT	2005 2006 2017
Freestar / Monterey	2004 - 2007
Freestyle	2005 - 2007
Friendee / Freda / Bongo	1997 - 2002
Fusion	2002 - 2015
Galaxy	1997 - 2001
Galaxy / S-Max	2006 2010
Granada / Scorpio	1995 - 1998
Grand Marquis	1996 - 2011
Ikon	1999 - 2003
KA	1997 - 2000 2009
Kuga	2008
LS	2000 - 2006
Marauder	2003 - 2004
Mariner	2006 - 2007
Mark LT	2006 - 2008
Milan	2006 - 2011
MKC	2015
MKS	2009 - 2015
MKT	2010 - 2018
MKX	2007 - 2018
MKZ	2013 - 2018
Mondeo	1997 - 2018
Montego	2006 - 2007
Motorhome / Stripped Chassis / Step Van	2004 - 2018
Mountaineer	1999 - 2010
Mustang	1996 - 2018
Mystique	1996 - 2000

Navigator	1998 - 2018			
Navigator L	2007 - 2014			
Novo KA	2008 - 2011			
Premacy / Ixion	1999 - 2002			
Probe / MX-6	1996 - 1997			
Puma	1997 - 2001			
Ranger	2005 - 2009			
Ranger / Courier / Mazda B Series /Bravo	2003			
Ranger / Mazda B-Series / Courier	1996 - 2011			
S.A. Courier	2007 - 2011			
S.A. Fiesta	2002 - 2011			
Sable	1996 - 2009			
Street Ka	2003			
Taurus	1996 - 2018			
Taurus X	2008 - 2009			
Territory	2004 - 2011			
Telstar	1998 - 2001			
Thunderbird	1996 - 2005			
Town Car	1996 - 2011			
Tracer	1996 - 1999			
Transit	1996 - 2018			
Transit Connect	2010 - 2015			
Transit Connect / Tourneo Connect	2002 - 2009			
Transit Courier	2014			
Villager	2001 - 2002			
Windstar	1996 - 2003			
Zephyr / MKZ	2006 - 2012			
<b>Systemlist</b>	<b>EcuInfo.</b>	<b>ReadCodes</b>	<b>EraseCodes</b>	<b>LiveData</b>
PCM (Powertrain Control Module)	○	●	●	●
TCM (Transmission Control Module)	○	●	●	●
4WAS (Air Suspension)	○	●	●	●
CCMII (Cruise Control Module)	○	●	●	●
ABS/TCS (Anti-Lock Brake System/Traction Control Module)	○	●	●	●
IC (Instrument Cluster)	○	●	●	●
EATC (Electronic Automatic Temperature Control)	○	●	●	●
RCM (Restraint Control Module)	○	●	●	●
TPMS (Tire Pressure Monitor)	○	●	●	●
PATS (Passive Anti-Theft System)	○	●	●	●
HCM (Headlamp Control Module)	○	●	●	●
NAV (Navigation System)	○	●	●	●
SOD-L (Side Obstacle Detection Control Module - Left)	○	●	●	●
EPB (Electric Parking Brake)	○	●	●	●
GEM (Generic Electronic Module)	○	●	●	●
DDM (Driver's Door Module)	○	●	●	●
DCSM (Driver/Dual Climate Control Seat Module)	○	●	●	●
EPS (Electronic Controlled Power Steering)	○	●	●	●

ACM (Audio Control Module)	○	●	●	●
GDM (Generic Display Module)	○	●	●	●
AFCM (Alternative Fuel Control Module)	○	●	●	●
GWM (Gateway Module A)	○	●	●	●
OTC (Overhead Trip Computer)	○	●	●	●
WACM (Wireless Accessory Charging Module)	○	●	●	●
GSM (Gear Shift Module)	○	●	●	●
RASM (Rear Air Suspension Module)	○	●	●	●
CCM (Cruise Control Module)	○	●	●	●
IPC (Instrument Panel Control Module)	○	●	●	●
HVAC (Heating Ventilation Air Conditioning)	○	●	●	●
IAB (Integrated Air Bag Module)	○	●	●	●
RTM (Radio Transceiver Module)	○	●	●	●
RKE (Remote Keyless Entry)	○	●	●	●
BECM (Battery Energy Control Module)	○	●	●	●
GPSM (Global Positioning System Module)	○	●	●	●
SOD-R (Side Obstacle Detection Control Module - Right)	○	●	●	●
PAM (Parking Aid Module)	○	●	●	●
BCMII (Body Control Module)	○	●	●	●
D_DCU (Driver Door Control Unit)	○	●	●	●
DSM (Driver Front Seat Module)	○	●	●	●
PSCM (Power Steering Control Module)	○	●	●	●
AIM (Audio Interface Module)	○	●	●	●
FCDIM (Front Control/Display Interface Module)	○	●	●	●
FACM (Fuel Additive Control Module)	○	●	●	●
APIM (Accessory Protocol Interface Module)	○	●	●	●
SOBDM (Secondary OBD Control Module)	○	●	●	●
TRCM (Transmission Range Control Module)	○	●	●	●
NGSCM (Next Generation Speed Control Module)	○	●	●	●
HEC (Hybrid Electronic Cluster)	○	●	●	●
ECS (Electronic Crash Sensor)	○	●	●	●
CSM (Security Module)	○	●	●	●
FLM (Front Lighting Control Module)	○	●	●	●
BCM (Body Control Module)	○	●	●	●
TCU#1 (Telematic Control Unit Module)	○	●	●	●
CMR (Camera Module Rear)	○	●	●	●
PBM (Park Brake Control Module)	○	●	●	●
PDM (Passenger Front Door Module)	○	●	●	●
LPSDM (Left Power Sliding Door Module)	○	●	●	●
SASM (Steering Angle Sensor Module)	○	●	●	●

BPM (Bluetooth Phone Module)	○	●	●	●
FCIM (Front Controls Interface Module)	○	●	●	●
FFH (Fuel Fired Coolant Heating Module)	○	●	●	●
CTM (Convergence Telematics Module)	○	●	●	●
ESOF (Electronic Shift On The Fly)	○	●	●	●
4X4 (4X4 Control Module)	○	●	●	●
VIC (Virtual Image Cluster)	○	●	●	●
HIM (HVAC Integrated Module)	○	●	●	●
VSM (Vehicle Security Module)	○	●	●	●
ILCM (Interior Lighting Control Module)	○	●	●	●
EMM (Energy Management Module)	○	●	●	●
FDSM (Front Distance Sensing Module)	○	●	●	●
P_DCU (Passenger's Door Control Unit)	○	●	●	●
PCSM (Passenger Climate-Control Seat Module)	○	●	●	●
SCCM (Steering Column Control Module)	○	●	●	●
CDP (Compact Disc Player)	○	●	●	●
FDIM (Front Display Interface Module)	○	●	●	●
FIM (Fuel Indication Module)	○	●	●	●
MC (Message Center)	○	●	●	●
SOBDM-C (Secondary OBD Control Module C)	○	●	●	●
PRB (Power Running Board)	○	●	●	●
ARC (Automatic Ride Control)	○	●	●	●
RHVAC (Rear Heating Ventilation Air Conditioning)	○	●	●	●
RAP (Remote Anti-Theft / Personality Module)	○	●	●	●
LCM (Lighting Control Module)	○	●	●	●
BEM (Body Electronic Module)	○	●	●	●
RL_DCU (Rear Left Door Control Unit)	○	●	●	●
PCSM-2 (Passenger Climate-Control Seat Module 2 (Rear))	○	●	●	●
SCIL (Steering Column/Instrument Panel/Lighting)	○	●	●	●
CPM (Cellular Phone Module)	○	●	●	●
FEM (Front Electronic Module)	○	●	●	●
FIP (Fuel Injection Pump)	○	●	●	●
TBM (Tracking And Blocking Module)	○	●	●	●
RCC (Remote Climate Control)	○	●	●	●
ATCM (All Terrain Control Module)	○	●	●	●
RATC (Rear Air Temperature Control)	○	●	●	●
FSSM (Fire Suppression System Module)	○	●	●	●
LHID (Left High Intensity Discharge Lamp)	○	●	●	●
FTCM (Folding Top Control Module)	○	●	●	●
RPSDM (Right Power Sliding Door Module)	○	●	●	●

PSM (Passenger Front Seat Module)	○	●	●	●
SCLM (Steering Column Locking Module)	○	●	●	●
SRM (Speech Recognition Module)	○	●	●	●
HUD (Head Up Display)	○	●	●	●
SSU (Smart Start Unit)	○	●	●	●
AWD (All Wheel Drive)	○	●	●	●
AHCM (Auxiliary Heater Control Module)	○	●	●	●
RFA (Remote Function Actuator)	○	●	●	●
RHID (Right High Intensity Discharge Lamp)	○	●	●	●
BECM-B (Battery Energy Control Module B)	○	●	●	●
GEM/SJB (Generic Electronic Module/Smart Junction Box)	○	●	●	●
RR_DCU (Rear Right Door Control Unit)	○	●	●	●
OCSM (Occupant Classification System Module)	○	●	●	●
SECM (Steering Effort Control Module)	○	●	●	●
RCU (Audio Rear Control Unit)	○	●	●	●
IPM-A (Image Processing Module A)	○	●	●	●
DCDC (DC To DC Converter Control Module)	○	●	●	●
CDIM (Circuit Deactivation Ignition Module)	○	●	●	●
AWD#1 (All Wheel Drive Module)	○	●	●	●
SCM-E (Seat Control Module E)	○	●	●	●
VAPS (Variable Assist Power Steering)	○	●	●	●
RESCU (Remote Emergency Satellite Cellular Unit Module)	○	●	●	●
IPM-B (Image Processing Module B)	○	●	●	●
ICU (Injector Control Unit)	○	●	●	●
CLM#1 (Column Lock Module)	○	●	●	●
SARC (MD Semi Active Ride Control)	○	●	●	●
ACCM#2 (Air Conditioning Control Module)	○	●	●	●
REM (Rear Electronic Module)	○	●	●	●
LTM (Liftgate / Trunk Module)	○	●	●	●
SCM-G (Seat Control Module G)	○	●	●	●
HSWM (Heated Steering Wheel Module)	○	●	●	●
SDARS (Satellite Digital Audio Receiver System)	○	●	●	●
ICM#1 (Information Center Module)	○	●	●	●
MRCM-A (Movable Roof Control Module A)	○	●	●	●
VDM (Vehicle Dynamics Module)	○	●	●	●
HCM-2 (Headlamp Control Module 2(B))	○	●	●	●
RGTM (Rear Gate/Trunk Module)	○	●	●	●
SCM-H (Seat Control Module H)	○	●	●	●
RETM (Rear Seat Entertainment Module)	○	●	●	●
FCIM-B (Front Controls Interface Module B)	○	●	●	●

RDCM#1 (Reductant Control Module)	○	●	●	●
MRCM-B (Movable Roof Control Module B)	○	●	●	●
TCCM (Transfer Case Control Module)	○	●	●	●
RLCM-A (Rear Lighting Control Module A)	○	●	●	●
DCM-E (Door Control Module E)	○	●	●	●
DSP ((Audio) Digital Signal Processing Module)	○	●	●	●
TBC (Trailer Brake Control Module)	○	●	●	●
DCM-F (Door Control Module F)	○	●	●	●
DABM (Digital Audio Broadcast Module)	○	●	●	●
VEMS (Vehicle Emergency Messaging System)	○	●	●	●
RBM (Running Board Control Module)	○	●	●	●
TRM (Trailer Module)	○	●	●	●
DCM-G (Door Control Module G)	○	●	●	●
SCM-B (Seat Control Module B)	○	●	●	●
RACM (Rear Audio Control Module)	○	●	●	●
SFM-A (Switch Function Module A)	○	●	●	●
BCM-B (Body Control Module B)	○	●	●	●
DCM-H (Door Control Module H)	○	●	●	●
SCM-C (Seat Control Module C)	○	●	●	●
ACU (Audio Control Unit)	○	●	●	●
SFM-B (Switch Function Module B)	○	●	●	●
SCM-J (Seat Control Module J)	○	●	●	●
BCM#1 (Body Control Module)	○	●	●	●
SCM-D (Seat Control Module D)	○	●	●	●
DACM-C (Digital Audio Control Module C)	○	●	●	●
GFM (Generic Function Module)	○	●	●	●
SCM-F (Seat Control Module F)	○	●	●	●
GFM-2 (Generic Function Module 2)	○	●	●	●
SUM-B (Suspension Control Module B)	○	●	●	●
AM (Amplifier Module)	○	●	●	●
AFS (Adaptive Front Lighting System)	○	●	●	●
FSC (Forward Sensing Camera)	○	●	●	●
SSU#1 (Start Stop Unit)	○	●	●	●
F_BCM (Front Body Control Module)	○	●	●	●
R_BCM (Rear Body Control Module)	○	●	●	●
SCBS (Smart City Brake Support)	○	●	●	●
SBS/MRCC (Smart Brake Support/Mazda Radar Cruise Control)	○	●	●	●
EATC#1 (Electronic Air Temperature Controller)	○	●	●	●
ICCM (Intelligent Cruise Control Module)	○	●	●	●

Ford\_V01.20 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	OIL
Aviator	●
Crown Victoria	●
E 150 Series	●
E 250 Series	●
E 350 Series	●
E 450 Series	●
E-Series	●
EcoSport	●
Edge	●
Escape	●
Escape Hybrid	●
Expedition	●
Explorer	●
Explorer Sport Trac	●
F-150	●
F-Series	●
F250SD Series	●
F350SD Series	●
F450 Series	●
F550 Series	●
Fiesta	●
Five Hundred	●
Flex	●
Focus	●
Focus 1.6 Tdci 09	●
Freestar	●
Freestyle	●
Fusion	●
Fusion Hybrid	●
Galaxy	●
Grand Marquis	●
Kuga	●
Ls	●
Mariner	●
Mariner Hybrid	●
Milan	●
MKS	●
MKT	●
MKZ	●
MKZ Hybrid	●
Mondeo	●
Montego	●
Monterey	●
Mountaineer	●
Mustang	●
Navigator	●



Navigator L	●
New Mondeo	●
S-MAX	●
Sable	●
Taurus	●
Taurus X	●
Town Car	●
Transit	●
Windstar	●