

CITROEN_V01.25 Diag Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData
Berlingo	ECM (Engine Control Moduel)	●	●	●	●
Berlingo	ABS (Anti-lock Brake System)	●	●	●	●
Berlingo	SRS (Airbag)	●	●	●	●
Berlingo	CP (Control Panel)	●	●	●	●
Berlingo	PAM (Parking Assistance Module)	●	●	●	●
Berlingo	Alarm	●	●	●	●
Berlingo	BSI (Built-in System Interface)	●	●	●	●
Berlingo	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Berlingo	AH (Additional Heating)	●	●	●	●
Berlingo	DISP (Multifunction Display A)	●	●	●	●
Berlingo	Rain/Brightness Sensor	●	●	●	●
Berlingo	SM (Service Module)	●	●	●	●
Berlingo	Radio	●	●	●	●
Berlingo	CD (CD Player)	●	●	●	●
Berlingo (B9)	ECM (Engine Control Moduel)	●	●	●	●
Berlingo (B9)	MAP (Multiplexed Addition Pump)	●	●	●	●
Berlingo (B9)	TCM (Auto Gearbox)	●	●	●	●
Berlingo (B9)	ABS (Anti-lock Brake System)	●	●	●	●
Berlingo (B9)	SRS (Airbag)	●	●	●	●
Berlingo (B9)	CP (Control Panel)	●	●	●	●
Berlingo (B9)	AC (Air Conditioning)	●	●	●	●
Berlingo (B9)	Passenger Compartment Air Heating Resistor	●	●	●	●
Berlingo (B9)	PAM (Parking Assistance Module)	●	●	●	●
Berlingo (B9)	DD (Deflation Detection)	●	●	●	●
Berlingo (B9)	Alarm	●	●	●	●
Berlingo (B9)	BATT (Battery Charge Status Unit)	●	●	●	●
Berlingo (B9)	BATT (Onboard Charger Of The Traction Battery)	●	●	●	●
Berlingo (B9)	BATT (Traction Battery)	●	●	●	●
Berlingo (B9)	BATT 01 (Traction Battery Cells Management 01)	●	●	●	●
Berlingo (B9)	BATT 02 (Traction Battery Cells Management 02)	●	●	●	●
Berlingo (B9)	BATT 03 (Traction Battery Cells Management 03)	●	●	●	●
Berlingo (B9)	BATT 04 (Traction Battery Cells Management 04)	●	●	●	●
Berlingo (B9)	BATT 05 (Traction Battery Cells Management 05)	●	●	●	●
Berlingo (B9)	BATT 07 (Traction Battery Cells Management 07)	●	●	●	●
Berlingo (B9)	BATT 08 (Traction Battery Cells Management 08)	●	●	●	●
Berlingo (B9)	BATT 09 (Traction Battery Cells Management 09)	●	●	●	●
Berlingo (B9)	BATT 10 (Traction Battery Cells Management 10)	●	●	●	●
Berlingo (B9)	BSI (Built-in System Interface)	●	●	●	●
Berlingo (B9)	EPS (Electric Power Steering)	●	●	●	●
Berlingo (B9)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Berlingo (B9)	EMM (Electric Machine Management)	●	●	●	●
Berlingo (B9)	EVM (Electric Vehicle Management)	●	●	●	●
Berlingo (B9)	ERU (Engine Relay Unit)	●	●	●	●
Berlingo (B9)	DISP (Multifunction Display)	●	●	●	●
Berlingo (B9)	Rain/Brightness Sensor	●	●	●	●
Berlingo (B9)	SM (Service Module)	●	●	●	●
Berlingo (B9)	ASM (Anti-slip Mode Selector)	●	●	●	●
Berlingo (B9)	BWC (Bodywork Conversion Unit)	●	●	●	●
Berlingo (B9)	HFCU (Hands Free Control Unit)	●	●	●	●
Berlingo (B9)	HFR (High Frequency Receiver)	●	●	●	●

Berlingo (B9)	Display/Telematics	●	●	●	●
Berlingo (B9)	TRU (Trailer Relay Unit)	●	●	●	●
Berlingo (B9)	Radio	●	●	●	●
Berlingo (B9)	CD (CD Player)	●	●	●	●
C-Crosser	ECM (Engine Control Moduel)	●	●	●	●
C-Crosser	TCM (Auto Gearbox)	●	●	●	●
C-Crosser	ABS (Anti-lock Brake System)	●	●	●	●
C-Crosser	ESP (Electronic Stability Program)	●	●	●	●
C-Crosser	SRS (Airbag)	●	●	●	●
C-Crosser	CP (Control Panel)	●	●	●	●
C-Crosser	AC (Air Conditioning)	●	●	●	●
C-Crosser	PAM (Parking Assistance Module)	●	●	●	●
C-Crosser	NAVI (Navigation)	●	●	●	●
C-Crosser	IMMO (Locking And Immobiliser Control Module)	●	●	●	●
C-Crosser	HL (Headlamp Beam Corrector)	●	●	●	●
C-Crosser	DDCP (Driver Door Control Panel)	●	●	●	●
C-Crosser	PDSP (Passenger Door Switch Panel)	●	●	●	●
C-Crosser	RLDSP (Rear Left Door Switch Panel)	●	●	●	●
C-Crosser	RRDSP (Rear Right Door Switch Panel)	●	●	●	●
C-Crosser	Gear Lever (DCT)	●	●	●	●
C-Crosser	SAS (Steering Wheel Angle Sensor)	●	●	●	●
C-Crosser	Rain/Brightness Sensor	●	●	●	●
C-Crosser	DPC (Rear Final Drive Piloted Clutch)	●	●	●	●
C-Crosser	HFCU (Hands Free Control Unit)	●	●	●	●
C-Crosser	Sunroof	●	●	●	●
C-Crosser	Radio	●	●	●	●
C-Elysee	ECM (Engine Control Moduel)	●	●	●	●
C-Elysee	TCM (Auto Gearbox)	●	●	●	●
C-Elysee	ABS (Anti-lock Brake System)	●	●	●	●
C-Elysee	SRS (Airbag) (Siemens)	●	●	●	●
C-Elysee (M3/M4)	ECM (Engine Control Moduel)	●	●	●	●
C-Elysee (M3/M4)	MAP (Multiplexed Addition Pump)	●	●	●	●
C-Elysee (M3/M4)	TCM (Auto Gearbox)	●	●	●	●
C-Elysee (M3/M4)	ABS (Anti-lock Brake System)	●	●	●	●
C-Elysee (M3/M4)	SRS (Airbag)	●	●	●	●
C-Elysee (M3/M4)	CP (Control Panel)	●	●	●	●
C-Elysee (M3/M4)	PAM (Parking Assistance Module)	●	●	●	●
C-Elysee (M3/M4)	BSI (Built-in System Interface)	●	●	●	●
C-Elysee (M3/M4)	EPS (Electric Power Steering)	●	●	●	●
C-Elysee (M3/M4)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C-Elysee (M3/M4)	DISP (Multifunction Display)	●	●	●	●
C-Elysee (M3/M4)	TRU (Trailer Relay Unit)	●	●	●	●
C-Elysee (M3/M4)	Siren	●	●	●	●
C-Elysee (M3/M4)	Radio	●	●	●	●
C-Quatre	ECM (Engine Control Moduel)	●	●	●	●
C-Quatre	TCM (Auto Gearbox)	●	●	●	●
C-Quatre	ABS (Anti-lock Brake System)	●	●	●	●
C-Quatre	SRS (Airbag) (Autoliv)	●	●	●	●
C-Quatre	CP (Control Panel)	●	●	●	●
C-Quatre	AC (Air Conditioning)	●	●	●	●
C-Quatre	PAM (Parking Assistance Module)	●	●	●	●
C-Quatre	BSI (Built-in System Interface)	●	●	●	●
C-Quatre	EPS (Electric Power Steering)	●	●	●	●
C-Quatre	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C-Quatre	ERU (Engine Relay Unit)	●	●	●	●
C-Quatre	DISP (Multifunction Display)	●	●	●	●
C-Quatre	Rain/Brightness Sensor	●	●	●	●
C-Quatre	HFCU (Hands Free Control Unit)	●	●	●	●

C-Quatre	MDP CONDUCT	●	●	●	●
C-Quatre	MDP PASSAG	●	●	●	●
C-Quatre	Telematic RT3	●	●	●	●
C-Quatre	Radio	●	●	●	●
C-Quatre	CD (CD Player)	●	●	●	●
C-Triomphe	ECM (Engine Control Moduel)	●	●	●	●
C-Triomphe	TCM (Auto Gearbox)	●	●	●	●
C-Triomphe	ABS (Anti-lock Brake System)	●	●	●	●
C-Triomphe	SRS (Airbag)	●	●	●	●
C-Triomphe	AC (Air Conditioning)	●	●	●	●
C-Triomphe	PAM (Parking Assistance Module)	●	●	●	●
C-Triomphe	Alarm	●	●	●	●
C-Triomphe	HL (Adjustable Headlight)	●	●	●	●
C-Triomphe	PDM (Passenger Door Module)	●	●	●	●
C-Triomphe	BSI (Built-in System Interface)	●	●	●	●
C-Triomphe	EPS (Electric Power Steering)	●	●	●	●
C-Triomphe	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C-Triomphe	ERU (Engine Relay Unit)	●	●	●	●
C-Triomphe	ESB (Engine Service Box)	●	●	●	●
C-Triomphe	DISP (Multifunction Display C)	●	●	●	●
C-Triomphe	Rain/Brightness Sensor	●	●	●	●
C-Triomphe	HFCU (Hands Free Control Unit)	●	●	●	●
C-Triomphe	TCB (Tachometer Control Box)	●	●	●	●
C-Triomphe	MDP CONDUCT	●	●	●	●
C-Triomphe	Telematic RT3	●	●	●	●
C-Triomphe	Radio	●	●	●	●
C-Triomphe	CD (CD Player)	●	●	●	●
C-Zero	ASC (Active Stability Control)	●	●	●	●
C-Zero	ORC	●	●	●	●
C-Zero	IC (Instrument Cluster)	●	●	●	●
C-Zero	AC (Air Conditioning)	●	●	●	●
C-Zero	BATT (Onboard Charger Of The Traction Battery)	●	●	●	●
C-Zero	BATT (Traction Battery)	●	●	●	●
C-Zero	BATT 01 (Traction Battery Cells Management 01)	●	●	●	●
C-Zero	BATT 02 (Traction Battery Cells Management 02)	●	●	●	●
C-Zero	BATT 03 (Traction Battery Cells Management 03)	●	●	●	●
C-Zero	BATT 04 (Traction Battery Cells Management 04)	●	●	●	●
C-Zero	BATT 05 (Traction Battery Cells Management 05)	●	●	●	●
C-Zero	BATT 07 (Traction Battery Cells Management 07)	●	●	●	●
C-Zero	BATT 08 (Traction Battery Cells Management 08)	●	●	●	●
C-Zero	BATT 09 (Traction Battery Cells Management 09)	●	●	●	●
C-Zero	BATT 10 (Traction Battery Cells Management 10)	●	●	●	●
C-Zero	BATT 11 (Traction Battery Cells Management 11)	●	●	●	●
C-Zero	EPS (Electric Power Steering)	●	●	●	●
C-Zero	SAS (Steering Wheel Angle Sensor)	●	●	●	●
C-Zero	EMM (Electric Machine Management)	●	●	●	●
C-Zero	EVM (Electric Vehicle Management)	●	●	●	●
C-Zero	SM (Service Module)	●	●	●	●
C-Zero	GW (Gateway Wiring Housing)	●	●	●	●
C-Zero	VOL (Direct Voltage Transformer)	●	●	●	●
C-Zero	Radio	●	●	●	●
C1	ECM (Engine Control Moduel)	●	●	●	●
C1	TCM (Manual Gearbox)	●	●	●	●
C1	ABS/ESP (Anti-brake System Module/Electronic Stability Program)	●	●	●	●
C1	SRS (Airbag)	●	●	●	●
C1	IMMO (Immobiliser)	●	●	●	●
C1	EPS (Electric Power Steering)	●	●	●	●
C1 (B4)	ECM (Engine Control Moduel)	●	●	●	●

C1 (B4)	TCM (Auto Gearbox)	●	●	●	●
C1 (B4)	ABS (Anti-lock Brake System)	●	●	●	●
C1 (B4)	SRS (Airbag)	●	●	●	●
C1 (B4)	IC (Instrument Cluster)	●	●	●	●
C1 (B4)	AC (Air Conditioning)	●	●	●	●
C1 (B4)	Engine Immobiliser\Hands Free Starting Access Electric Module	●	●	●	●
C1 (B4)	EPS (Electric Power Steering)	●	●	●	●
C1 (B4)	Start/Stop Control	●	●	●	●
C1 (B4)	DISP (Multifunction Display)	●	●	●	●
C2	ECM (Engine Control Moduel)	●	●	●	●
C2	TCM (Manual Gearbox)	●	●	●	●
C2	ABS (Anti-lock Brake System)	●	●	●	●
C2	SRS (Airbag)	●	●	●	●
C2	CP (Control Panel)	●	●	●	●
C2	AC (Air Conditioning)	●	●	●	●
C2	PAM (Parking Assistance Module)	●	●	●	●
C2	Alarm	●	●	●	●
C2	BSI (Built-in System Interface)	●	●	●	●
C2	EPS (Electric Power Steering)	●	●	●	●
C2	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C2	ERU (Engine Relay Unit)	●	●	●	●
C2	Start/Stop Control	●	●	●	●
C2	DISP (Multifunction Display C)	●	●	●	●
C2	Rain/Brightness Sensor	●	●	●	●
C2	HFCU (Hands Free Control Unit)	●	●	●	●
C2	HFR (High Frequency Receiver)	●	●	●	●
C2	TU (Telematic Unit)	●	●	●	●
C2	TRU (Trailer Relay Unit)	●	●	●	●
C2	Radio	●	●	●	●
C2	CD (CD Player)	●	●	●	●
C2 (China)	ECM (Engine Control Moduel)	●	●	●	●
C2 (China)	TCM (Auto Gearbox)	●	●	●	●
C2 (China)	ABS (Anti-lock Brake System)	●	●	●	●
C2 (China)	SRS (Airbag)	●	●	●	●
C2 (China)	IC (Instrument Cluster)	●	●	●	●
C2 (China)	AC (Air Conditioning)	●	●	●	●
C2 (China)	BSI (Built-in System Interface)	●	●	●	●
C2 (China)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3	ECM (Engine Control Moduel)	●	●	●	●
C3	TCM (Auto Gearbox)	●	●	●	●
C3	ABS (Anti-lock Brake System)	●	●	●	●
C3	SRS (Airbag)	●	●	●	●
C3	CP (Control Panel)	●	●	●	●
C3	AC (Air Conditioning)	●	●	●	●
C3	PAM (Parking Assistance Module)	●	●	●	●
C3	Alarm	●	●	●	●
C3	BSI (Built-in System Interface)	●	●	●	●
C3	EPS (Electric Power Steering)	●	●	●	●
C3	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3	DAF (Diesel Additive Function)	●	●	●	●
C3	DISP (Multifunction Display A)	●	●	●	●
C3	Rain/Brightness Sensor	●	●	●	●
C3	Radio	●	●	●	●
C3	CD (CD Player)	●	●	●	●
C3 (A51)	ECM (Engine Control Moduel)	●	●	●	●
C3 (A51)	TCM (Auto Gearbox)	●	●	●	●
C3 (A51)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (A51)	SRS (Airbag)	●	●	●	●

C3 (A51)	CP (Control Panel)	●	●	●	●
C3 (A51)	AC (Air Conditioning)	●	●	●	●
C3 (A51)	PAM (Parking Assistance Module)	●	●	●	●
C3 (A51)	Alarm	●	●	●	●
C3 (A51)	BATT (Battery Charge Status Unit)	●	●	●	●
C3 (A51)	DDCP (Driver Door Control Panel)	●	●	●	●
C3 (A51)	SB (Seat Belt Reminder LED)	●	●	●	●
C3 (A51)	BSI (Built-in System Interface)	●	●	●	●
C3 (A51)	EPS (Electric Power Steering)	●	●	●	●
C3 (A51)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (A51)	MAP (Multiplexed Diesel Additive Pump)	●	●	●	●
C3 (A51)	ERU (Engine Relay Unit)	●	●	●	●
C3 (A51)	DISP (Multifunction Display)	●	●	●	●
C3 (A51)	Rain/Brightness Sensor	●	●	●	●
C3 (A51)	SM (Service Module)	●	●	●	●
C3 (A51)	DSM (Driver School Module)	●	●	●	●
C3 (A51)	HFCU (Hands Free Control Unit)	●	●	●	●
C3 (A51)	HFR (High Frequency Receiver)	●	●	●	●
C3 (A51)	Display/Telematics	●	●	●	●
C3 (A51)	TRU (Trailer Relay Unit)	●	●	●	●
C3 (A51)	Radio	●	●	●	●
C3 (Aircross)	ECM (Engine Control Moduel)	●	●	●	●
C3 (Aircross)	TCM (Auto Gearbox)	●	●	●	●
C3 (Aircross)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (Aircross)	SRS (Airbag)	●	●	●	●
C3 (Aircross)	CP (Control Panel)	●	●	●	●
C3 (Aircross)	AC (Air Conditioning)	●	●	●	●
C3 (Aircross)	PAM (Parking Assistance Module)	●	●	●	●
C3 (Aircross)	Alarm	●	●	●	●
C3 (Aircross)	BSI (Built-in System Interface)	●	●	●	●
C3 (Aircross)	EPS (Electric Power Steering)	●	●	●	●
C3 (Aircross)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (Aircross)	SVLCU (Stolen Vehicle Location Control Unit)	●	●	●	●
C3 (Aircross)	Rain/Brightness Sensor	●	●	●	●
C3 (Aircross)	SM (Service Module)	●	●	●	●
C3 (Aircross)	TU (Telematic Unit)	●	●	●	●
C3 (Aircross)	TRU (Trailer Relay Unit)	●	●	●	●
C3 (Aircross)	Radio	●	●	●	●
C3 (Aircross A88)	ECM (Engine Control Moduel)	●	●	●	●
C3 (Aircross A88)	MAP (Multiplexed Addition Pump)	●	●	●	●
C3 (Aircross A88)	TCM (Auto Gearbox)	●	●	●	●
C3 (Aircross A88)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (Aircross A88)	CP (Control Panel)	●	●	●	●
C3 (Aircross A88)	MCP (Multiplexed Control Panel)	●	●	●	●
C3 (Aircross A88)	AC (Air Conditioning)	●	●	●	●
C3 (Aircross A88)	PAM (Parking Assistance Module)	●	●	●	●
C3 (Aircross A88)	ESL (Electric Steering Lock)	●	●	●	●
C3 (Aircross A88)	BATT (Battery Charge Status Unit)	●	●	●	●
C3 (Aircross A88)	DDCP (Driver Door Control Panel)	●	●	●	●
C3 (Aircross A88)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C3 (Aircross A88)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (Aircross A88)	HHV (High Head Vision)	●	●	●	●
C3 (Aircross A88)	DISP (Multifunction Display)	●	●	●	●
C3 (Aircross A88)	Rain/Brightness Sensor	●	●	●	●
C3 (Aircross A88)	ASM (Anti-slip Mode Selector)	●	●	●	●
C3 (Aircross A88)	VOL (Voltage Retaining Device)	●	●	●	●
C3 (Aircross A88)	TRU (Trailer Relay Unit)	●	●	●	●
C3 (Aircross A88)	Siren	●	●	●	●

C3 (Aircross A88)	CD (External CD Player)	●	●	●	●
C3 (B618)	ECM (Engine Control Moduel)	●	●	●	●
C3 (B618)	TCM (Auto Gearbox)	●	●	●	●
C3 (B618)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (B618)	CP (Control Panel)	●	●	●	●
C3 (B618)	MCP (Multiplexed Control Panel)	●	●	●	●
C3 (B618)	AC (Air Conditioning)	●	●	●	●
C3 (B618)	PAM (Parking Assistance Module)	●	●	●	●
C3 (B618)	ESL (Electric Steering Lock)	●	●	●	●
C3 (B618)	BATT (Battery Charge Status Unit)	●	●	●	●
C3 (B618)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C3 (B618)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (B618)	DAF (Diesel Additive Function)	●	●	●	●
C3 (B618)	DISP (Multifunction Display)	●	●	●	●
C3 (B618)	Rain/Brightness Sensor	●	●	●	●
C3 (B618)	VOL (Voltage Retaining Device)	●	●	●	●
C3 (B618)	TRU (Trailer Relay Unit)	●	●	●	●
C3 (B618)	Siren	●	●	●	●
C3 (B618)	CD (External CD Player)	●	●	●	●
C3 (New Look)	ECM (Engine Control Moduel)	●	●	●	●
C3 (New Look)	TCM (Auto Gearbox)	●	●	●	●
C3 (New Look)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (New Look)	SRS (Airbag)	●	●	●	●
C3 (New Look)	CP (Control Panel)	●	●	●	●
C3 (New Look)	AC (Air Conditioning)	●	●	●	●
C3 (New Look)	PAM (Parking Assistance Module)	●	●	●	●
C3 (New Look)	Alarm	●	●	●	●
C3 (New Look)	BSI (Built-in System Interface)	●	●	●	●
C3 (New Look)	EPS (Electric Power Steering)	●	●	●	●
C3 (New Look)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (New Look)	ERU (Engine Relay Unit)	●	●	●	●
C3 (New Look)	DISP (Multifunction Display C)	●	●	●	●
C3 (New Look)	Rain/Brightness Sensor	●	●	●	●
C3 (New Look)	HFCU (Hands Free Control Unit)	●	●	●	●
C3 (New Look)	Telematic RT3	●	●	●	●
C3 (New Look)	Radio	●	●	●	●
C3 (New Look)	CD (CD Player)	●	●	●	●
C3 (Picasso)	ECM (Engine Control Moduel)	●	●	●	●
C3 (Picasso)	TCM (Auto Gearbox)	●	●	●	●
C3 (Picasso)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (Picasso)	SRS (Airbag)	●	●	●	●
C3 (Picasso)	CP (Control Panel)	●	●	●	●
C3 (Picasso)	AC (Air Conditioning)	●	●	●	●
C3 (Picasso)	PAM (Parking Assistance Module)	●	●	●	●
C3 (Picasso)	Alarm	●	●	●	●
C3 (Picasso)	BATT (Battery Charge Status Unit)	●	●	●	●
C3 (Picasso)	DDCP (Driver Door Control Panel)	●	●	●	●
C3 (Picasso)	SB (Seat Belt Reminder LED)	●	●	●	●
C3 (Picasso)	BSI (Built-in System Interface)	●	●	●	●
C3 (Picasso)	EPS (Electric Power Steering)	●	●	●	●
C3 (Picasso)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (Picasso)	MAP (Multiplexed Diesel Additive Pump)	●	●	●	●
C3 (Picasso)	ERU (Engine Relay Unit)	●	●	●	●
C3 (Picasso)	DISP (Multifunction Display)	●	●	●	●
C3 (Picasso)	Rain/Brightness Sensor	●	●	●	●
C3 (Picasso)	SM (Service Module)	●	●	●	●
C3 (Picasso)	HFCU (Hands Free Control Unit)	●	●	●	●
C3 (Picasso)	HFR (High Frequency Receiver)	●	●	●	●

C3 (Picasso)	Display/Telematics	●	●	●	●
C3 (Picasso)	TRU (Trailer Relay Unit)	●	●	●	●
C3 (Picasso)	Radio	●	●	●	●
C3 (Pluriel)	ECM (Engine Control Moduel)	●	●	●	●
C3 (Pluriel)	TCM (Manual Gearbox)	●	●	●	●
C3 (Pluriel)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (Pluriel)	SRS (Airbag)	●	●	●	●
C3 (Pluriel)	CP (Control Panel)	●	●	●	●
C3 (Pluriel)	AC (Air Conditioning)	●	●	●	●
C3 (Pluriel)	PAM (Parking Assistance Module)	●	●	●	●
C3 (Pluriel)	BSI (Built-in System Interface)	●	●	●	●
C3 (Pluriel)	EPS (Electric Power Steering)	●	●	●	●
C3 (Pluriel)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (Pluriel)	ERU (Engine Relay Unit)	●	●	●	●
C3 (Pluriel)	DISP (Multifunction Display C)	●	●	●	●
C3 (Pluriel)	Rain/Brightness Sensor	●	●	●	●
C3 (Pluriel)	HFCU (Hands Free Control Unit)	●	●	●	●
C3 (Pluriel)	Telematic RT3	●	●	●	●
C3 (Pluriel)	Radio	●	●	●	●
C3 (Pluriel)	CD (CD Player)	●	●	●	●
C3 (XR)	ECM (Engine Control Moduel)	●	●	●	●
C3 (XR)	TCM (Auto Gearbox)	●	●	●	●
C3 (XR)	ABS (Anti-lock Brake System)	●	●	●	●
C3 (XR)	SRS (Airbag)	●	●	●	●
C3 (XR)	CP (Control Panel)	●	●	●	●
C3 (XR)	MCP (Multiplexed Control Panel)	●	●	●	●
C3 (XR)	PAM (Parking Assistance Module)	●	●	●	●
C3 (XR)	ESL (Electric Steering Lock)	●	●	●	●
C3 (XR)	KEY (Electric Key Reader)	●	●	●	●
C3 (XR)	BATT (Battery Charge Status Unit)	●	●	●	●
C3 (XR)	BSI (Built-in System Interface)	●	●	●	●
C3 (XR)	EPS (Electric Power Steering)	●	●	●	●
C3 (XR)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C3 (XR)	DISP (Multifunction Display)	●	●	●	●
C3 (XR)	SM (Service Module)	●	●	●	●
C3 (XR)	ASM (Anti-slip Mode Selector)	●	●	●	●
C3 (XR)	HFCU (Hands Free Control Unit)	●	●	●	●
C3 (XR)	VOL (Voltage Retaining Device)	●	●	●	●
C3 (XR)	TU (Telematic Unit)	●	●	●	●
C3 (XR)	Radio	●	●	●	●
C4	ECM (Engine Control Moduel)	●	●	●	●
C4	MAP (Multiplexed Addition Pump)	●	●	●	●
C4	TCM (Auto Gearbox)	●	●	●	●
C4	ABS (Anti-lock Brake System)	●	●	●	●
C4	SRS (Airbag)	●	●	●	●
C4	CP (Control Panel)	●	●	●	●
C4	AC (Air Conditioning)	●	●	●	●
C4	EPB (Electric Secondary Brake)	●	●	●	●
C4	PAM (Parking Assistance Module)	●	●	●	●
C4	DD (Deflation Detection)	●	●	●	●
C4	SSP (Pneumatic Suspension)	●	●	●	●
C4	Alarm	●	●	●	●
C4	BATT (Battery Charge Status Unit)	●	●	●	●
C4	HL (Directional Headlamps)	●	●	●	●
C4	DDCP (Driver Door Control Panel)	●	●	●	●
C4	PDM (Passenger Door Module)	●	●	●	●
C4	DSMU (Driver Seat Memory Unit)	●	●	●	●
C4	BSI (Built-in System Interface)	●	●	●	●

C4	EPS (Electric Power Steering)	●	●	●	●
C4	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4	DAF (Diesel Additive Function)	●	●	●	●
C4	ERU (Engine Relay Unit)	●	●	●	●
C4	LDWS (Lane Departure Warning System)	●	●	●	●
C4	DISP (Multifunction Display)	●	●	●	●
C4	Rain/Brightness Sensor	●	●	●	●
C4	LPU (Light Pack Unit)	●	●	●	●
C4	SM (Service Module)	●	●	●	●
C4	DSM (Driver School Module)	●	●	●	●
C4	HFCU (Hands Free Control Unit)	●	●	●	●
C4	HFR (High Frequency Receiver)	●	●	●	●
C4	URC (Unit Rev Counter)	●	●	●	●
C4	Display/Telematics	●	●	●	●
C4	Wiper (Windscreen Wiper)	●	●	●	●
C4	TRU (Trailer Relay Unit)	●	●	●	●
C4	Radio	●	●	●	●
C4	AMP (Audio Amplifier)	●	●	●	●
C4	CD (CD Player)	●	●	●	●
C4 (Aircross)	ECM (Engine Control Moduel)	●	●	●	●
C4 (Aircross)	TCM (Auto Gearbox)	●	●	●	●
C4 (Aircross)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (Aircross)	SRS (Airbag)	●	●	●	●
C4 (Aircross)	CP (Control Panel)	●	●	●	●
C4 (Aircross)	AC (Air Conditioning)	●	●	●	●
C4 (Aircross)	PAM (Parking Assistance Module)	●	●	●	●
C4 (Aircross)	NAVI (Navigation)	●	●	●	●
C4 (Aircross)	IMMO (Locking And Immobiliser Control Module)	●	●	●	●
C4 (Aircross)	AUTH (Starting Authorisation)	●	●	●	●
C4 (Aircross)	EPS (Electric Power Steering)	●	●	●	●
C4 (Aircross)	SAS (Steering Wheel Angle Sensor)	●	●	●	●
C4 (Aircross)	Start/Stop Control	●	●	●	●
C4 (Aircross)	DPC (Rear Final Drive Piloted Clutch)	●	●	●	●
C4 (Aircross)	Radio	●	●	●	●
C4 (B7)	ECM (Engine Control Moduel)	●	●	●	●
C4 (B7)	MAP (Multiplexed Addition Pump)	●	●	●	●
C4 (B7)	TCM (Auto Gearbox)	●	●	●	●
C4 (B7)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (B7)	SRS (Airbag)	●	●	●	●
C4 (B7)	CP (Control Panel)	●	●	●	●
C4 (B7)	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
C4 (B7)	MCP (Multiplexed Control Panel)	●	●	●	●
C4 (B7)	AC (Air Conditioning)	●	●	●	●
C4 (B7)	EPB (Electric Secondary Brake)	●	●	●	●
C4 (B7)	PAM (Parking Assistance Module)	●	●	●	●
C4 (B7)	DD (Deflation Detection)	●	●	●	●
C4 (B7)	Alarm	●	●	●	●
C4 (B7)	ESL (Electric Steering Lock)	●	●	●	●
C4 (B7)	KEY (Electric Key Reader)	●	●	●	●
C4 (B7)	BATT (Battery Charge Status Unit)	●	●	●	●
C4 (B7)	HL (Directional Headlamps)	●	●	●	●
C4 (B7)	DDCP (Driver Door Control Panel)	●	●	●	●
C4 (B7)	DSMU (Driver Seat Memory Unit)	●	●	●	●
C4 (B7)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C4 (B7)	EPS (Electric Power Steering)	●	●	●	●
C4 (B7)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4 (B7)	ERU (Engine Relay Unit)	●	●	●	●
C4 (B7)	LDWS (Lane Departure Warning System)	●	●	●	●

C4 (B7)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
C4 (B7)	DISP (Multifunction Display)	●	●	●	●
C4 (B7)	Rain/Brightness Sensor	●	●	●	●
C4 (B7)	SM (Service Module)	●	●	●	●
C4 (B7)	DSM (Driver School Module)	●	●	●	●
C4 (B7)	Monitoring Of The Blind Spot	●	●	●	●
C4 (B7)	Display/Telematics	●	●	●	●
C4 (B7)	TRU (Trailer Relay Unit)	●	●	●	●
C4 (B7)	Radio	●	●	●	●
C4 (B7)	AMP (Audio Amplifier)	●	●	●	●
C4 (BZ3 China)	ECM (Engine Control Moduel)	●	●	●	●
C4 (BZ3 China)	MAP (Multiplexed Addition Pump)	●	●	●	●
C4 (BZ3 China)	TCM (Auto Gearbox)	●	●	●	●
C4 (BZ3 China)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (BZ3 China)	SRS (Airbag)	●	●	●	●
C4 (BZ3 China)	CP (Control Panel)	●	●	●	●
C4 (BZ3 China)	MCP (Multiplexed Control Panel)	●	●	●	●
C4 (BZ3 China)	AC (Air Conditioning)	●	●	●	●
C4 (BZ3 China)	PAM (Parking Assistance Module)	●	●	●	●
C4 (BZ3 China)	ESL (Electric Steering Lock)	●	●	●	●
C4 (BZ3 China)	KEY (Electric Key Reader)	●	●	●	●
C4 (BZ3 China)	BATT (Battery Charge Status Unit)	●	●	●	●
C4 (BZ3 China)	BSI (Built-in System Interface)	●	●	●	●
C4 (BZ3 China)	EPS (Electric Power Steering)	●	●	●	●
C4 (BZ3 China)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4 (BZ3 China)	DISP (Multifunction Display)	●	●	●	●
C4 (BZ3 China)	Rain/Brightness Sensor	●	●	●	●
C4 (BZ3 China)	SM (Service Module)	●	●	●	●
C4 (BZ3 China)	ASM (Anti-slip Mode Selector)	●	●	●	●
C4 (BZ3 China)	HFCU (Hands Free Control Unit)	●	●	●	●
C4 (BZ3 China)	VOL (Voltage Retaining Device)	●	●	●	●
C4 (BZ3 China)	TU (Telematic Unit)	●	●	●	●
C4 (BZ3 China)	TRU (Trailer Relay Unit)	●	●	●	●
C4 (BZ3 China)	Siren	●	●	●	●
C4 (BZ3 China)	Radio	●	●	●	●
C4 (Cactus)	ECM (Engine Control Moduel)	●	●	●	●
C4 (Cactus)	TCM (Auto Gearbox)	●	●	●	●
C4 (Cactus)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (Cactus)	SRS (Airbag)	●	●	●	●
C4 (Cactus)	CP (Control Panel)	●	●	●	●
C4 (Cactus)	MCP (Multiplexed Control Panel)	●	●	●	●
C4 (Cactus)	AC (Air Conditioning)	●	●	●	●
C4 (Cactus)	PAM (Parking Assistance Module)	●	●	●	●
C4 (Cactus)	BATT (Battery Charge Status Unit)	●	●	●	●
C4 (Cactus)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C4 (Cactus)	BSI (Built-in System Interface)	●	●	●	●
C4 (Cactus)	EPS (Electric Power Steering)	●	●	●	●
C4 (Cactus)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4 (Cactus)	DAF (Diesel Additive Function)	●	●	●	●
C4 (Cactus)	TS (Touch Screen)	●	●	●	●
C4 (Cactus)	Rain/Brightness Sensor	●	●	●	●
C4 (Cactus)	SM (Service Module)	●	●	●	●
C4 (Cactus)	VOL (Voltage Retaining Device)	●	●	●	●
C4 (Cactus)	TU (Telematic Unit)	●	●	●	●
C4 (Cactus)	TRU (Trailer Relay Unit)	●	●	●	●
C4 (Cactus)	CD (External CD Player)	●	●	●	●
C4 (Picasso)	ECM (Engine Control Moduel)	●	●	●	●
C4 (Picasso)	MAP (Multiplexed Addition Pump)	●	●	●	●

C4 (Picasso)	TCM (Auto Gearbox)	●	●	●	●
C4 (Picasso)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (Picasso)	SRS (Airbag)	●	●	●	●
C4 (Picasso)	CP (Control Panel)	●	●	●	●
C4 (Picasso)	MCP (Multiplexed Control Panel)	●	●	●	●
C4 (Picasso)	AC (Air Conditioning)	●	●	●	●
C4 (Picasso)	EPB (Electric Secondary Brake)	●	●	●	●
C4 (Picasso)	PAM (Parking Assistance Module)	●	●	●	●
C4 (Picasso)	DD (Deflation Detection)	●	●	●	●
C4 (Picasso)	SSP (Pneumatic Suspension)	●	●	●	●
C4 (Picasso)	Alarm	●	●	●	●
C4 (Picasso)	ESL (Electric Steering Lock)	●	●	●	●
C4 (Picasso)	KEY (Electric Key Reader)	●	●	●	●
C4 (Picasso)	BATT (Battery Charge Status Unit)	●	●	●	●
C4 (Picasso)	HL (Directional Headlamps)	●	●	●	●
C4 (Picasso)	DDCP (Driver Door Control Panel)	●	●	●	●
C4 (Picasso)	PDM (Passenger Door Module)	●	●	●	●
C4 (Picasso)	DSMU (Driver Seat Memory Unit)	●	●	●	●
C4 (Picasso)	Right Reversible Seat Belt Reel	●	●	●	●
C4 (Picasso)	Left Reversible Seat Belt Reel	●	●	●	●
C4 (Picasso)	BCM (Body Control Module)	●	●	●	●
C4 (Picasso)	BSI (Built-in System Interface)	●	●	●	●
C4 (Picasso)	EPS (Electric Power Steering)	●	●	●	●
C4 (Picasso)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4 (Picasso)	DAF (Diesel Additive Function)	●	●	●	●
C4 (Picasso)	ERU (Engine Relay Unit)	●	●	●	●
C4 (Picasso)	LDWS (Lane Departure Warning System)	●	●	●	●
C4 (Picasso)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
C4 (Picasso)	MC (Multifunction Camera)	●	●	●	●
C4 (Picasso)	DISP (Multifunction Display)	●	●	●	●
C4 (Picasso)	Rain/Brightness Sensor	●	●	●	●
C4 (Picasso)	LPU (Light Pack Unit)	●	●	●	●
C4 (Picasso)	SM (Service Module)	●	●	●	●
C4 (Picasso)	DSM (Driver School Module)	●	●	●	●
C4 (Picasso)	HFCU (Hands Free Control Unit)	●	●	●	●
C4 (Picasso)	HFR (High Frequency Receiver)	●	●	●	●
C4 (Picasso)	SFB (Signalling Fuse Box)	●	●	●	●
C4 (Picasso)	URC (Unit Rev Counter)	●	●	●	●
C4 (Picasso)	VDA (Vehicle Distance Assistance)	●	●	●	●
C4 (Picasso)	Display/Telematics	●	●	●	●
C4 (Picasso)	Wiper (Windscreen Wiper)	●	●	●	●
C4 (Picasso)	TRU (Trailer Relay Unit)	●	●	●	●
C4 (Picasso)	Siren	●	●	●	●
C4 (Picasso)	Radio	●	●	●	●
C4 (Picasso)	AMP (Audio Amplifier)	●	●	●	●
C4 (Picasso)	CD (CD Player)	●	●	●	●
C4 (Sedan)	ECM (Engine Control Moduel)	●	●	●	●
C4 (Sedan)	MAP (Multiplexed Addition Pump)	●	●	●	●
C4 (Sedan)	TCM (Auto Gearbox)	●	●	●	●
C4 (Sedan)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (Sedan)	SRS (Airbag)	●	●	●	●
C4 (Sedan)	CP (Control Panel)	●	●	●	●
C4 (Sedan)	AC (Air Conditioning)	●	●	●	●
C4 (Sedan)	EPB (Electric Secondary Brake)	●	●	●	●
C4 (Sedan)	PAM (Parking Assistance Module)	●	●	●	●
C4 (Sedan)	DD (Deflation Detection)	●	●	●	●
C4 (Sedan)	SSP (Pneumatic Suspension)	●	●	●	●
C4 (Sedan)	Alarm	●	●	●	●

C4 (Sedan)	BATT (Battery Charge Status Unit)	●	●	●	●
C4 (Sedan)	HL (Directional Headlamps)	●	●	●	●
C4 (Sedan)	DDCP (Driver Door Control Panel)	●	●	●	●
C4 (Sedan)	PDM (Passenger Door Module)	●	●	●	●
C4 (Sedan)	DSMU (Driver Seat Memory Unit)	●	●	●	●
C4 (Sedan)	BSI (Built-in System Interface)	●	●	●	●
C4 (Sedan)	EPS (Electric Power Steering)	●	●	●	●
C4 (Sedan)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4 (Sedan)	DAF (Diesel Additive Function)	●	●	●	●
C4 (Sedan)	ERU (Engine Relay Unit)	●	●	●	●
C4 (Sedan)	LDWS (Lane Departure Warning System)	●	●	●	●
C4 (Sedan)	DISP (Multifunction Display)	●	●	●	●
C4 (Sedan)	Rain/Brightness Sensor	●	●	●	●
C4 (Sedan)	LPU (Light Pack Unit)	●	●	●	●
C4 (Sedan)	SM (Service Module)	●	●	●	●
C4 (Sedan)	DSM (Driver School Module)	●	●	●	●
C4 (Sedan)	HFCU (Hands Free Control Unit)	●	●	●	●
C4 (Sedan)	HFR (High Frequency Receiver)	●	●	●	●
C4 (Sedan)	URC (Unit Rev Counter)	●	●	●	●
C4 (Sedan)	Display/Telematics	●	●	●	●
C4 (Sedan)	Wiper (Windscreen Wiper)	●	●	●	●
C4 (Sedan)	TRU (Trailer Relay Unit)	●	●	●	●
C4 (Sedan)	Radio	●	●	●	●
C4 (Sedan)	AMP (Audio Amplifier)	●	●	●	●
C4 (Sedan)	CD (CD Player)	●	●	●	●
C4 (Sedan B7)	ECM (Engine Control Moduel)	●	●	●	●
C4 (Sedan B7)	MAP (Multiplexed Addition Pump)	●	●	●	●
C4 (Sedan B7)	TCM (Auto Gearbox)	●	●	●	●
C4 (Sedan B7)	ABS (Anti-lock Brake System)	●	●	●	●
C4 (Sedan B7)	SRS (Airbag)	●	●	●	●
C4 (Sedan B7)	CP (Control Panel)	●	●	●	●
C4 (Sedan B7)	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
C4 (Sedan B7)	MCP (Multiplexed Control Panel)	●	●	●	●
C4 (Sedan B7)	AC (Air Conditioning)	●	●	●	●
C4 (Sedan B7)	PAM (Parking Assistance Module)	●	●	●	●
C4 (Sedan B7)	DD (Deflation Detection)	●	●	●	●
C4 (Sedan B7)	Alarm	●	●	●	●
C4 (Sedan B7)	ESL (Electric Steering Lock)	●	●	●	●
C4 (Sedan B7)	BATT (Battery Charge Status Unit)	●	●	●	●
C4 (Sedan B7)	HL (Directional Headlamps)	●	●	●	●
C4 (Sedan B7)	DDCP (Driver Door Control Panel)	●	●	●	●
C4 (Sedan B7)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C4 (Sedan B7)	BSI (Built-in System Interface)	●	●	●	●
C4 (Sedan B7)	EPS (Electric Power Steering)	●	●	●	●
C4 (Sedan B7)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4 (Sedan B7)	ERU (Engine Relay Unit)	●	●	●	●
C4 (Sedan B7)	LDWS (Lane Departure Warning System)	●	●	●	●
C4 (Sedan B7)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
C4 (Sedan B7)	DISP (Multifunction Display)	●	●	●	●
C4 (Sedan B7)	Rain/Brightness Sensor	●	●	●	●
C4 (Sedan B7)	SM (Service Module)	●	●	●	●
C4 (Sedan B7)	DSM (Driver School Module)	●	●	●	●
C4 (Sedan B7)	Monitoring Of The Blind Spot	●	●	●	●
C4 (Sedan B7)	Display/Telematics	●	●	●	●
C4 (Sedan B7)	TRU (Trailer Relay Unit)	●	●	●	●
C4 (Sedan B7)	Radio	●	●	●	●
C4 (Sedan B7)	AMP (Audio Amplifier)	●	●	●	●
C4L (B7)	ECM (Engine Control Moduel)	●	●	●	●

C4L (B7)	MAP (Multiplexed Addition Pump)	●	●	●	●
C4L (B7)	TCM (Auto Gearbox)	●	●	●	●
C4L (B7)	ABS (Anti-lock Brake System)	●	●	●	●
C4L (B7)	SRS (Airbag)	●	●	●	●
C4L (B7)	CP (Control Panel)	●	●	●	●
C4L (B7)	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
C4L (B7)	MCP (Multiplexed Control Panel)	●	●	●	●
C4L (B7)	AC (Air Conditioning)	●	●	●	●
C4L (B7)	PAM (Parking Assistance Module)	●	●	●	●
C4L (B7)	DD (Deflation Detection)	●	●	●	●
C4L (B7)	Alarm	●	●	●	●
C4L (B7)	ESL (Electric Steering Lock)	●	●	●	●
C4L (B7)	BATT (Battery Charge Status Unit)	●	●	●	●
C4L (B7)	HL (Directional Headlamps)	●	●	●	●
C4L (B7)	DDCP (Driver Door Control Panel)	●	●	●	●
C4L (B7)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C4L (B7)	BSI (Built-in System Interface)	●	●	●	●
C4L (B7)	EPS (Electric Power Steering)	●	●	●	●
C4L (B7)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C4L (B7)	ERU (Engine Relay Unit)	●	●	●	●
C4L (B7)	LDWS (Lane Departure Warning System)	●	●	●	●
C4L (B7)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
C4L (B7)	DISP (Multifunction Display)	●	●	●	●
C4L (B7)	Rain/Brightness Sensor	●	●	●	●
C4L (B7)	SM (Service Module)	●	●	●	●
C4L (B7)	DSM (Driver School Module)	●	●	●	●
C4L (B7)	Monitoring Of The Blind Spot	●	●	●	●
C4L (B7)	Display/Telematics	●	●	●	●
C4L (B7)	TRU (Trailer Relay Unit)	●	●	●	●
C4L (B7)	Radio	●	●	●	●
C4L (B7)	AMP (Audio Amplifier)	●	●	●	●
C5	ECM (Engine Control Moduel)	●	●	●	●
C5	TCM (Auto Gearbox)	●	●	●	●
C5	ABS (Anti-brake System Module) [Teves MK60]	●	●	●	●
C5	SRS (Airbag)	●	●	●	●
C5	CP (Control Panel)	●	●	●	●
C5	AC (Air Conditioning)	●	●	●	●
C5	PAM (Parking Assistance Module)	●	●	●	●
C5	Alarm	●	●	●	●
C5	BSI (Built-in System Interface)	●	●	●	●
C5	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C5	DISP (Multifunction Display A)	●	●	●	●
C5	Rain/Brightness Sensor	●	●	●	●
C5	ADDGO 2	●	●	●	●
C5	ADDITIF FAP	●	●	●	●
C5	MDP CONDUCT	●	●	●	●
C5	MDP PASSAG	●	●	●	●
C5	Radio	●	●	●	●
C5	CD (CD Player)	●	●	●	●
C5 (Aircross)	ECM (Engine Control Moduel)	●	●	●	●
C5 (Aircross)	TCM (Auto Gearbox)	●	●	●	●
C5 (Aircross)	ABS (Anti-lock Brake System)	●	●	●	●
C5 (Aircross)	SRS (Airbag)	●	●	●	●
C5 (Aircross)	CP (Control Panel)	●	●	●	●
C5 (Aircross)	MCP (Multiplexed Control Panel)	●	●	●	●
C5 (Aircross)	AC (Air Conditioning)	●	●	●	●
C5 (Aircross)	PAM (Parking Assistance Module)	●	●	●	●
C5 (Aircross)	ESL (Electric Steering Lock)	●	●	●	●

C5 (Aircross)	BATT (Battery Charge Status Unit)	●	●	●	●
C5 (Aircross)	HL (Directional Headlamps)	●	●	●	●
C5 (Aircross)	DDCP (Driver Door Control Panel)	●	●	●	●
C5 (Aircross)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
C5 (Aircross)	BCM (Body Control Module)	●	●	●	●
C5 (Aircross)	EPS (Electric Power Steering)	●	●	●	●
C5 (Aircross)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C5 (Aircross)	Rain/Brightness Sensor	●	●	●	●
C5 (Aircross)	SM (Service Module)	●	●	●	●
C5 (Aircross)	ASM (Anti-slip Mode Selector)	●	●	●	●
C5 (Aircross)	VDA (Vehicle Distance Assistance)	●	●	●	●
C5 (Aircross)	VOL (Voltage Retaining Device)	●	●	●	●
C5 (Aircross)	Display/Telematics	●	●	●	●
C5 (New)	ECM (Engine Control Moduel)	●	●	●	●
C5 (New)	TCM (Auto Gearbox)	●	●	●	●
C5 (New)	ABS (Anti-lock Brake System)	●	●	●	●
C5 (New)	SRS (Airbag)	●	●	●	●
C5 (New)	AC (Air Conditioning)	●	●	●	●
C5 (New)	PAM (Parking Assistance Module)	●	●	●	●
C5 (New)	DD (Deflation Detection)	●	●	●	●
C5 (New)	SSP (Ecotech Suspension)	●	●	●	●
C5 (New)	Alarm	●	●	●	●
C5 (New)	HL (Directional Headlamps)	●	●	●	●
C5 (New)	BSI (Built-in System Interface)	●	●	●	●
C5 (New)	EPS (Electric Power Steering)	●	●	●	●
C5 (New)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C5 (New)	ERU (Engine Relay Unit)	●	●	●	●
C5 (New)	DISP (Multifunction Display C)	●	●	●	●
C5 (New)	Rain/Brightness Sensor	●	●	●	●
C5 (New)	HFCU (Hands Free Control Unit)	●	●	●	●
C5 (New)	ADDGO 3	●	●	●	●
C5 (New)	MDP CONDUCT	●	●	●	●
C5 (New)	MDP PASSAG	●	●	●	●
C5 (New)	Telematic RT3	●	●	●	●
C5 (New)	Radio	●	●	●	●
C5 (New)	CD (CD Player)	●	●	●	●
C5 (X7)	ECM (Engine Control Moduel)	●	●	●	●
C5 (X7)	TCM (Auto Gearbox)	●	●	●	●
C5 (X7)	ABS (Anti-lock Brake System)	●	●	●	●
C5 (X7)	SRS (Airbag)	●	●	●	●
C5 (X7)	CP (Control Panel)	●	●	●	●
C5 (X7)	AC (Air Conditioning)	●	●	●	●
C5 (X7)	EPB (Electric Secondary Brake)	●	●	●	●
C5 (X7)	PAM (Parking Assistance Module)	●	●	●	●
C5 (X7)	DD (Deflation Detection)	●	●	●	●
C5 (X7)	SSP (Active Damper Electronic Unit)	●	●	●	●
C5 (X7)	SSP (Suspension System Control)	●	●	●	●
C5 (X7)	Alarm	●	●	●	●
C5 (X7)	BATT (Battery Charge Status Unit)	●	●	●	●
C5 (X7)	HL (Directional Headlamps)	●	●	●	●
C5 (X7)	DDCP (Driver Door Control Panel)	●	●	●	●
C5 (X7)	DSMU (Driver Seat Memory Unit)	●	●	●	●
C5 (X7)	SB (Seat Belt Reminder LED)	●	●	●	●
C5 (X7)	BCM (Body Control Module)	●	●	●	●
C5 (X7)	BSI (Built-in System Interface)	●	●	●	●
C5 (X7)	EPS (Electric Power Steering)	●	●	●	●
C5 (X7)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C5 (X7)	AH (Additional Heating)	●	●	●	●

C5 (X7)	ERU (Engine Relay Unit)	●	●	●	●
C5 (X7)	LDWS (Lane Departure Warning System)	●	●	●	●
C5 (X7)	DISP (Multifunction Display)	●	●	●	●
C5 (X7)	Rain/Brightness Sensor	●	●	●	●
C5 (X7)	SM (Service Module)	●	●	●	●
C5 (X7)	HFCU (Hands Free Control Unit)	●	●	●	●
C5 (X7)	HFR (High Frequency Receiver)	●	●	●	●
C5 (X7)	BASHE5	●	●	●	●
C5 (X7)	Display/Telematics	●	●	●	●
C5 (X7)	Wiper (Windscreen Wiper)	●	●	●	●
C5 (X7)	TRU (Trailer Relay Unit)	●	●	●	●
C5 (X7)	Radio	●	●	●	●
C5 (X7)	AMP (Audio Amplifier)	●	●	●	●
C5 (X7)	CD (CD Player)	●	●	●	●
C5 (X7RR New)	ECM (Engine Control Moduel)	●	●	●	●
C5 (X7RR New)	TCM (Auto Gearbox)	●	●	●	●
C5 (X7RR New)	ABS (Anti-lock Brake System)	●	●	●	●
C5 (X7RR New)	SRS (Airbag)	●	●	●	●
C5 (X7RR New)	CP (Control Panel)	●	●	●	●
C5 (X7RR New)	MCP (Multiplexed Control Panel)	●	●	●	●
C5 (X7RR New)	AC (Air Conditioning)	●	●	●	●
C5 (X7RR New)	PAM (Parking Assistance Module)	●	●	●	●
C5 (X7RR New)	ESL (Electric Steering Lock)	●	●	●	●
C5 (X7RR New)	BATT (Battery Charge Status Unit)	●	●	●	●
C5 (X7RR New)	DDCP (Driver Door Control Panel)	●	●	●	●
C5 (X7RR New)	DSMU (Driver Seat Memory Unit)	●	●	●	●
C5 (X7RR New)	EPS (Electric Power Steering)	●	●	●	●
C5 (X7RR New)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C5 (X7RR New)	Rain/Brightness Sensor	●	●	●	●
C5 (X7RR New)	SM (Service Module)	●	●	●	●
C5 (X7RR New)	UID (Under Inflation Detection)	●	●	●	●
C5 (X7RR New)	VOL (Voltage Retaining Device)	●	●	●	●
C5 (X7RR New)	Display/Telematics	●	●	●	●
C5 (X7RR New)	Wiper (Windscreen Wiper)	●	●	●	●
C5 (X7RR New)	AMP (Audio Amplifier)	●	●	●	●
C6	ECM (Engine Control Moduel)	●	●	●	●
C6	TCM (Auto Gearbox)	●	●	●	●
C6	ABS (Anti-lock Brake System)	●	●	●	●
C6	SRS (Airbag)	●	●	●	●
C6	CP (Control Panel)	●	●	●	●
C6	AC (Air Conditioning)	●	●	●	●
C6	AC (Rear Air Conditioning Panel)	●	●	●	●
C6	EPB (Electric Secondary Brake)	●	●	●	●
C6	PAM (Parking Assistance Module)	●	●	●	●
C6	DD (Deflation Detection)	●	●	●	●
C6	SSP (Suspension System Control)	●	●	●	●
C6	Alarm	●	●	●	●
C6	BATT (Battery Charge Status Unit)	●	●	●	●
C6	HL (Directional Headlamps)	●	●	●	●
C6	HL (Headlamp Left)	●	●	●	●
C6	HL (Headlamp Right)	●	●	●	●
C6	DDCP (Driver Door Control Panel)	●	●	●	●
C6	PDM (Passenger Door Module)	●	●	●	●
C6	DSMU (Driver Seat Memory Unit)	●	●	●	●
C6	PSMU (Passenger Seat Memorisation Unit)	●	●	●	●
C6	RSMU (Rear Seat Memorising Unit)	●	●	●	●
C6	RSSP (Right Seat Switch Panel)	●	●	●	●
C6	LSSP (Left Seat Switch Panel)	●	●	●	●

C6	BSI (Built-in System Interface)	●	●	●	●
C6	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C6	AH (Additional Heating)	●	●	●	●
C6	ERU (Engine Relay Unit)	●	●	●	●
C6	LDWS (Lane Departure Warning System)	●	●	●	●
C6	HHV (High Head Vision)	●	●	●	●
C6	DISP (Multifunction Display)	●	●	●	●
C6	Rain/Brightness Sensor	●	●	●	●
C6	BRU (Boot Relay Unit)	●	●	●	●
C6	BT (Boitier Telematique)	●	●	●	●
C6	HFCU (Hands Free Control Unit)	●	●	●	●
C6	HFR (High Frequency Receiver)	●	●	●	●
C6	MPD (Moving Panel Deflector)	●	●	●	●
C6	PID (Pedestrian Impact Detection)	●	●	●	●
C6	Wiper (Windscreen Wiper)	●	●	●	●
C6	TRU (Trailer Relay Unit)	●	●	●	●
C6	Radio	●	●	●	●
C6	CD (CD Player)	●	●	●	●
C6 (China)	ECM (Engine Control Moduel)	●	●	●	●
C6 (China)	TCM (Auto Gearbox)	●	●	●	●
C6 (China)	ABS (Anti-lock Brake System)	●	●	●	●
C6 (China)	SRS (Airbag)	●	●	●	●
C6 (China)	CP (Control Panel)	●	●	●	●
C6 (China)	MCP (Multiplexed Control Panel)	●	●	●	●
C6 (China)	AC (Air Conditioning)	●	●	●	●
C6 (China)	PAM (Parking Assistance Module)	●	●	●	●
C6 (China)	ESL (Electric Steering Lock)	●	●	●	●
C6 (China)	BATT (Battery Charge Status Unit)	●	●	●	●
C6 (China)	DDCP (Driver Door Control Panel)	●	●	●	●
C6 (China)	EPS (Electric Power Steering)	●	●	●	●
C6 (China)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
C6 (China)	ERU (Engine Relay Unit)	●	●	●	●
C6 (China)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
C6 (China)	Rain/Brightness Sensor	●	●	●	●
C6 (China)	SM (Service Module)	●	●	●	●
C6 (China)	VDA (Vehicle Distance Assistance)	●	●	●	●
C6 (China)	VOL (Voltage Retaining Device)	●	●	●	●
C6 (China)	Display/Telematics	●	●	●	●
C6 (China)	Wiper (Windscreen Wiper)	●	●	●	●
C6 (China)	AMP (Audio Amplifier)	●	●	●	●
C8	ECM (Engine Control Moduel)	●	●	●	●
C8	TCM (Auto Gearbox)	●	●	●	●
C8	ABS (Anti-lock Brake System)	●	●	●	●
C8	SRS (Airbag)	●	●	●	●
C8	CP (Control Panel)	●	●	●	●
C8	AC (Air Conditioning)	●	●	●	●
C8	PAM (Parking Assistance Module)	●	●	●	●
C8	DD (Deflation Detection)	●	●	●	●
C8	Alarm	●	●	●	●
C8	HL (Headlamp Left)	●	●	●	●
C8	HL (Headlamp Right)	●	●	●	●
C8	DDCP (Driver Door Control Panel)	●	●	●	●
C8	PDM (Passenger Door Module)	●	●	●	●
C8	SSDM (Sliding Side Door Module)	●	●	●	●
C8	DSMU (Driver Seat Memory Unit)	●	●	●	●
C8	BSI (Built-in System Interface)	●	●	●	●
C8	EPS (Electric Power Steering)	●	●	●	●
C8	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●

C8	AH (Additional Heating)	●	●	●	●
C8	DAF (Diesel Additive Function)	●	●	●	●
C8	ERU (Engine Relay Unit)	●	●	●	●
C8	LEDs And Odometer	●	●	●	●
C8	DISP (Multifunction Display)	●	●	●	●
C8	Rain/Brightness Sensor	●	●	●	●
C8	HFCU (Hands Free Control Unit)	●	●	●	●
C8	Display/Telematics	●	●	●	●
C8	TU (Telematic Unit)	●	●	●	●
C8	FS (Front Sunroof)	●	●	●	●
C8	MS (Middle Sunroof)	●	●	●	●
C8	RS (Rear Sunroof)	●	●	●	●
C8	TRU (Trailer Relay Unit)	●	●	●	●
C8	Radio	●	●	●	●
C8	CD (CD Player)	●	●	●	●
DS 5LS	ECM (Engine Control Moduel)	●	●	●	●
DS 5LS	TCM (Auto Gearbox)	●	●	●	●
DS 5LS	ABS (Anti-lock Brake System)	●	●	●	●
DS 5LS	SRS (Airbag)	●	●	●	●
DS 5LS	CP (Control Panel)	●	●	●	●
DS 5LS	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
DS 5LS	AC (Air Conditioning)	●	●	●	●
DS 5LS	Audio/Navigation/Air Conditioning	●	●	●	●
DS 5LS	EPB (Electric Secondary Brake)	●	●	●	●
DS 5LS	PAM (Parking Assistance Module)	●	●	●	●
DS 5LS	Alarm	●	●	●	●
DS 5LS	ESL (Electric Steering Lock)	●	●	●	●
DS 5LS	KEY (Electric Key Reader)	●	●	●	●
DS 5LS	BATT (Battery Charge Status Unit)	●	●	●	●
DS 5LS	HL (Directional Headlamps)	●	●	●	●
DS 5LS	EPS (Electric Power Steering)	●	●	●	●
DS 5LS	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
DS 5LS	ERU (Engine Relay Unit)	●	●	●	●
DS 5LS	SPAMU (Supply Protection And Management Unit)	●	●	●	●
DS 5LS	DISP (Multifunction Display)	●	●	●	●
DS 5LS	Rain/Brightness Sensor	●	●	●	●
DS 5LS	SM (Service Module)	●	●	●	●
DS 5LS	HFCU (Hands Free Control Unit)	●	●	●	●
DS 5LS	UID (Under Inflation Detection)	●	●	●	●
DS 5LS	TU (Telematic Unit)	●	●	●	●
DS 5LS	Radio	●	●	●	●
DS 5LS	AMP (Audio Amplifier)	●	●	●	●
DS3	ECM (Engine Control Moduel)	●	●	●	●
DS3	TCM (Auto Gearbox)	●	●	●	●
DS3	ABS (Anti-lock Brake System)	●	●	●	●
DS3	SRS (Airbag)	●	●	●	●
DS3	CP (Control Panel)	●	●	●	●
DS3	AC (Air Conditioning)	●	●	●	●
DS3	PAM (Parking Assistance Module)	●	●	●	●
DS3	Alarm	●	●	●	●
DS3	BATT (Battery Charge Status Unit)	●	●	●	●
DS3	SB (Seat Belt Reminder LED)	●	●	●	●
DS3	BSI (Built-in System Interface)	●	●	●	●
DS3	EPS (Electric Power Steering)	●	●	●	●
DS3	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
DS3	MAP (Multiplexed Diesel Additive Pump)	●	●	●	●
DS3	ERU (Engine Relay Unit)	●	●	●	●
DS3	DISP (Multifunction Display)	●	●	●	●

DS3	Rain/Brightness Sensor	●	●	●	●
DS3	SM (Service Module)	●	●	●	●
DS3	HFCU (Hands Free Control Unit)	●	●	●	●
DS3	HFR (High Frequency Receiver)	●	●	●	●
DS3	Display/Telematics	●	●	●	●
DS3	TRU (Trailer Relay Unit)	●	●	●	●
DS3	Radio	●	●	●	●
DS4	ECM (Engine Control Moduel)	●	●	●	●
DS4	MAP (Multiplexed Addition Pump)	●	●	●	●
DS4	TCM (Auto Gearbox)	●	●	●	●
DS4	ABS (Anti-lock Brake System)	●	●	●	●
DS4	SRS (Airbag)	●	●	●	●
DS4	CP (Control Panel)	●	●	●	●
DS4	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
DS4	MCP (Multiplexed Control Panel)	●	●	●	●
DS4	AC (Air Conditioning)	●	●	●	●
DS4	EPB (Electric Secondary Brake)	●	●	●	●
DS4	PAM (Parking Assistance Module)	●	●	●	●
DS4	DD (Deflation Detection)	●	●	●	●
DS4	Alarm	●	●	●	●
DS4	BATT (Battery Charge Status Unit)	●	●	●	●
DS4	HL (Directional Headlamps)	●	●	●	●
DS4	DDCP (Driver Door Control Panel)	●	●	●	●
DS4	DSMU (Driver Seat Memory Unit)	●	●	●	●
DS4	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
DS4	BSI (Built-in System Interface)	●	●	●	●
DS4	EPS (Electric Power Steering)	●	●	●	●
DS4	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
DS4	ERU (Engine Relay Unit)	●	●	●	●
DS4	LDWS (Lane Departure Warning System)	●	●	●	●
DS4	SPAMU (Supply Protection And Management Unit)	●	●	●	●
DS4	DISP (Multifunction Display)	●	●	●	●
DS4	Rain/Brightness Sensor	●	●	●	●
DS4	SM (Service Module)	●	●	●	●
DS4	DSM (Driver School Module)	●	●	●	●
DS4	Monitoring Of The Blind Spot	●	●	●	●
DS4	Display/Telematics	●	●	●	●
DS4	TRU (Trailer Relay Unit)	●	●	●	●
DS4	Radio	●	●	●	●
DS4	AMP (Audio Amplifier)	●	●	●	●
DS5	ECM (Engine Control Moduel)	●	●	●	●
DS5	MAP (Multiplexed Addition Pump)	●	●	●	●
DS5	TCM (Auto Gearbox)	●	●	●	●
DS5	ABS (Anti-lock Brake System)	●	●	●	●
DS5	SRS (Airbag)	●	●	●	●
DS5	CP (Control Panel)	●	●	●	●
DS5	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
DS5	MCP (Multiplexed Control Panel)	●	●	●	●
DS5	AC (Air Conditioning)	●	●	●	●
DS5	PAM (Parking Assistance Module)	●	●	●	●
DS5	DD (Deflation Detection)	●	●	●	●
DS5	Alarm	●	●	●	●
DS5	ESL (Electric Steering Lock)	●	●	●	●
DS5	KEY (Electric Key Reader)	●	●	●	●
DS5	BATT (Battery Charge Status Unit)	●	●	●	●
DS5	BATT (Traction Battery)	●	●	●	●
DS5	HL (Directional Headlamps)	●	●	●	●
DS5	DSMU (Driver Seat Memory Unit)	●	●	●	●

DS5	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
DS5	EPS (Electric Power Steering)	●	●	●	●
DS5	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
DS5	ERU (Engine Relay Unit)	●	●	●	●
DS5	Hybrid (Hybrid Control 1)	●	●	●	●
DS5	Hybrid (Hybrid Mode Selector)	●	●	●	●
DS5	SPAMU (Supply Protection And Management Unit)	●	●	●	●
DS5	HHV (High Head Vision)	●	●	●	●
DS5	MC (Multifunction Camera)	●	●	●	●
DS5	DISP (Multifunction Display)	●	●	●	●
DS5	Rain/Brightness Sensor	●	●	●	●
DS5	SM (Service Module)	●	●	●	●
DS5	HFCU (Hands Free Control Unit)	●	●	●	●
DS5	VC (Vibrators Control)	●	●	●	●
DS5	Display/Telematics	●	●	●	●
DS5	TN (Telematic Navigator)	●	●	●	●
DS5	Wiper (Windscreen Wiper)	●	●	●	●
DS5	TRU (Trailer Relay Unit)	●	●	●	●
DS5	Clock	●	●	●	●
DS5	Radio	●	●	●	●
DS5	AMP (Audio Amplifier)	●	●	●	●
DS5 (Hybird 4)	ECM (Engine Control Moduel)	●	●	●	●
DS5 (Hybird 4)	MAP (Multiplexed Addition Pump)	●	●	●	●
DS5 (Hybird 4)	TCM (Auto Gearbox)	●	●	●	●
DS5 (Hybird 4)	ABS (Anti-lock Brake System)	●	●	●	●
DS5 (Hybird 4)	SRS (Airbag)	●	●	●	●
DS5 (Hybird 4)	CP (Control Panel)	●	●	●	●
DS5 (Hybird 4)	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
DS5 (Hybird 4)	MCP (Multiplexed Control Panel)	●	●	●	●
DS5 (Hybird 4)	AC (Air Conditioning)	●	●	●	●
DS5 (Hybird 4)	PAM (Parking Assistance Module)	●	●	●	●
DS5 (Hybird 4)	DD (Deflation Detection)	●	●	●	●
DS5 (Hybird 4)	Alarm	●	●	●	●
DS5 (Hybird 4)	ESL (Electric Steering Lock)	●	●	●	●
DS5 (Hybird 4)	KEY (Electric Key Reader)	●	●	●	●
DS5 (Hybird 4)	BATT (Battery Charge Status Unit)	●	●	●	●
DS5 (Hybird 4)	BATT (Traction Battery)	●	●	●	●
DS5 (Hybird 4)	HL (Directional Headlamps)	●	●	●	●
DS5 (Hybird 4)	DSMU (Driver Seat Memory Unit)	●	●	●	●
DS5 (Hybird 4)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
DS5 (Hybird 4)	EPS (Electric Power Steering)	●	●	●	●
DS5 (Hybird 4)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
DS5 (Hybird 4)	ERU (Engine Relay Unit)	●	●	●	●
DS5 (Hybird 4)	Hybrid (Hybrid Control 1)	●	●	●	●
DS5 (Hybird 4)	Hybrid (Hybrid Control 2)	●	●	●	●
DS5 (Hybird 4)	Hybrid (Hybrid Mode Selector)	●	●	●	●
DS5 (Hybird 4)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
DS5 (Hybird 4)	HHV (High Head Vision)	●	●	●	●
DS5 (Hybird 4)	MC (Multifunction Camera)	●	●	●	●
DS5 (Hybird 4)	DISP (Multifunction Display)	●	●	●	●
DS5 (Hybird 4)	Rain/Brightness Sensor	●	●	●	●
DS5 (Hybird 4)	SM (Service Module)	●	●	●	●
DS5 (Hybird 4)	HFCU (Hands Free Control Unit)	●	●	●	●
DS5 (Hybird 4)	VC (Vibrators Control)	●	●	●	●
DS5 (Hybird 4)	Display/Telematics	●	●	●	●
DS5 (Hybird 4)	TN (Telematic Navigator)	●	●	●	●
DS5 (Hybird 4)	Wiper (Windscreen Wiper)	●	●	●	●
DS5 (Hybird 4)	TRU (Trailer Relay Unit)	●	●	●	●

DS5 (Hybird 4)	Clock	●	●	●	●
DS5 (Hybird 4)	Radio	●	●	●	●
DS5 (Hybird 4)	AMP (Audio Amplifier)	●	●	●	●
DS6	ECM (Engine Control Moduel)	●	●	●	●
DS6	TCM (Auto Gearbox)	●	●	●	●
DS6	ABS (Anti-lock Brake System)	●	●	●	●
DS6	SRS (Airbag)	●	●	●	●
DS6	CP (Control Panel)	●	●	●	●
DS6	IP (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
DS6	AC (Air Conditioning)	●	●	●	●
DS6	Audio/Navigation/Air Conditioning	●	●	●	●
DS6	EPB (Electric Secondary Brake)	●	●	●	●
DS6	PAM (Parking Assistance Module)	●	●	●	●
DS6	Alarm	●	●	●	●
DS6	ESL (Electric Steering Lock)	●	●	●	●
DS6	KEY (Electric Key Reader)	●	●	●	●
DS6	BATT (Battery Charge Status Unit)	●	●	●	●
DS6	HL (Directional Headlamps)	●	●	●	●
DS6	BCM (Body Control Module)	●	●	●	●
DS6	EPS (Electric Power Steering)	●	●	●	●
DS6	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
DS6	ERU (Engine Relay Unit)	●	●	●	●
DS6	SPAMU (Supply Protection And Management Unit)	●	●	●	●
DS6	DISP (Multifunction Display)	●	●	●	●
DS6	Rain/Brightness Sensor	●	●	●	●
DS6	SM (Service Module)	●	●	●	●
DS6	ASM (Anti-slip Mode Selector)	●	●	●	●
DS6	HFCU (Hands Free Control Unit)	●	●	●	●
DS6	SFB (Signalling Fuse Box)	●	●	●	●
DS6	UID (Under Inflation Detection)	●	●	●	●
DS6	VOL (Voltage Retaining Device)	●	●	●	●
DS6	TU (Telematic Unit)	●	●	●	●
DS6	AMP (Audio Amplifier)	●	●	●	●
Elysee	ECM (Engine Control Moduel)	●	●	●	●
Elysee	TCM (Auto Gearbox)	●	●	●	●
Elysee	ABS (Anti-lock Brake System)	●	●	●	●
Elysee	SRS (Airbag) (Autoliv)	●	●	●	●
Elysee	SRS (Airbag) (Siemens)	●	●	●	●
Elysee	KEY (Electric Key Reader)	●	●	●	●
Fukang	ECM (Engine Control Moduel)	●	●	●	●
Fukang	TCM (Auto Gearbox)	●	●	●	●
Fukang	ABS (Anti-lock Brake System)	●	●	●	●
Jumper (Relay)	ECM (Engine Control Moduel)	●	●	●	●
Jumper (Relay)	ABS (Anti-lock Brake System)	●	●	●	●
Jumper (Relay)	CP (Control Panel)	●	●	●	●
Jumper (Relay)	AC (Air Conditioning)	●	●	●	●
Jumper (Relay)	PAM (Parking Assistance Module)	●	●	●	●
Jumper (Relay)	EPS (Electric Power Steering)	●	●	●	●
Jumper (Relay)	AH (Additional Heating)	●	●	●	●
Jumpy (Dispatch)	ECM (Engine Control Moduel)	●	●	●	●
Jumpy (Dispatch)	TCM (Auto Gearbox)	●	●	●	●
Jumpy (Dispatch)	ABS (Anti-lock Brake System)	●	●	●	●
Jumpy (Dispatch)	SRS (Airbag)	●	●	●	●
Jumpy (Dispatch)	CP (Control Panel)	●	●	●	●
Jumpy (Dispatch)	AC (Air Conditioning)	●	●	●	●
Jumpy (Dispatch)	AC (Rear Air Conditioning Panel)	●	●	●	●
Jumpy (Dispatch)	PAM (Parking Assistance Module)	●	●	●	●
Jumpy (Dispatch)	DD (Deflation Detection)	●	●	●	●

Jumpy (Dispatch)	SSP (Pneumatic Suspension)	●	●	●	●
Jumpy (Dispatch)	Alarm	●	●	●	●
Jumpy (Dispatch)	BATT (Battery Charge Status Unit)	●	●	●	●
Jumpy (Dispatch)	BSI (Built-in System Interface)	●	●	●	●
Jumpy (Dispatch)	EPS (Electric Power Steering)	●	●	●	●
Jumpy (Dispatch)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Jumpy (Dispatch)	AH (Additional Heating)	●	●	●	●
Jumpy (Dispatch)	ERU (Engine Relay Unit)	●	●	●	●
Jumpy (Dispatch)	DISP (Multifunction Display)	●	●	●	●
Jumpy (Dispatch)	Rain/Brightness Sensor	●	●	●	●
Jumpy (Dispatch)	ASM (Anti-slip Mode Selector)	●	●	●	●
Jumpy (Dispatch)	BWC (Bodywork Conversion Unit)	●	●	●	●
Jumpy (Dispatch)	HFCU (Hands Free Control Unit)	●	●	●	●
Jumpy (Dispatch)	HFR (High Frequency Receiver)	●	●	●	●
Jumpy (Dispatch)	Display/Telematics	●	●	●	●
Jumpy (Dispatch)	TRU (Trailer Relay Unit)	●	●	●	●
Jumpy (Dispatch)	Radio	●	●	●	●
Jumpy (Dispatch)	CD (CD Player)	●	●	●	●
Jumpy (KO)	ECM (Engine Control Moduel)	●	●	●	●
Jumpy (KO)	TCM (Auto Gearbox)	●	●	●	●
Jumpy (KO)	ABS (Anti-lock Brake System)	●	●	●	●
Jumpy (KO)	SRS (Airbag)	●	●	●	●
Jumpy (KO)	CP (Control Panel)	●	●	●	●
Jumpy (KO)	MCP (Multiplexed Control Panel)	●	●	●	●
Jumpy (KO)	AC (Air Conditioning)	●	●	●	●
Jumpy (KO)	PAM (Parking Assistance Module)	●	●	●	●
Jumpy (KO)	Alarm	●	●	●	●
Jumpy (KO)	ESL (Electric Steering Lock)	●	●	●	●
Jumpy (KO)	BATT (Battery Charge Status Unit)	●	●	●	●
Jumpy (KO)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
Jumpy (KO)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Jumpy (KO)	AH (Additional Heating)	●	●	●	●
Jumpy (KO)	ERU (Engine Relay Unit)	●	●	●	●
Jumpy (KO)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
Jumpy (KO)	HHV (High Head Vision)	●	●	●	●
Jumpy (KO)	DISP (Multifunction Display)	●	●	●	●
Jumpy (KO)	Rain/Brightness Sensor	●	●	●	●
Jumpy (KO)	ASM (Anti-slip Mode Selector)	●	●	●	●
Jumpy (KO)	VDA (Vehicle Distance Assistance)	●	●	●	●
Jumpy (KO)	VOL (Voltage Retaining Device)	●	●	●	●
Jumpy (KO)	Display/Telematics	●	●	●	●
Jumpy (KO)	TRU (Trailer Relay Unit)	●	●	●	●
Jumpy (KO)	Siren	●	●	●	●
Spacetourer	ECM (Engine Control Moduel)	●	●	●	●
Spacetourer	TCM (Auto Gearbox)	●	●	●	●
Spacetourer	ABS (Anti-lock Brake System)	●	●	●	●
Spacetourer	SRS (Airbag)	●	●	●	●
Spacetourer	CP (Control Panel)	●	●	●	●
Spacetourer	MCP (Multiplexed Control Panel)	●	●	●	●
Spacetourer	AC (Air Conditioning)	●	●	●	●
Spacetourer	PAM (Parking Assistance Module)	●	●	●	●
Spacetourer	Alarm	●	●	●	●
Spacetourer	ESL (Electric Steering Lock)	●	●	●	●
Spacetourer	BATT (Battery Charge Status Unit)	●	●	●	●
Spacetourer	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
Spacetourer	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Spacetourer	AH (Additional Heating)	●	●	●	●
Spacetourer	ERU (Engine Relay Unit)	●	●	●	●

Spacetourer	SPAMU (Supply Protection And Management Unit)	●	●	●	●
Spacetourer	HHV (High Head Vision)	●	●	●	●
Spacetourer	DISP (Multifunction Display)	●	●	●	●
Spacetourer	Rain/Brightness Sensor	●	●	●	●
Spacetourer	ASM (Anti-slip Mode Selector)	●	●	●	●
Spacetourer	VDA (Vehicle Distance Assistance)	●	●	●	●
Spacetourer	VOL (Voltage Retaining Device)	●	●	●	●
Spacetourer	Display/Telematics	●	●	●	●
Spacetourer	TRU (Trailer Relay Unit)	●	●	●	●
Spacetourer	Siren	●	●	●	●
Nemo	TCM (Auto Gearbox)	●	●	●	●
Nemo	ABS (Anti-lock Brake System)	●	●	●	●
Nemo	SRS (Airbag)	●	●	●	●
Nemo	CP (Control Panel)	●	●	●	●
Nemo	PAM (Parking Assistance Module)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	ECM (Engine Control Moduel)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	ABS (Anti-lock Brake System)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	SRS (Airbag)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	CP (Control Panel)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	AC (Air Conditioning)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	PAM (Parking Assistance Module)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	BSI (Built-in System Interface)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	EPS (Electric Power Steering)	●	●	●	●
Relay 3/Jumper 3 (Euro5/Euro6)	AH (Additional Heating)	●	●	●	●
Saxo	ECM (Engine Control Moduel)	●	●	●	●
Saxo	TCM (Auto Gearbox)	●	●	●	●
Saxo	ABS (Anti-lock Brake System)	●	●	●	●
Saxo	SRS (Airbag)	●	●	●	●
Saxo	KEY (Electric Key Reader)	●	●	●	●
Synergie (Evasion)	ECM (Engine Control Moduel)	●	●	●	●
Synergie (Evasion)	TCM (Auto Gearbox)	●	●	●	●
Synergie (Evasion)	ABS (Anti-brake System Module) [5.3]	●	●	●	●
Synergie (Evasion)	SRS (Airbag) (Autoliv)	●	●	●	●
Xantia	ECM (Engine Control Moduel)	●	●	●	●
Xantia	ABS (Anti-brake System Module) [Teves Mk20E]	●	●	●	●
Xantia	SRS (Airbag)	●	●	●	●
Xantia	SRS (Airbag) (Left)	●	●	●	●
Xantia	CPH_TEXTON	●	●	●	●
Xm	ECM (Engine Control Moduel)	●	●	●	●
Xm	ABS (Anti-lock Brake System)	●	●	●	●
Xsara	ECM (Engine Control Moduel)	●	●	●	●
Xsara	TCM (Auto Gearbox)	●	●	●	●
Xsara	ABS (Anti-lock Brake System)	●	●	●	●
Xsara	SRS (Airbag)	●	●	●	●
Xsara	CP (Control Panel)	●	●	●	●
Xsara	AC (Air Conditioning)	●	●	●	●
Xsara	PAM (Parking Assistance Module)	●	●	●	●
Xsara	Alarm	●	●	●	●
Xsara	BSI (Built-in System Interface)	●	●	●	●
Xsara	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Xsara	DISP (Multifunction Display B)	●	●	●	●
Xsara	Rain/Brightness Sensor	●	●	●	●
Xsara	Radio	●	●	●	●

Xsara	CD (CD Player)	●	●	●	●
Xsara (Picasso)	ECM (Engine Control Moduel)	●	●	●	●
Xsara (Picasso)	TCM (Auto Gearbox)	●	●	●	●
Xsara (Picasso)	ABS (Anti-lock Brake System)	●	●	●	●
Xsara (Picasso)	SRS (Airbag)	●	●	●	●
Xsara (Picasso)	IC (Instrument Cluster)	●	●	●	●
Xsara (Picasso)	AC (Air Conditioning)	●	●	●	●
Xsara (Picasso)	PAM (Parking Assistance Module)	●	●	●	●
Xsara (Picasso)	Alarm	●	●	●	●
Xsara (Picasso)	BSI (Built-in System Interface)	●	●	●	●
Xsara (Picasso)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Xsara (Picasso)	DISP (Multifunction Display B)	●	●	●	●
Xsara (Picasso)	Rain/Brightness Sensor	●	●	●	●
Xsara (Picasso)	ADDGO 2	●	●	●	●
Xsara (Picasso)	Radio	●	●	●	●
Xsara (Picasso)	CD (CD Player)	●	●	●	●
Xsara (Picasso China)	ECM (Engine Control Moduel)	●	●	●	●
Xsara (Picasso China)	TCM (Auto Gearbox)	●	●	●	●
Xsara (Picasso China)	ABS (Anti-lock Brake System)	●	●	●	●
Xsara (Picasso China)	SRS (Airbag) (Autoliv)	●	●	●	●
Xsara (Picasso China)	CP (Control Panel)	●	●	●	●
Xsara (Picasso China)	AC (Air Conditioning)	●	●	●	●
Xsara (Picasso China)	PAM (Parking Assistance Module)	●	●	●	●
Xsara (Picasso China)	SWWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
Xsara (Picasso China)	DISP (Multifunction Display B)	●	●	●	●
Xsara (Picasso China)	Rain/Brightness Sensor	●	●	●	●
Xsara (Picasso China)	ADDGO 2	●	●	●	●
Xsara (Picasso China)	Radio	●	●	●	●
Xsara (Picasso China)	CD (CD Player)	●	●	●	●
Zx	ECM (Engine Control Moduel)	●	●	●	●
Zx	TCM (Auto Gearbox)	●	●	●	●

CITROEN_V01.25 BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	System Type	BLD
BERLINGO (B9)	ABS81	●
BERLINGO (B9)	ESP8.1	●
BERLINGO 2	ABS81	●
BERLINGO 2	ESP81	●
BERLINGO Electric (B9E)	ABS81	●
BERLINGO Electric (B9E)	ESP8.1	●
C-ELYSEE	ABSMK100	●
C-ELYSEE	ESPMK100	●
C-QUATRE 4	ESP8.1	●
C-QUATRE 5	ESP8.1	●
C-TRIOMPHE	ESP8.1	●
C3 (A51)	ABSMK70_1	●
C3 (A51)	ABSMK100	●
C3 (A51)	ESPMK60_0	●
C3 (A51)	ESPMK100	●
C3 AIRCROSS (Ai58)	ABSMK70_1	●
C3 AIRCROSS (Ai58)	ESPMK60_0	●
C3 (Ai58)	ABSMK70_1	●
C3 (Ai58)	ESPMK60_0	●
C3 (PICASSO) (A58)	ABSMK70_1	●
C3 (PICASSO) (A58)	ABSMK100	●
C3 (PICASSO) (A58)	ESPMK60_0	●
C3 (PICASSO) (A58)	ESPMK100	●
C3 (PICASSO) (Ai58)	ABSMK70_1	●
C3 (PICASSO) (Ai58)	ESPMK60_0	●
C4	ABS8_BOSCH	●
C4	ABS81	●
C4	ESP8BOSCH	●
C4	ESP8.1	●
C4 (PICASSO)	ABS8_BOSCH	●
C4 (PICASSO)	ABS81	●
C4 (PICASSO)	ESP8BOSCH	●
C4 (PICASSO)	ESP8.1	●
C4 (PICASSO) (B78)	ESP90	●
C4 (SEDAN)	ABS8_BOSCH	●
C4 (SEDAN)	ABS81	●
C4 (SEDAN)	ESP8BOSCH	●
C4 (SEDAN)	ESP8.1	●
C4 (B7)	ABS81	●
C4 (B7)	ESP8.1	●
C4L (B7)	ABS81	●
C4L (B7)	ESP8.1	●
C5 (X7)	ESP8.1	●
C6	ESP8.1	●
C6	ESPEBC440	●
C8 (CAN)	ESP8BOSCH	●

C8 (CAN)	ESP8.1	●
DS 5LS	ESP8.1	●
DS 6	ESP8.1	●
DS3	ESPMK60_0	●
DS3	ESPMK100	●
DS4	ABS81	●
DS4	ESP8.1	●
DS5	ESP8.1	●
DS5 (Hybird 4)	ESP8.1	●
JUMPER 3	ABS80	●
JUMPER 3	ASR80	●
JUMPER 3 (MiniBus)	ABS80	●
JUMPER 3 (MiniBus)	ASR80	●
JUMPY 3	ABS8_BOSCH	●
JUMPY 3	ABS81	●
JUMPY 3	ESP8BOSCH	●
JUMPY 3	ESP8.1	●

CITROEN_V01.25 BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	BMS
BERLINGO (B9)	●
C3 (A51)	●
C3 (PICASSO)	●
C3 (XR)	●
C4	●
C4 (CACTUS)	●
C4 (PICASSO)	●
C4 (SEDAN)	●
C4L	●
C5 (X7)	●
C6	●
DS3	●
DS4	●
DS5	●
DS5 (Hybird 4)	●
DS 5LS	●
DS6	●
JUMPY (DISPATCH)	●

CITROEN_V01.25 DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Chassis	DPF
BERLINGO B9	HDI_SID807	●
BERLINGO B9	HDI_SID807_BR2	●
C3 A51	EDC17C10	●
C3 A51	EDC17C10_BR2	●
C3 A51	HDI_SID807	●
C3 A51	HDI_SID807_BR2	●
C3	EDC16C34_DV6	●
C3 R	EDC16C34_DV6	●
C3 PICASSO (A58)	EDC17C10	●
C3 PICASSO (A58)	HDI_SID807	●
C3 PICASSO (A58)	HDI_SID807_BR2	●
C4	HDI_SID803	●
C4	EDC16C3	●
C4	HDI_SID803A	●
C4	DCM34	●
C4	DCM35	●
C4	HDI_SID807_BR2	●
C4 (B7)	DCM35_BR2	●
C4 (B7)	HDI_SID807_BR2	●
C4 (B7)	EDC17C10_BR2	●
C4 SEDAN	HDI_SID803	●
C4 SEDAN	EDC16C3	●
C4 SEDAN	HDI_SID803A	●
C4 SEDAN	DCM34	●
C4 SEDAN	DCM35	●
C4 SEDAN	HDI_SID807_BR2	●
C4 PICASSO	EDC16C3	●
C4 PICASSO	HDI_SID803A	●
C4 PICASSO	DCM34	●
C4 PICASSO	DCM35	●
C4 PICASSO	DCM35_BR2	●
C4 PICASSO	HDI_SID807	●
C4 PICASSO	HDI_SID807_BR2	●
C4 PICASSO (B78)	DCM62	●
C4 PICASSO (B78)	HDI_SID807_BR2	●
C4 AIRCROSS	HDI_SID807_J3J4	●
C5 (X7)	HDI_SID201	●
C5 (X7)	EDC16CP39	●
C5 (X7)	DCM34	●
C5 (X7)	DCM34 P	●
C5 (X7)	DCM35	●
C5 (X7)	DCM35_BR2	●
C5 (X7)	EDC16C3	●
C5 (X7)	EDC17CP11	●
C5 (X7)	EDC17CP42	●
C5 (X7)	HDI_SID807	●

C5 (X7)	HDI_SID807_BR2	●
C5	EDC15C2	●
C5 R	EDC16CP39	●
C5 R	HDI_SID803A	●
C5 R	HDI_SID803	●
C6	EDC16CP39	●
C6	EDC17CP11	●
C6	HDI_SID201	●
C8 CAN	EDC15C2	●
C8 CAN	HDI_SID803A	●
C8 CAN	EDC16CP39	●
C8 CAN	DCM35	●
C8 CAN	DCM35_BR2	●
C8	EDC15C2	●
C-CROSSER	EDC16CP39	●
C-CROSSER	EDC16CP39_E5	●
DS3	EDC17C10	●
DS3	EDC17C10_BR2	●
DS3	HDI_SID807	●
DS3	HDI_SID807_BR2	●
DS4	DCM35_BR2	●
DS4	EDC17C10_BR2	●
DS4	HDI_SID807_BR2	●
DS5	DCM35_BR2	●
DS5	HDI_SID807_BR2	●
DS5 Hybird 4	DCM35_HY	●
JUMPY 3	HDI_SID803A	●
JUMPY 3	DCM35	●
JUMPY 3	DCM35_BR2	●
JUMPER 3	EDC17CP52	●
JUMPER 3 MINIBUS	EDC17CP52	●
NEMO	HDI_8DF2	●

CITROEN_V01.25 EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	EPB
C4	●
C4 (PICASSO)	●
C4 (SEDAN)	●
C4L	●
C5 (X7)	●
C6	●
DS4	●
DS 5LS	●
DS6	●

CITROEN_V01.25 ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	ETC
BERLINGO	●
C1	●
C2	●
C3	●
C4	●
C5	●
C6	●
C8	●
C-ELYSEE	●
C-QUATRE	●
C-TRIOMPHE	●
DS3	●
DS4	●
DS5	●
DS 5LS	●
DS6	●
ELYSEE	●
EVASION (SYNERGIE)	●
FUKANG	●
JUMPY (DISPATCH)	●
JUMPER (RELAY)	●
SAXO	●
XSARA	●
ZX	●

CITROEN_V01.25 INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Chassis	INJ
BERLINGO	EDC16C3	●
BERLINGO (B9)	EDC16C3	●
BERLINGO (B9)	EDC17C10_BR2	●
BERLINGO (B9)	HDI_SID807	●
C2	EDC16C3	●
C2 (CHINA)	EDC16C3	●
C3	EDC16C3	●
C3 (A51)	EDC17C10	●
C3 (A51)	EDC17C10_BR2	●
C3 (A51)	EDC16C3_DV4	●
C3 (A51)	HDI_SID807	●
C3 (A51)	HDI_SID807_BR2	●
C3 (NEW LOOK)	EDC16C3	●
C3 (PICASSO) (A58)	EDC17C10	●
C3 (PICASSO) (A58)	EDC17C10_BR2	●
C3 (PICASSO) (A58)	EDC16C3	●
C3 (PICASSO) (A58)	HDI_SID807	●
C3 (PICASSO) (A58)	HDI_SID807_BR2	●
C3 (PLURIEL)	EDC16C3	●
C4	DCM35	●
C4	DCM34	●
C4	EDC16C3	●
C4	HDI_SID807_BR2	●
C4 (B7)	DCM35_BR2	●
C4 (B7)	HDI_SID807_BR2	●
C4 (B7)	EDC17C10_BR2	●
C4 (PICASSO)	DCM35	●
C4 (PICASSO)	DCM35_BR2	●
C4 (PICASSO)	EDC16C3	●
C4 (PICASSO)	HDI_SID807	●
C4 (PICASSO)	DCM34	●
C4 (PICASSO)	HDI_SID807_BR2	●
C4 (PICASSO) (B78)	EDC17C10_BR2	●
C4 (SEDAN)	DCM35	●
C4 (SEDAN)	EDC16C3	●
C4 (SEDAN)	HDI_SID807_BR2	●
C4 (SEDAN)	DCM34	●
C5	EDC16C3	●
C5 (X7)	DCM34_P	●
C5 (X7)	DCM35	●
C5 (X7)	EDC16CP39	●
C5 (X7)	DCM34	●
C5 (X7)	DCM35_BR2	●
C5 (X7)	EDC16C3	●
C5 (X7)	EDC17CP11	●
C5 (X7)	HDI_SID807	●

C5 (X7)	HDI_SID807_BR2	●
C6	EDC16CP39	●
C6	EDC17CP11	●
C6	EDC16C3	●
C8	EDC16C3	●
C8 (CAN)	EDC16CP39	●
C8 (CAN)	DCM35	●
C_ELYSEE	EDC16C3	●
C_ELYSEE	EDC17C10_BR2	●
DS3	EDC16C3	●
DS3	EDC17C10	●
DS3	EDC17C10_BR2	●
DS3	HDI_SID807	●
DS3	HDI_SID807_BR2	●
DS4	DCM35_BR2	●
DS4	EDC17C10_BR2	●
DS4	HDI_SID807_BR2	●
DS5	DCM35_BR2	●
DS5	HDI_SID807_BR2	●
ELYSEE	EDC16C3	●
FUKANG	EDC16C3	●
EVASION (SYNERGIE)	EDC16C3	●
JUMPER (RELAY)	EDC16C3	●
JUMPY 3	DCM35	●
JUMPY 3	DCM35_BR2	●
JUMPY 3	EDC16C3	●
JUMPY 3	EDC17C10_BR2	●
JUMPY (DISPATCH)	EDC16C3	●
SAXO	EDC16C3	●
XANTIA	EDC16C3	●
XSARA	EDC16C3	●
XSARA (PICASSO)	EDC16C3	●
XSARA (PICASSO) (CHINA)	EDC16C3	●
ZX	EDC16C3	●

CITROEN_V01.25 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	OIL
BERLINGO	●
C2	●
C3	●
C4	●
C5	●
C6	●
C8	●
C-CROSSER	●
C-ELYSEE	●
C-QUATRE	●
C-TRIOMPHE	●
DS3	●
DS4	●
DS5	●
DS 5LS	●
DS6	●
EVASION (SYNERGIE)	●
JUMPY (DISPATCH)	●
JUMPER (RELAY)	●
NEMO	●
SAXO	●
XSARA	●
XANTIA	●

CITROEN_V01.25 SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	SAS
BERLINGO	●
C-ZERO	●
C1	●
C2	●
C3	●
C4	●
C5	●
C6	●
C8	●
C-CROSSER	●
C-ELYSEE	●
C-QUATRE	●
C-TRIOMPHE	●
DS3	●
DS4	●
DS5	●
DS 5LS	●
DS6	●
ELYSEE	●
FUKANG	●
JUMPY (DISPATCH)	●
JUMPER (RELAY)	●
NEMO	●
SAXO	●
XSARA	●