

PEUGEOT_V01.25 Diag Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData
106	ECM (Engine Control Module)	●	●	●	●
106	AH (Additional Heating)	●	●	●	●
107	ECM (Engine Control Module)	●	●	●	●
107	MMT (Manual Gearbox)	●	●	●	●
107	ESP (Electronic Stability Program) [BOSCH 8.0 C1]	●	●	●	●
107	SRS (Airbag)	●	●	●	●
107	EPS (Electric Power Steering)	●	●	●	●
107	CAS (Coded Anti Start)	●	●	●	●
108	ECM (Engine Control Module)	●	●	●	●
108	TCM (Gearbox)	●	●	●	●
108	ABS/ESP (Anti-brake System Module)	●	●	●	●
108	SRS (Airbag)	●	●	●	●
108	IPC (Instrument Panel Module)	●	●	●	●
108	AC (Air Conditioning)	●	●	●	●
108	IMMO/HFSM (Engine Immobiliser/Hands Free Starting Access Electric Module)	●	●	●	●
108	EPS (Electric Power Steering)	●	●	●	●
108	SSC (Start/Stop Control)	●	●	●	●
108	MULD (Multifunction Display)	●	●	●	●
206	ECM (Engine Control Module)	●	●	●	●
206	TCM (Auto Gearbox)	●	●	●	●
206	ABS (Active Safety)	●	●	●	●
206	SRS (Airbag)	●	●	●	●
206	IPC (Instrument Panel Module)	●	●	●	●
206	AC (Air Conditioning)	●	●	●	●
206	DAF (Diesel Additive Function)	●	●	●	●
206	EPS (Electric Power Steering)	●	●	●	●
206	SWSM (Steering Wheel Switching Module)	●	●	●	●
206	SM (Service Module)	●	●	●	●
206	BSI (Built-in System Interface)	●	●	●	●
206	DSM (Driver School Module)	●	●	●	●
206	RBS (Rain/Brightness Sensor)	●	●	●	●
206	Display/Telematics	●	●	●	●
206	Alarm	●	●	●	●
206	MULD (Multifunction Display)	●	●	●	●
206	Radio	●	●	●	●
206	CD (CD Player)	●	●	●	●
207	ECM (Engine Control Module)	●	●	●	●
207	TCM (Auto Gearbox)	●	●	●	●
207	ABS (Active Safety)	●	●	●	●
207	SRS (Airbag)	●	●	●	●
207	IPC (Instrument Panel Module)	●	●	●	●
207	AC (Air Conditioning)	●	●	●	●
207	BATT (Battery Charge Status Unit)	●	●	●	●
207	DHL (Directional Headlamps)	●	●	●	●
207	ERU (Engine Relay Unit)	●	●	●	●
207	TRU (Trailer Relay Unit)	●	●	●	●
207	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
207	EPS (Electric Power Steering)	●	●	●	●
207	SWSM (Steering Wheel Switching Module)	●	●	●	●

207	SM (Service Module)	●	●	●	●
207	BSI (Built-in System Interface)	●	●	●	●
207	HFCU (Hands Free Control Unit)	●	●	●	●
207	PAM (Parking Assistance Module)	●	●	●	●
207	SVLCU (Stolen Vehicle Location Control Unit)	●	●	●	●
207	DSM (Driver School Module)	●	●	●	●
207	N-TNB (Not Fastened Warning Light TNB)	●	●	●	●
207	UID (Under Inflation Detection)	●	●	●	●
207	RBS (Rain/Brightness Sensor)	●	●	●	●
207	Display/Telematics	●	●	●	●
207	HFR (High Frequency Receiver)	●	●	●	●
207	Alarm	●	●	●	●
207	MULD (Multifunction Display)	●	●	●	●
207	FR (Folding Roof)	●	●	●	●
207	Radio	●	●	●	●
207	CD (CD Player)	●	●	●	●
208	ECM (Engine Control Module)	●	●	●	●
208	TCM (Auto Gearbox)	●	●	●	●
208	ABS (Active Safety)	●	●	●	●
208	SRS (Airbag)	●	●	●	●
208	IPC (Instrument Panel Module)	●	●	●	●
208	AC (Air Conditioning)	●	●	●	●
208	BATT (Battery Charge Status Unit)	●	●	●	●
208	LRU (Lighting Relay Unit)	●	●	●	●
208	TRU (Trailer Relay Unit)	●	●	●	●
208	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
208	EPS (Electric Power Steering)	●	●	●	●
208	SWSM (Steering Wheel Switching Module)	●	●	●	●
208	SWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
208	BSI (Built-in System Interface)	●	●	●	●
208	PAM (Parking Assistance Module)	●	●	●	●
208	DSM (Driver School Module)	●	●	●	●
208	RBS (Rain/Brightness Sensor)	●	●	●	●
208	TEU (Telematic Unit)	●	●	●	●
208	ITU (Independent Telematic Unit BTA)	●	●	●	●
208	Alarm	●	●	●	●
208	Siren	●	●	●	●
208	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
208	MCP (Multiplexed Control Panel)	●	●	●	●
208	AMP (Audio Amplifier)	●	●	●	●
208	Radio	●	●	●	●
208	CD (CD Player)	●	●	●	●
208 (Ai91)	ECM (Engine Control Module)	●	●	●	●
208 (Ai91)	TCM (Auto Gearbox)	●	●	●	●
208 (Ai91)	ABS (Active Safety)	●	●	●	●
208 (Ai91)	SRS (Airbag)	●	●	●	●
208 (Ai91)	IPC (Instrument Panel Module)	●	●	●	●
208 (Ai91)	AC (Air Conditioning)	●	●	●	●
208 (Ai91)	EPS (Electric Power Steering)	●	●	●	●
208 (Ai91)	SWSM (Steering Wheel Switching Module)	●	●	●	●
208 (Ai91)	SWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
208 (Ai91)	BSI (Built-in System Interface)	●	●	●	●
208 (Ai91)	PAM (Parking Assistance Module)	●	●	●	●
208 (Ai91)	RBS (Rain/Brightness Sensor)	●	●	●	●
208 (Ai91)	TEU (Telematic Unit)	●	●	●	●
208 (Ai91)	ITU (Independent Telematic Unit)	●	●	●	●
208 (Ai91)	Alarm	●	●	●	●
208 (Ai91)	Siren	●	●	●	●

208 (Ai91)	MCP (Multiplexed Control Panel)	●	●	●	●
208 (Ai91)	Radio	●	●	●	●
208 (Ai91)	EX-CD (External CD Player)	●	●	●	●
301	ECM (Engine Control Module)	●	●	●	●
301	TCM (Auto Gearbox)	●	●	●	●
301	ABS (Active Safety)	●	●	●	●
301	SRS (Airbag)	●	●	●	●
301	IPC (Instrument Panel Module)	●	●	●	●
301	TRU (Trailer Relay Unit)	●	●	●	●
301	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
301	EPS (Electric Power Steering)	●	●	●	●
301	SWSM (Steering Wheel Switching Module)	●	●	●	●
301	PAM (Parking Assistance Module)	●	●	●	●
301	Siren	●	●	●	●
301	MULD (Multifunction Display)	●	●	●	●
301	Radio	●	●	●	●
306	ECM (Engine Control Module)	●	●	●	●
306	TCM (Auto Gearbox)	●	●	●	●
306	ABS (Anti-brake System Module) [BOSCH 5.3]	●	●	●	●
306	SRS (Airbag)	●	●	●	●
307	ECM (Engine Control Module)	●	●	●	●
307	TCM (Auto Gearbox)	●	●	●	●
307	ABS (Active Safety)	●	●	●	●
307	SRS (Airbag)	●	●	●	●
307	IPC (Instrument Panel Module)	●	●	●	●
307	AC (Air Conditioning)	●	●	●	●
307	HLL (Left Headlamp Beam Level Corrector)	●	●	●	●
307	HLR (Right Headlamp Beam Level Corrector)	●	●	●	●
307	ERU (Engine Relay Unit)	●	●	●	●
307	TRU (Trailer Relay Unit)	●	●	●	●
307	DAF (Diesel Additive Function)	●	●	●	●
307	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
307	EPS (Electric Power Steering)	●	●	●	●
307	SWSM (Steering Wheel Switching Module)	●	●	●	●
307	SM (Service Module)	●	●	●	●
307	BSI (Built-in System Interface)	●	●	●	●
307	HFCU (Hands Free Control Unit)	●	●	●	●
307	PAM (Parking Assistance Module)	●	●	●	●
307	DSM (Driver School Module)	●	●	●	●
307	DDM (Driver Door Module)	●	●	●	●
307	PDM (Passenger Door Module)	●	●	●	●
307	UID (Under Inflation Detection)	●	●	●	●
307	RBS (Rain/Brightness Sensor)	●	●	●	●
307	TEU (Telematic Unit)	●	●	●	●
307	HFR (High Frequency Receiver)	●	●	●	●
307	Alarm	●	●	●	●
307	MULD (Multifunction Display)	●	●	●	●
307	FR (Folding Roof)	●	●	●	●
307	Sunroof	●	●	●	●
307	Radio	●	●	●	●
307	CD (CD Player)	●	●	●	●
308	ECM (Engine Control Module)	●	●	●	●
308	TCM (Auto Gearbox)	●	●	●	●
308	ABS (Active Safety)	●	●	●	●
308	SRS (Airbag)	●	●	●	●
308	IPC (Instrument Panel Module)	●	●	●	●
308	AC (Air Conditioning)	●	●	●	●
308	BATT (Battery Charge Status Unit)	●	●	●	●

308	DHL (Directional Headlamps)	●	●	●	●
308	ERU (Engine Relay Unit)	●	●	●	●
308	TRU (Trailer Relay Unit)	●	●	●	●
308	EPA (Electropump Assembly)	●	●	●	●
308	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
308	EPS (Electric Power Steering)	●	●	●	●
308	SWSM (Steering Wheel Switching Module)	●	●	●	●
308	SM (Service Module)	●	●	●	●
308	BSI (Built-in System Interface)	●	●	●	●
308	HFCU (Hands Free Control Unit)	●	●	●	●
308	LDWS (Lane Departure Warning System)	●	●	●	●
308	MPD (Moving Panel Deflector)	●	●	●	●
308	PAM (Parking Assistance Module)	●	●	●	●
308	DSM (Driver School Module)	●	●	●	●
308	DDM (Driver Door Module)	●	●	●	●
308	DSMU (Driver Seat Memory Unit)	●	●	●	●
308	PSMU (Passenger Seat Memory Unit)	●	●	●	●
308	N-TNB (Not Fastened Warning Light TNB)	●	●	●	●
308	UID (Under Inflation Detection)	●	●	●	●
308	RBS (Rain/Brightness Sensor)	●	●	●	●
308	Display/Telematics	●	●	●	●
308	HFR (High Frequency Receiver)	●	●	●	●
308	Alarm	●	●	●	●
308	MULD (Multifunction Display)	●	●	●	●
308	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
308	Wiper (Windscreen Wiper)	●	●	●	●
308	FR (Folding Roof)	●	●	●	●
308	Sunroof	●	●	●	●
308	AMP (Audio Amplifier)	●	●	●	●
308	Radio	●	●	●	●
308	CD (CD Player)	●	●	●	●
308 (S)	ECM (Engine Control Module)	●	●	●	●
308 (S)	TCM (Auto Gearbox)	●	●	●	●
308 (S)	ABS (Active Safety)	●	●	●	●
308 (S)	SRS (Airbag)	●	●	●	●
308 (S)	IPC (Instrument Panel Module)	●	●	●	●
308 (S)	AC (Air Conditioning)	●	●	●	●
308 (S)	BATT (Battery Charge Status Unit)	●	●	●	●
308 (S)	DHL (Directional Headlamps)	●	●	●	●
308 (S)	ERU (Engine Relay Unit)	●	●	●	●
308 (S)	EPS (Electric Power Steering)	●	●	●	●
308 (S)	ESL (Electric Steering Lock)	●	●	●	●
308 (S)	SWSM (Steering Wheel Switching Module)	●	●	●	●
308 (S)	SM (Service Module)	●	●	●	●
308 (S)	BSI (Built-in System Interface)	●	●	●	●
308 (S)	HFSM (Hands Free Starting Access Electric Module)	●	●	●	●
308 (S)	PAM (Parking Assistance Module)	●	●	●	●
308 (S)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
308 (S)	KEY (Electric Key Reader)	●	●	●	●
308 (S)	DSMU (Driver Seat Memory Unit)	●	●	●	●
308 (S)	RBS (Rain/Brightness Sensor)	●	●	●	●
308 (S)	TEU (Telematic Unit)	●	●	●	●
308 (S)	VOL (Voltage Retaining Device)	●	●	●	●
308 (S)	Alarm	●	●	●	●
308 (S)	TS (Touch Screen)	●	●	●	●
308 (S)	MULD (Multifunction Display)	●	●	●	●
308 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
308 (S)	MCP (Multiplexed Control Panel)	●	●	●	●

308 (S)	Radio	●	●	●	●
308 (S)	Radio/Telephone	●	●	●	●
308 (T9)	ECM (Engine Control Module)	●	●	●	●
308 (T9)	TCM (Auto Gearbox)	●	●	●	●
308 (T9)	ABS (Active Safety)	●	●	●	●
308 (T9)	SRS (Airbag)	●	●	●	●
308 (T9)	IPC (Instrument Panel Module)	●	●	●	●
308 (T9)	AC (Air Conditioning)	●	●	●	●
308 (T9)	TEU/NAVI (Telematic Unit/Radio Navigation)	●	●	●	●
308 (T9)	BATT (Battery Charge Status Unit)	●	●	●	●
308 (T9)	DHL (Directional Headlamps)	●	●	●	●
308 (T9)	ERU (Engine Relay Unit)	●	●	●	●
308 (T9)	TRU (Trailer Relay Unit)	●	●	●	●
308 (T9)	AH (Additional Heating)	●	●	●	●
308 (T9)	EPS (Electric Power Steering)	●	●	●	●
308 (T9)	ESL (Electric Steering Lock)	●	●	●	●
308 (T9)	SWSM (Steering Wheel Switching Module)	●	●	●	●
308 (T9)	BSI (Built-in System Interface)	●	●	●	●
308 (T9)	HFSM (Hands Free Starting Access Electric Module)	●	●	●	●
308 (T9)	PAM (Parking Assistance Module)	●	●	●	●
308 (T9)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
308 (T9)	PI (Paddgo Inergy)	●	●	●	●
308 (T9)	KEY (Electric Key Reader)	●	●	●	●
308 (T9)	DDM (Driver Door Control Panel)	●	●	●	●
308 (T9)	DSMU (Driver Seat Memory Unit)	●	●	●	●
308 (T9)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
308 (T9)	VDA (Vehicle Distance Assistance)	●	●	●	●
308 (T9)	RBS (Rain/Brightness Sensor)	●	●	●	●
308 (T9)	ITU (Independent Telematic Unit BTA)	●	●	●	●
308 (T9)	VOL (Voltage Retaining Device)	●	●	●	●
308 (T9)	Alarm	●	●	●	●
308 (T9)	Siren	●	●	●	●
308 (T9)	TS (Touch Screen)	●	●	●	●
308 (T9)	MULD (Multifunction Display)	●	●	●	●
308 (T9)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
308 (T9)	MCP (Multiplexed Control Panel)	●	●	●	●
308 (T9)	AMP (Audio Amplifier)	●	●	●	●
308 (T9)	Radio	●	●	●	●
308 (T9)	Radio/Telephone	●	●	●	●
308 (T9)	EX-CD (External CD Player)	●	●	●	●
308 (Tx9)	ECM (Engine Control Module)	●	●	●	●
308 (Tx9)	TCM (Auto Gearbox)	●	●	●	●
308 (Tx9)	ABS (Active Safety)	●	●	●	●
308 (Tx9)	SRS (Airbag)	●	●	●	●
308 (Tx9)	IPC (Instrument Panel Module)	●	●	●	●
308 (Tx9)	AC (Air Conditioning)	●	●	●	●
308 (Tx9)	BATT (Battery Charge Status Unit)	●	●	●	●
308 (Tx9)	EPS (Electric Power Steering)	●	●	●	●
308 (Tx9)	ESL (Electric Steering Lock)	●	●	●	●
308 (Tx9)	SWSM (Steering Wheel Switching Module)	●	●	●	●
308 (Tx9)	SWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
308 (Tx9)	SM (Service Module)	●	●	●	●
308 (Tx9)	PAM (Parking Assistance Module)	●	●	●	●
308 (Tx9)	RBS (Rain/Brightness Sensor)	●	●	●	●
308 (Tx9)	MULD (Multifunction Display)	●	●	●	●
308 (Tx9)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
308 (Tx9)	MCP (Multiplexed Control Panel)	●	●	●	●
308 (Tx9)	Radio	●	●	●	●

405	ECM (Engine Control Module)	●	●	●	●
406	ECM (Engine Control Module)	●	●	●	●
406	TCM (Auto Gearbox)	●	●	●	●
406	ABS (Active Safety)	●	●	●	●
406	SRS (Airbag)	●	●	●	●
406	IPC (Instrument Panel Module)	●	●	●	●
406	AC (Air Conditioning)	●	●	●	●
406	DAF (Diesel Additive Function)	●	●	●	●
406	SWSM (Steering Wheel Switching Module)	●	●	●	●
406	BSI (Built-in System Interface)	●	●	●	●
406	RBS (Rain/Brightness Sensor)	●	●	●	●
406	Alarm	●	●	●	●
406	MULD (Multifunction Display)	●	●	●	●
406	Radio	●	●	●	●
406	CD (CD Player)	●	●	●	●
407	ECM (Engine Control Module)	●	●	●	●
407	TCM (Auto Gearbox)	●	●	●	●
407	ABS (Active Safety)	●	●	●	●
407	SRS (Airbag)	●	●	●	●
407	IPC (Instrument Panel Module)	●	●	●	●
407	AC (Air Conditioning)	●	●	●	●
407	EMS (Electronically Managed Suspension)	●	●	●	●
407	BATT (Battery Charge Status Unit)	●	●	●	●
407	DHL (Directional Headlamps)	●	●	●	●
407	HLL (Left Headlamp Beam Level Corrector)	●	●	●	●
407	HLR (Right Headlamp Beam Level Corrector)	●	●	●	●
407	ERU (Engine Relay Unit)	●	●	●	●
407	TRU (Trailer Relay Unit)	●	●	●	●
407	DAF (Diesel Additive Function)	●	●	●	●
407	AH (Additional Heating)	●	●	●	●
407	EPS (Electric Power Steering)	●	●	●	●
407	SWSM (Steering Wheel Switching Module)	●	●	●	●
407	BSI (Built-in System Interface)	●	●	●	●
407	BW (Boot Wiring)	●	●	●	●
407	HFCU (Hands Free Control Unit)	●	●	●	●
407	PAM (Parking Assistance Module)	●	●	●	●
407	DDM (Driver Door Module)	●	●	●	●
407	PDM (Passenger Door Module)	●	●	●	●
407	DSMU (Driver Seat Memory Unit)	●	●	●	●
407	PSMU (Passenger Seat Memory Unit)	●	●	●	●
407	UID (Under Inflation Detection)	●	●	●	●
407	RBS (Rain/Brightness Sensor)	●	●	●	●
407	Display/Telematics	●	●	●	●
407	HFR (High Frequency Receiver)	●	●	●	●
407	Alarm	●	●	●	●
407	MULD (Multifunction Display)	●	●	●	●
407	Wiper (Windscreen Wiper)	●	●	●	●
407	Sunroof	●	●	●	●
407	Radio	●	●	●	●
407	CD (CD Player)	●	●	●	●
408 (T73)	ECM (Engine Control Module)	●	●	●	●
408 (T73)	TCM (Auto Gearbox)	●	●	●	●
408 (T73)	ABS (Active Safety)	●	●	●	●
408 (T73)	SRS (Airbag)	●	●	●	●
408 (T73)	IPC (Instrument Panel Module)	●	●	●	●
408 (T73)	AC (Air Conditioning)	●	●	●	●
408 (T73)	BATT (Battery Charge Status Unit)	●	●	●	●
408 (T73)	DHL (Directional Headlamps)	●	●	●	●

408 (T73)	ERU (Engine Relay Unit)	●	●	●	●
408 (T73)	TRU (Trailer Relay Unit)	●	●	●	●
408 (T73)	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
408 (T73)	EPS (Electric Power Steering)	●	●	●	●
408 (T73)	SWSM (Steering Wheel Switching Module)	●	●	●	●
408 (T73)	SM (Service Module)	●	●	●	●
408 (T73)	BSI (Built-in System Interface)	●	●	●	●
408 (T73)	HFCU (Hands Free Control Unit)	●	●	●	●
408 (T73)	LDWS (Lane Departure Warning System)	●	●	●	●
408 (T73)	MPD (Moving Panel Deflector)	●	●	●	●
408 (T73)	PAM (Parking Assistance Module)	●	●	●	●
408 (T73)	DSM (Driver School Module)	●	●	●	●
408 (T73)	DDM (Driver Door Module)	●	●	●	●
408 (T73)	DSMU (Driver Seat Memory Unit)	●	●	●	●
408 (T73)	PSMU (Passenger Seat Memory Unit)	●	●	●	●
408 (T73)	N-TNB (Not Fastened Warning Light TNB)	●	●	●	●
408 (T73)	UID (Under Inflation Detection)	●	●	●	●
408 (T73)	RBS (Rain/Brightness Sensor)	●	●	●	●
408 (T73)	Display/Telematics	●	●	●	●
408 (T73)	HFR (High Frequency Receiver)	●	●	●	●
408 (T73)	Alarm	●	●	●	●
408 (T73)	MULD (Multifunction Display)	●	●	●	●
408 (T73)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
408 (T73)	Wiper (Windscreen Wiper)	●	●	●	●
408 (T73)	FR (Folding Roof)	●	●	●	●
408 (T73)	Sunroof	●	●	●	●
408 (T73)	AMP (Audio Amplifier)	●	●	●	●
408 (T73)	Radio	●	●	●	●
408 (T73)	CD (CD Player)	●	●	●	●
408 (T93)	ECM (Engine Control Module)	●	●	●	●
408 (T93)	TCM (Auto Gearbox)	●	●	●	●
408 (T93)	ABS (Active Safety)	●	●	●	●
408 (T93)	SRS (Airbag)	●	●	●	●
408 (T93)	IPC (Instrument Panel Module)	●	●	●	●
408 (T93)	AC (Air Conditioning)	●	●	●	●
408 (T93)	TEU/NAVI (Telematic Unit/Radio Navigation)	●	●	●	●
408 (T93)	BATT (Battery Charge Status Unit)	●	●	●	●
408 (T93)	DHL (Directional Headlamps)	●	●	●	●
408 (T93)	ERU (Engine Relay Unit)	●	●	●	●
408 (T93)	EPS (Electric Power Steering)	●	●	●	●
408 (T93)	ESL (Electric Steering Lock)	●	●	●	●
408 (T93)	SWC (Controls On The Steering Wheel)	●	●	●	●
408 (T93)	HFSM (Hands Free Starting Access Electric Module)	●	●	●	●
408 (T93)	PAM (Parking Assistance Module)	●	●	●	●
408 (T93)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
408 (T93)	KEY (Electric Key Reader)	●	●	●	●
408 (T93)	DSMU (Driver Seat Memory Unit)	●	●	●	●
408 (T93)	RBS (Rain/Brightness Sensor)	●	●	●	●
408 (T93)	ITU (Independent Telematic Unit BTA)	●	●	●	●
408 (T93)	VOL (Voltage Retaining Device)	●	●	●	●
408 (T93)	Alarm	●	●	●	●
408 (T93)	TS (Touch Screen)	●	●	●	●
408 (T93)	MULD (Multifunction Display)	●	●	●	●
408 (T93)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
408 (T93)	MCP (Multiplexed Control Panel)	●	●	●	●
408 (T93)	Radio	●	●	●	●
408 (T93)	Radio/Telephone	●	●	●	●
508	ECM (Engine Control Module)	●	●	●	●

508	TCM (Auto Gearbox)	●	●	●	●
508	ABS (Active Safety)	●	●	●	●
508	SRS (Airbag)	●	●	●	●
508	IPC (Instrument Panel Module)	●	●	●	●
508	AC (Air Conditioning)	●	●	●	●
508	RAC (Rear Air Conditioning)	●	●	●	●
508	EPB (Electric Secondary Brake)	●	●	●	●
508	SSP (Active Damper Electronic Unit)	●	●	●	●
508	NAVI (Telematic Navigator)	●	●	●	●
508	BATT (Battery Charge Status Unit)	●	●	●	●
508	BATT (Traction Battery)	●	●	●	●
508	MBA (Main Beams Assistant)	●	●	●	●
508	ERU (Engine Relay Unit)	●	●	●	●
508	TRU (Trailer Relay Unit)	●	●	●	●
508	HMS (Hybrid Mode Selector)	●	●	●	●
508	HYC-1 (Hybrid Control 1)	●	●	●	●
508	HYC-2 (Hybrid Control 2)	●	●	●	●
508	AH (Additional Heating)	●	●	●	●
508	EPS (Electric Power Steering)	●	●	●	●
508	ESL (Electric Steering Lock)	●	●	●	●
508	SWSM (Steering Wheel Switching Module)	●	●	●	●
508	SWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
508	BSI (Built-in System Interface)	●	●	●	●
508	MOTO (Motorised Boot)	●	●	●	●
508	HFCU (Hands Free Control Unit)	●	●	●	●
508	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	●	●	●	●
508	PAM (Parking Assistance Module)	●	●	●	●
508	SPAMU (Supply Protection And Management Unit)	●	●	●	●
508	KEY (Electric Key Reader)	●	●	●	●
508	DDM (Driver Door Control Panel)	●	●	●	●
508	DSMU (Driver Seat Memory Unit)	●	●	●	●
508	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
508	UID (Under Inflation Detection)	●	●	●	●
508	RBS (Rain/Brightness Sensor) [CDPL]	●	●	●	●
508	Display/Telematics	●	●	●	●
508	ITU (Independent Telematic Unit BTA)	●	●	●	●
508	Alarm	●	●	●	●
508	MULD (Multifunction Display)	●	●	●	●
508	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
508	MCP (Multiplexed Control Panel)	●	●	●	●
508	HHV (High Head Vision)	●	●	●	●
508	Wiper-L (Windscreen Wiper Left)	●	●	●	●
508	Wiper-R (Windscreen Wiper Right)	●	●	●	●
508	AMP (Audio Amplifier)	●	●	●	●
508	Radio [RD5]	●	●	●	●
605	ECM (Engine Control Module)	●	●	●	●
607	ECM (Engine Control Module)	●	●	●	●
607	TCM (Auto Gearbox)	●	●	●	●
607	ABS (Active Safety)	●	●	●	●
607	SRS (Airbag)	●	●	●	●
607	IPC (Instrument Panel Module)	●	●	●	●
607	AC (Air Conditioning)	●	●	●	●
607	EMS (Electronically Managed Suspension)	●	●	●	●
607	Headlamp (Headlamp Height Corrector)	●	●	●	●
607	ERU (Engine Relay Unit)	●	●	●	●
607	TRU (Trailer Relay Unit)	●	●	●	●
607	DAF (Diesel Additive Function)	●	●	●	●
607	EPS (Electric Power Steering)	●	●	●	●

607	SWSM (Steering Wheel Switching Module)	●	●	●	●
607	BSI (Built-in System Interface)	●	●	●	●
607	HFCU (Hands Free Control Unit)	●	●	●	●
607	DPOS (Storing Of The Driving Position)	●	●	●	●
607	PAM (Parking Assistance Module)	●	●	●	●
607	DDM (Driver Door Control Panel)	●	●	●	●
607	PDM (Passenger Door Control Panel)	●	●	●	●
607	DSMU (Driver Seat Memory Unit)	●	●	●	●
607	UID (Under Inflation Detection)	●	●	●	●
607	RBS (Rain/Brightness Sensor)	●	●	●	●
607	TEU (Telematic Unit)	●	●	●	●
607	Alarm	●	●	●	●
607	MULD (Multifunction Display)	●	●	●	●
607	Radio	●	●	●	●
607	CD (CD Player)	●	●	●	●
806	ECM (Engine Control Module)	●	●	●	●
806	TCM (Auto Gearbox)	●	●	●	●
806	SRS (Airbag)	●	●	●	●
807	ECM (Engine Control Module)	●	●	●	●
807	TCM (Auto Gearbox)	●	●	●	●
807	ABS (Active Safety)	●	●	●	●
807	SRS (Airbag)	●	●	●	●
807	IPC (Instrument Panel Module)	●	●	●	●
807	IP (Warning Lights/Odometer Unit)	●	●	●	●
807	AC (Air Conditioning)	●	●	●	●
807	HLL (Left Headlamp Beam Level Corrector)	●	●	●	●
807	HLR (Right Headlamp Beam Level Corrector)	●	●	●	●
807	DAF (Diesel Additive Function)	●	●	●	●
807	AH (Additional Heating)	●	●	●	●
807	EPS (Electric Power Steering)[GEP]	●	●	●	●
807	SWSM (Steering Wheel Switching Module)	●	●	●	●
807	BSI (Built-in System Interface)	●	●	●	●
807	HFCU (Hands Free Control Unit)	●	●	●	●
807	DPOS (Storing Of The Driving Position)	●	●	●	●
807	PAM (Parking Assistance Module)	●	●	●	●
807	DDM (Driver Door Module)	●	●	●	●
807	PDM (Passenger Door Module)	●	●	●	●
807	DSMU (Driver Seat Memory Unit)	●	●	●	●
807	SSDM (Sliding Side Doors Module)	●	●	●	●
807	UID (Under Inflation Detection)	●	●	●	●
807	RBS (Rain/Brightness Sensor)	●	●	●	●
807	Display/Telematics	●	●	●	●
807	TERC (Telematic Receiver Control)	●	●	●	●
807	Alarm	●	●	●	●
807	MULD (Multifunction Display)	●	●	●	●
807	Sunroof-F (Front Sunroof)	●	●	●	●
807	Sunroof-M (Middle Sunroof)	●	●	●	●
807	Sunroof-R (Rear Sunroof)	●	●	●	●
807	Radio	●	●	●	●
807	CD (CD Player)	●	●	●	●
1007	ECM (Engine Control Module)	●	●	●	●
1007	MMT (Manual Gearbox)[BVMP]	●	●	●	●
1007	ABS (Active Safety)	●	●	●	●
1007	SRS (Airbag)	●	●	●	●
1007	IPC (Instrument Panel Module)	●	●	●	●
1007	AC (Air Conditioning)	●	●	●	●
1007	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
1007	EPS (Electric Power Steering)	●	●	●	●

1007	SWSM (Steering Wheel Switching Module)	●	●	●	●
1007	BSI (Built-in System Interface)	●	●	●	●
1007	HFCU (Hands Free Control Unit)	●	●	●	●
1007	PAM (Parking Assistance Module)	●	●	●	●
1007	SSDM (Sliding Side Doors Module)	●	●	●	●
1007	UID (Under Inflation Detection)	●	●	●	●
1007	RBS (Rain/Brightness Sensor)	●	●	●	●
1007	TEU (Telematic Unit)	●	●	●	●
1007	Alarm	●	●	●	●
1007	MULD (Multifunction Display)	●	●	●	●
1007	Radio	●	●	●	●
1007	CD (CD Player)	●	●	●	●
2008	ECM (Engine Control Module)	●	●	●	●
2008	TCM (Auto Gearbox)	●	●	●	●
2008	ABS (Active Safety)	●	●	●	●
2008	SRS (Airbag)	●	●	●	●
2008	IPC (Instrument Panel Module)	●	●	●	●
2008	AC (Air Conditioning)	●	●	●	●
2008	BATT (Battery Charge Status Unit)	●	●	●	●
2008	TRU (Trailer Relay Unit)	●	●	●	●
2008	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
2008	EPS (Electric Power Steering)	●	●	●	●
2008	SWSM (Steering Wheel Switching Module)	●	●	●	●
2008	SWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
2008	PAM (Parking Assistance Module)	●	●	●	●
2008	RBS (Rain/Brightness Sensor)	●	●	●	●
2008	TEU (Telematic Unit)	●	●	●	●
2008	ITU (Independent Telematic Unit BTA)	●	●	●	●
2008	Alarm	●	●	●	●
2008	Siren	●	●	●	●
2008	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
2008	MCP (Multiplexed Control Panel)	●	●	●	●
2008	AMP (Audio Amplifier)	●	●	●	●
2008	Radio	●	●	●	●
2008	EX-CD (External CD Player)	●	●	●	●
3008	ECM (Engine Control Module)	●	●	●	●
3008	TCM (Auto Gearbox)	●	●	●	●
3008	ABS (Active Safety)	●	●	●	●
3008	SRS (Airbag)	●	●	●	●
3008	IPC (Instrument Panel Module)	●	●	●	●
3008	AC (Air Conditioning)	●	●	●	●
3008	EPB (Electric Secondary Brake)	●	●	●	●
3008	BATT (Battery Charge Status Unit)	●	●	●	●
3008	BATT (Traction Battery)	●	●	●	●
3008	Headlamp (Headlamp Height Corrector)	●	●	●	●
3008	ERU (Engine Relay Unit)	●	●	●	●
3008	TRU (Trailer Relay Unit)	●	●	●	●
3008	HMS (Hybrid Mode Selector)	●	●	●	●
3008	HYC-1 (Hybrid Control 1)	●	●	●	●
3008	HYC-2 (Hybrid Control 2)	●	●	●	●
3008	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
3008	EPS (Electric Power Steering)	●	●	●	●
3008	SWSM (Steering Wheel Switching Module)	●	●	●	●
3008	SM (Service Module)	●	●	●	●
3008	BSI (Built-in System Interface)	●	●	●	●
3008	HFCU (Hands Free Control Unit)	●	●	●	●
3008	Assistance In Complying With The Inter Vehicle Time	●	●	●	●
3008	ASM (Anti-slip Mode Selector)	●	●	●	●

3008	NTU (Network Isolation Unit)	●	●	●	●
3008	PAM (Parking Assistance Module)	●	●	●	●
3008	DDM (Driver Door Control Panel)	●	●	●	●
3008	N-TNB (Not Fastened Warning Light TNB)	●	●	●	●
3008	UID (Under Inflation Detection)	●	●	●	●
3008	RBS (Rain/Brightness Sensor)	●	●	●	●
3008	Display/Telematics	●	●	●	●
3008	HFR (High Frequency Receiver)	●	●	●	●
3008	Alarm	●	●	●	●
3008	MULD (Multifunction Display)	●	●	●	●
3008	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
3008	HHV (High Head Vision)	●	●	●	●
3008	Wiper (Windscreen Wiper)	●	●	●	●
3008	AMP (Audio Amplifier)	●	●	●	●
3008	Radio	●	●	●	●
3008	CD (CD Player)	●	●	●	●
3008 (P84)	ECM (Engine Control Module)	●	●	●	●
3008 (P84)	TCM (Auto Gearbox)	●	●	●	●
3008 (P84)	ABS (Active Safety)	●	●	●	●
3008 (P84)	SRS (Airbag)	●	●	●	●
3008 (P84)	IPC (Instrument Panel Module)	●	●	●	●
3008 (P84)	AC (Air Conditioning)	●	●	●	●
3008 (P84)	BATT (Battery Charge Status Unit)	●	●	●	●
3008 (P84)	DHL (Directional Headlamps)	●	●	●	●
3008 (P84)	ERU (Engine Relay Unit)	●	●	●	●
3008 (P84)	TRU (Trailer Relay Unit)	●	●	●	●
3008 (P84)	EPS (Electric Power Steering)	●	●	●	●
3008 (P84)	ESL (Electric Steering Lock)	●	●	●	●
3008 (P84)	SWSM (Steering Wheel Switching Module)	●	●	●	●
3008 (P84)	SWC (Controls On The Steering Wheel)	●	●	●	●
3008 (P84)	ASM (Anti-slip Mode Selector)	●	●	●	●
3008 (P84)	PAM (Parking Assistance Module)	●	●	●	●
3008 (P84)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
3008 (P84)	DDM (Driver Door Control Panel)	●	●	●	●
3008 (P84)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
3008 (P84)	VDA (Vehicle Distance Assistance)	●	●	●	●
3008 (P84)	RBS (Rain/Brightness Sensor)	●	●	●	●
3008 (P84)	VOL (Voltage Retaining Device)	●	●	●	●
3008 (P84)	Siren	●	●	●	●
3008 (P84)	MULD (Multifunction Display)	●	●	●	●
3008 (P84)	MCP (Multiplexed Control Panel)	●	●	●	●
3008 (P84)	AMP (Audio Amplifier)	●	●	●	●
3008 (P84)	EX-CD (External CD Player)	●	●	●	●
4007	ECM (Engine Control Module)	●	●	●	●
4007	TCM (4x4 Transmission)	●	●	●	●
4007	TCM (Auto Gearbox)	●	●	●	●
4007	TCM (Gear Lever DCT)	●	●	●	●
4007	ABS/ESP (Anti-brake System Module)	●	●	●	●
4007	SRS (Airbag)	●	●	●	●
4007	IPC (Instrument Panel Module)	●	●	●	●
4007	AC (Air Conditioning)	●	●	●	●
4007	NAVI (Navigation)	●	●	●	●
4007	SAS (Steering Wheel Angle Sensor)	●	●	●	●
4007	BSI (Built-in System Interface)	●	●	●	●
4007	CAS (Coded Anti Start)	●	●	●	●
4007	HFCU (Hands Free Control Unit)	●	●	●	●
4007	AFS (Static AFS)	●	●	●	●
4007	PAM (Parking Assistance Module)	●	●	●	●

4007	RDPC (Rear Final Drive Piloted Clutch)	●	●	●	●
4007	Radio	●	●	●	●
4008	TCM (Auto Gearbox)	●	●	●	●
4008	SRS (Airbag)	●	●	●	●
4008	IPC (Instrument Panel Module)	●	●	●	●
4008	AC (Air Conditioning)	●	●	●	●
4008	NAVI (Navigation)	●	●	●	●
4008	EPS (Electric Power Steering)	●	●	●	●
4008	SAS (Steering Wheel Angle Sensor)	●	●	●	●
4008	SSC (Start/Stop Control)	●	●	●	●
4008	AUTH (Starting Authorisation)	●	●	●	●
4008	HFCU (Hands Free Control Unit)	●	●	●	●
4008	PAM (Parking Assistance Module)	●	●	●	●
4008	RDPC (Rear Final Drive Piloted Clutch)	●	●	●	●
4008	Radio/Telephone	●	●	●	●
4008 (China)	ECM (Engine Control Module)	●	●	●	●
4008 (China)	TCM (Auto Gearbox)	●	●	●	●
4008 (China)	ABS (Active Safety)	●	●	●	●
4008 (China)	SRS (Airbag)	●	●	●	●
4008 (China)	IPC (Instrument Panel Module)	●	●	●	●
4008 (China)	AC (Air Conditioning)	●	●	●	●
4008 (China)	BATT (Battery Charge Status Unit)	●	●	●	●
4008 (China)	DHL (Directional Headlamps)	●	●	●	●
4008 (China)	ERU (Engine Relay Unit)	●	●	●	●
4008 (China)	TRU (Trailer Relay Unit)	●	●	●	●
4008 (China)	EPS (Electric Power Steering)	●	●	●	●
4008 (China)	ESL (Electric Steering Lock)	●	●	●	●
4008 (China)	SWSM (Steering Wheel Switching Module)	●	●	●	●
4008 (China)	SWC (Controls On The Steering Wheel)	●	●	●	●
4008 (China)	ASM (Anti-slip Mode Selector)	●	●	●	●
4008 (China)	PAM (Parking Assistance Module)	●	●	●	●
4008 (China)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
4008 (China)	DDM (Driver Door Control Panel)	●	●	●	●
4008 (China)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
4008 (China)	VDA (Vehicle Distance Assistance)	●	●	●	●
4008 (China)	RBS (Rain/Brightness Sensor)	●	●	●	●
4008 (China)	VOL (Voltage Retaining Device)	●	●	●	●
4008 (China)	Siren	●	●	●	●
4008 (China)	MULD (Multifunction Display)	●	●	●	●
4008 (China)	MCP (Multiplexed Control Panel)	●	●	●	●
4008 (China)	AMP (Audio Amplifier)	●	●	●	●
4008 (China)	EX-CD (External CD Player)	●	●	●	●
5008	ECM (Engine Control Module)	●	●	●	●
5008	TCM (Auto Gearbox)	●	●	●	●
5008	ABS (Active Safety)	●	●	●	●
5008	SRS (Airbag)	●	●	●	●
5008	IPC (Instrument Panel Module)	●	●	●	●
5008	AC (Air Conditioning)	●	●	●	●
5008	EPB (Electric Parking Brake)	●	●	●	●
5008	EPB (Electric Secondary Brake)	●	●	●	●
5008	BATT (Battery Charge Status Unit)	●	●	●	●
5008	Headlamp (Headlamp Height Corrector)	●	●	●	●
5008	ERU (Engine Relay Unit)	●	●	●	●
5008	TRU (Trailer Relay Unit)	●	●	●	●
5008	HMS (Hybrid Mode Selector)	●	●	●	●
5008	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
5008	EPS (Electric Power Steering)	●	●	●	●
5008	SWSM (Steering Wheel Switching Module)	●	●	●	●

5008	SWFCC (Steering Wheel With Fixed Central Control)	●	●	●	●
5008	SM (Service Module)	●	●	●	●
5008	BSI (Built-in System Interface)	●	●	●	●
5008	HFCU (Hands Free Control Unit)	●	●	●	●
5008	LDWS (Lane Departure Warning System)	●	●	●	●
5008	Assistance In Complying With The Inter Vehicle Time	●	●	●	●
5008	ASM (Anti-slip Mode Selector)	●	●	●	●
5008	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	●	●	●	●
5008	NIU (Network Isolation Unit)	●	●	●	●
5008	PAM (Parking Assistance Module)	●	●	●	●
5008	PU (Portable Unit)	●	●	●	●
5008	DDM (Driver Door Control Panel)	●	●	●	●
5008	N-TNB (Not Fastened Warning Light TNB)	●	●	●	●
5008	UID (Under Inflation Detection)	●	●	●	●
5008	RBS (Rain/Brightness Sensor)	●	●	●	●
5008	Display/Telematics	●	●	●	●
5008	ITU (Independent Telematic Unit BTA)	●	●	●	●
5008	HFR (High Frequency Receiver)	●	●	●	●
5008	Alarm	●	●	●	●
5008	MULD (Multifunction Display)	●	●	●	●
5008	MCP (Multiplexed Control Panel)	●	●	●	●
5008	CPDMD (Control Panel Dot Matrix Display)	●	●	●	●
5008	HHV (High Head Vision)	●	●	●	●
5008	Wiper (Windscreen Wiper)	●	●	●	●
5008	AMP (Audio Amplifier)	●	●	●	●
5008	Radio	●	●	●	●
5008	CD (CD Player)	●	●	●	●
5008 (P84)	ECM (Engine Control Module)	●	●	●	●
5008 (P84)	TCM (Auto Gearbox)	●	●	●	●
5008 (P84)	ABS (Active Safety)	●	●	●	●
5008 (P84)	SRS (Airbag)	●	●	●	●
5008 (P84)	IPC (Instrument Panel Module)	●	●	●	●
5008 (P84)	AC (Air Conditioning)	●	●	●	●
5008 (P84)	BATT (Battery Charge Status Unit)	●	●	●	●
5008 (P84)	DHL (Directional Headlamps)	●	●	●	●
5008 (P84)	ERU (Engine Relay Unit)	●	●	●	●
5008 (P84)	TRU (Trailer Relay Unit)	●	●	●	●
5008 (P84)	EPS (Electric Power Steering)	●	●	●	●
5008 (P84)	ESL (Electric Steering Lock)	●	●	●	●
5008 (P84)	SWSM (Steering Wheel Switching Module)	●	●	●	●
5008 (P84)	SWC (Controls On The Steering Wheel)	●	●	●	●
5008 (P84)	ASM (Anti-slip Mode Selector)	●	●	●	●
5008 (P84)	PAM (Parking Assistance Module)	●	●	●	●
5008 (P84)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
5008 (P84)	DDM (Driver Door Control Panel)	●	●	●	●
5008 (P84)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
5008 (P84)	VDA (Vehicle Distance Assistance)	●	●	●	●
5008 (P84)	RBS (Rain/Brightness Sensor)	●	●	●	●
5008 (P84)	VOL (Voltage Retaining Device)	●	●	●	●
5008 (P84)	Siren	●	●	●	●
5008 (P84)	MULD (Multifunction Display)	●	●	●	●
5008 (P84)	MCP (Multiplexed Control Panel)	●	●	●	●
5008 (P84)	AMP (Audio Amplifier)	●	●	●	●
5008 (P84)	EX-CD (External CD Player)	●	●	●	●
Boxer	ECM (Engine Control Module)	●	●	●	●
Boxer	TCM (Auto Gearbox) [4HP20]	●	●	●	●
Boxer	ABS (Active Safety)	●	●	●	●
Boxer	AH (Additional Heating)	●	●	●	●

Boxer	EPS (Electric Power Steering)	●	●	●	●
Boxer	TG (Tachograph)	●	●	●	●
Boxer3 (Euro5/Euro6)	ECM (Engine Control Module)	●	●	●	●
Boxer3 (Euro5/Euro6)	ABS (Active Safety)	●	●	●	●
Boxer3 (Euro5/Euro6)	SRS (Airbag)	●	●	●	●
Boxer3 (Euro5/Euro6)	IPC (Instrument Panel Module)	●	●	●	●
Boxer3 (Euro5/Euro6)	AC (Air Conditioning)	●	●	●	●
Boxer3 (Euro5/Euro6)	AH (Additional Heating)	●	●	●	●
Boxer3 (Euro5/Euro6)	EPS (Electric Power Steering)	●	●	●	●
Boxer3 (Euro5/Euro6)	BSI (Built-in System Interface)	●	●	●	●
Boxer3 (Euro5/Euro6)	PAM (Parking Assistance Module)	●	●	●	●
Bipper	TCM (Auto Gearbox)	●	●	●	●
Bipper	ABS (Active Safety)	●	●	●	●
Bipper	SRS (Airbag)	●	●	●	●
Bipper	IPC (Instrument Panel Module)	●	●	●	●
Bipper	PAM (Parking Assistance Module)	●	●	●	●
Expert	ECM (Engine Control Module)	●	●	●	●
Expert	TCM (Auto Gearbox)	●	●	●	●
Expert	ABS (Active Safety)	●	●	●	●
Expert	SRS (Airbag)	●	●	●	●
Expert	IPC (Instrument Panel Module)	●	●	●	●
Expert	AC (Air Conditioning)	●	●	●	●
Expert	RAC (Rear Air Conditioning)	●	●	●	●
Expert	SSP (Pneumatic Suspension)	●	●	●	●
Expert	BATT (Battery Charge Status Unit)	●	●	●	●
Expert	ERU (Engine Relay Unit)	●	●	●	●
Expert	TRU (Trailer Relay Unit)	●	●	●	●
Expert	AH (Additional Heating)	●	●	●	●
Expert	EPS (Electric Power Steering)	●	●	●	●
Expert	SWSM (Steering Wheel Switching Module)	●	●	●	●
Expert	BSI (Built-in System Interface)	●	●	●	●
Expert	HFCU (Hands Free Control Unit)	●	●	●	●
Expert	ASM (Anti-slip Mode Selector)	●	●	●	●
Expert	PAM (Parking Assistance Module)	●	●	●	●
Expert	BWCU (Bodywork Conversion Unit)	●	●	●	●
Expert	DD (Deflation Detection DSG)	●	●	●	●
Expert	RBS (Rain/Brightness Sensor)	●	●	●	●
Expert	Display/Telematics	●	●	●	●
Expert	HFR (High Frequency Receiver)	●	●	●	●
Expert	Alarm	●	●	●	●
Expert	MULD (Multifunction Display)	●	●	●	●
Expert	Radio	●	●	●	●
Expert	CD (CD Player)	●	●	●	●
Expert (K0)	ECM (Engine Control Module)	●	●	●	●
Expert (K0)	TCM (Auto Gearbox)	●	●	●	●
Expert (K0)	TCM (Automatic Gearbox Electric Control)	●	●	●	●
Expert (K0)	ABS (Active Safety)	●	●	●	●
Expert (K0)	SRS (Airbag)	●	●	●	●
Expert (K0)	IPC (Instrument Panel Module)	●	●	●	●
Expert (K0)	AC (Air Conditioning)	●	●	●	●
Expert (K0)	BATT (Battery Charge Status Unit)	●	●	●	●
Expert (K0)	ERU (Engine Relay Unit)	●	●	●	●
Expert (K0)	TRU (Trailer Relay Unit)	●	●	●	●
Expert (K0)	AH (Additional Heating)	●	●	●	●
Expert (K0)	ESL (Electric Steering Lock)	●	●	●	●

Expert (K0)	SWSM (Steering Wheel Switching Module)	●	●	●	●
Expert (K0)	SWC (Controls On The Steering Wheel)	●	●	●	●
Expert (K0)	ASM (Anti-slip Mode Selector)	●	●	●	●
Expert (K0)	PAM (Parking Assistance Module)	●	●	●	●
Expert (K0)	SPAMU (Supply Protection And Management Unit)	●	●	●	●
Expert (K0)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
Expert (K0)	VDA (Vehicle Distance Assistance)	●	●	●	●
Expert (K0)	RBS (Rain/Brightness Sensor)	●	●	●	●
Expert (K0)	VOL (Voltage Retaining Device)	●	●	●	●
Expert (K0)	Alarm	●	●	●	●
Expert (K0)	Siren	●	●	●	●
Expert (K0)	MULD (Multifunction Display)	●	●	●	●
Expert (K0)	MCP (Multiplexed Control Panel)	●	●	●	●
Expert (K0)	HHV (High Head Vision)	●	●	●	●
Expert (K0)	Radio/Telephone	●	●	●	●
Hoggar	ECM (Engine Control Module)	●	●	●	●
Hoggar	TCM (Auto Gearbox)	●	●	●	●
Hoggar	ABS (Active Safety)	●	●	●	●
Hoggar	SRS (Airbag)	●	●	●	●
Hoggar	IPC (Instrument Panel Module)	●	●	●	●
Hoggar	AC (Air Conditioning)	●	●	●	●
Hoggar	EPS (Electric Power Steering)	●	●	●	●
Hoggar	SWSM (Steering Wheel Switching Module)	●	●	●	●
Hoggar	SM (Service Module)	●	●	●	●
Hoggar	BSI (Built-in System Interface)	●	●	●	●
Hoggar	SVLCU (Stolen Vehicle Location Control Unit)	●	●	●	●
Hoggar	RBS (Rain/Brightness Sensor)	●	●	●	●
Hoggar	Alarm	●	●	●	●
Hoggar	MULD (Multifunction Display)	●	●	●	●
Hoggar	Radio	●	●	●	●
Hoggar	CD (CD Player)	●	●	●	●
Ion	ABS (Active Safety)	●	●	●	●
Ion	SRS (Airbag)	●	●	●	●
Ion	IPC (Instrument Panel Module)	●	●	●	●
Ion	PCAHR (Passenger Compartment Air Heating Resistor)	●	●	●	●
Ion	BATT (Onboard Charger Of The Traction Battery)	●	●	●	●
Ion	BATT (Traction Battery)	●	●	●	●
Ion	BATT-01 (Traction Battery Cells Management 01)	●	●	●	●
Ion	BATT-02 (Traction Battery Cells Management 02)	●	●	●	●
Ion	BATT-03 (Traction Battery Cells Management 03)	●	●	●	●
Ion	BATT-04 (Traction Battery Cells Management 04)	●	●	●	●
Ion	BATT-05 (Traction Battery Cells Management 05)	●	●	●	●
Ion	BATT-07 (Traction Battery Cells Management 07)	●	●	●	●
Ion	BATT-08 (Traction Battery Cells Management 08)	●	●	●	●
Ion	BATT-09 (Traction Battery Cells Management 09)	●	●	●	●
Ion	BATT-10 (Traction Battery Cells Management 10)	●	●	●	●
Ion	BATT-11 (Traction Battery Cells Management 11)	●	●	●	●
Ion	EMM (Electric Machine Management)	●	●	●	●
Ion	EVM (Electric Vehicle Management)	●	●	●	●
Ion	EPS (Electric Power Steering)	●	●	●	●
Ion	SAS (Steering Wheel Angle Sensor)	●	●	●	●
Ion	GW (Gateway Wiring Housing)	●	●	●	●
Ion	ITU (Independent Telematic Unit BTA)	●	●	●	●
Ion	VOL (Direct Voltage Transformer)	●	●	●	●
Ion	Radio	●	●	●	●
Partner	ECM (Engine Control Module)	●	●	●	●
Partner	TCM (Auto Gearbox)	●	●	●	●
Partner	ABS (Active Safety)	●	●	●	●

Partner	SRS (Airbag)	●	●	●	●
Partner	IPC (Instrument Panel Module)	●	●	●	●
Partner	AC (Air Conditioning)	●	●	●	●
Partner	PCAHR (Passenger Compartment Air Heating Resistor)	●	●	●	●
Partner	BATT (Battery Charge Status Unit)	●	●	●	●
Partner	BATT (Onboard Charger Of The Traction Battery)	●	●	●	●
Partner	BATT-01 (Traction Battery Cells Management 01)	●	●	●	●
Partner	BATT-02 (Traction Battery Cells Management 02)	●	●	●	●
Partner	BATT-03 (Traction Battery Cells Management 03)	●	●	●	●
Partner	BATT-04 (Traction Battery Cells Management 04)	●	●	●	●
Partner	BATT-05 (Traction Battery Cells Management 05)	●	●	●	●
Partner	BATT-07 (Traction Battery Cells Management 07)	●	●	●	●
Partner	BATT-08 (Traction Battery Cells Management 08)	●	●	●	●
Partner	BATT-09 (Traction Battery Cells Management 09)	●	●	●	●
Partner	BATT-10 (Traction Battery Cells Management 10)	●	●	●	●
Partner	ERU (Engine Relay Unit)	●	●	●	●
Partner	TRU (Trailer Relay Unit)	●	●	●	●
Partner	EMM (Electric Machine Management)	●	●	●	●
Partner	AH (Additional Heating)	●	●	●	●
Partner	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
Partner	EPS (Electric Power Steering)	●	●	●	●
Partner	SWSM (Steering Wheel Switching Module)	●	●	●	●
Partner	SM (Service Module)	●	●	●	●
Partner	BSI (Built-in System Interface)	●	●	●	●
Partner	HFCU (Hands Free Control Unit)	●	●	●	●
Partner	ASM (Anti-slip Mode Selector)	●	●	●	●
Partner	PAM (Parking Assistance Module)	●	●	●	●
Partner	BWCU (Bodywork Conversion Unit)	●	●	●	●
Partner	UID (Under Inflation Detection)	●	●	●	●
Partner	RBS (Rain/Brightness Sensor)	●	●	●	●
Partner	Display/Telematics	●	●	●	●
Partner	HFR (High Frequency Receiver)	●	●	●	●
Partner	Alarm	●	●	●	●
Partner	MULD (Multifunction Display)	●	●	●	●
Partner	Radio	●	●	●	●
Partner	CD (CD Player)	●	●	●	●
Rcz	ECM (Engine Control Module)	●	●	●	●
Rcz	TCM (Auto Gearbox)	●	●	●	●
Rcz	ABS (Active Safety)	●	●	●	●
Rcz	SRS (Airbag)	●	●	●	●
Rcz	IPC (Instrument Panel Module)	●	●	●	●
Rcz	AC (Air Conditioning)	●	●	●	●
Rcz	BATT (Battery Charge Status Unit)	●	●	●	●
Rcz	DHL (Directional Headlamps)	●	●	●	●
Rcz	ERU (Engine Relay Unit)	●	●	●	●
Rcz	TRU (Trailer Relay Unit)	●	●	●	●
Rcz	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●
Rcz	EPS (Electric Power Steering)	●	●	●	●
Rcz	SWSM (Steering Wheel Switching Module)	●	●	●	●
Rcz	SM (Service Module)	●	●	●	●
Rcz	BSI (Built-in System Interface)	●	●	●	●
Rcz	HFCU (Hands Free Control Unit)	●	●	●	●
Rcz	LDWS (Lane Departure Warning System)	●	●	●	●
Rcz	MPD (Moving Panel Deflector)	●	●	●	●
Rcz	PAM (Parking Assistance Module)	●	●	●	●
Rcz	DSM (Driver School Module)	●	●	●	●
Rcz	DDM (Driver Door Module)	●	●	●	●
Rcz	DSMU (Driver Seat Memory Unit)	●	●	●	●

Rcz	PSMU (Passenger Seat Memory Unit)	●	●	●	●
Rcz	N-TNB (Not Fastened Warning Light TNB)	●	●	●	●
Rcz	UID (Under Inflation Detection)	●	●	●	●
Rcz	RBS (Rain/Brightness Sensor)	●	●	●	●
Rcz	Display/Telematics	●	●	●	●
Rcz	HFR (High Frequency Receiver)	●	●	●	●
Rcz	Alarm	●	●	●	●
Rcz	MULD (Multifunction Display)	●	●	●	●
Rcz	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●
Rcz	Wiper (Windscreen Wiper)	●	●	●	●
Rcz	FR (Folding Roof)	●	●	●	●
Rcz	Sunroof	●	●	●	●
Rcz	AMP (Audio Amplifier)	●	●	●	●
Rcz	Radio	●	●	●	●
Rcz	CD (CD Player)	●	●	●	●
Traveller	ECM (Engine Control Module)	●	●	●	●
Traveller	TCM (Auto Gearbox)	●	●	●	●
Traveller	TCM (Automatic Gearbox Electric Control)	●	●	●	●
Traveller	ABS (Active Safety)	●	●	●	●
Traveller	SRS (Airbag)	●	●	●	●
Traveller	IPC (Instrument Panel Module)	●	●	●	●
Traveller	AC (Air Conditioning)	●	●	●	●
Traveller	BATT (Battery Charge Status Unit)	●	●	●	●
Traveller	ERU (Engine Relay Unit)	●	●	●	●
Traveller	TRU (Trailer Relay Unit)	●	●	●	●
Traveller	AH (Additional Heating)	●	●	●	●
Traveller	ESL (Electric Steering Lock)	●	●	●	●
Traveller	SWSM (Steering Wheel Switching Module)	●	●	●	●
Traveller	SWC (Controls On The Steering Wheel)	●	●	●	●
Traveller	ASM (Anti-slip Mode Selector)	●	●	●	●
Traveller	PAM (Parking Assistance Module)	●	●	●	●
Traveller	SPAMU (Supply Protection And Management Unit)	●	●	●	●
Traveller	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●
Traveller	VDA (Vehicle Distance Assistance)	●	●	●	●
Traveller	RBS (Rain/Brightness Sensor)	●	●	●	●
Traveller	VOL (Voltage Retaining Device)	●	●	●	●
Traveller	Alarm	●	●	●	●
Traveller	Siren	●	●	●	●
Traveller	MULD (Multifunction Display)	●	●	●	●
Traveller	MCP (Multiplexed Control Panel)	●	●	●	●
Traveller	HHV (High Head Vision)	●	●	●	●
Traveller	Radio/Telephone	●	●	●	●

PEUGEOT_V01.25 BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	System Type	BLD
1007 (CAN)	ABSMK70_1	●
1007 (CAN)	ESPMK60_0	●
206 (+)	ABSMK70_1	●
206 (+)	ESPMK60_0	●
207 (CAN)	ABSMK70_1	●
207 (CAN)	ESPMK60_0	●
207 (VAN)	ABSMK70_1	●
207 (VAN)	ESPMK60_0	●
207 (i)	ABSMK70_1	●
207 (i)	ESPMK60_0	●
207_ADD	ABSMK70_1	●
207_ADD	ESPMK60_0	●
2008	ABSMK100	●
2008	ESPMK100	●
208	ABSMK100	●
208	ESPMK100	●
3008	ESP8.1	●
3008 (Hybrid 4)	ESP8.1	●
3008 (CHINA)	ESP8.1	●
301	ABSMK100	●
301	ESPMK100	●
307 (CAN)	ABS81	●
307 (CAN)	ABS8_BOSCH	●
307 (CAN)	ESP8_BOSCH	●
307 (CAN)	ESP8.1	●
308	ABS81	●
308	ESP8.1	●
308 (4 Portes)	ABS81	●
308 (4 Portes)	ESP8.1	●
407	ESP8.1	●
407	ESP_EBC_44	●
408	ABS81	●
408	ESP8.1	●
5008	ESP8.1	●
508	ABS81	●
508	ESP8.1	●
508 (Hybrid 4)	ABS81	●
508 (Hybrid 4)	ESP8.1	●
508 (RHX)	ABS81	●
508 (RHX)	ESP8.1	●
807 (CAN)	ESP8_BOSCH	●
807 CAN	ESP8_BOSCH	●
807 CAN	ESP8.1	●
EXPERT 2	ABS81	●
EXPERT 2	ABS8_BOSCH	●
EXPERT 2	ESP8.1	●

EXPERT 3	ABS81	●
EXPERT 3	ABS8_BOSCH	●
EXPERT 3	ESP8. 1	●
EXPERT 3	ESP8_BOSCH	●
HOGGAR	ABSMK70_1	●
HOGGAR	ESPMK60_0	●
PARTNER (B9)	ABS81	●
PARTNER (B9)	ESP8. 1	●
RCZ	ABS81	●
RCZ	ESP8. 1	●

PEUGEOT_V01.25 BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	BMS
207	●
208	●
308	●
308 (T9)	●
308 (S)	●
407	●
408 (T73)	●
408 (T93)	●
508	●
2008	●
3008	●
5008	●
RCZ	●
EXPERT	●
PARTNER	●

PEUGEOT_V01.25 DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Chassis	DPF
207 CAN	EDC16C3	●
207 CAN	HDI_SID807	●
207 CAN	EDC17C10	●
207 CAN	HDI_SID807_BR2	●
207 CAN	EDC17C10_BR2	●
207+	EDC16C3	●
207+	HDI_SID807	●
207+	EDC17C10	●
207+	HDI_SID807_BR2	●
207+	EDC17C10_BR2	●
208	EDC17C10_BR2	●
208	HDI_SID807_BR2	●
301	EDC17C10_BR2	●
306 R	EDC15C2	●
307 CAN	DCM34	●
307 CAN	EDC16C3	●
307 CAN	HDI_SID803	●
307 CAN	HDI_SID803A	●
307 VAN	EDC16C3	●
307 VAN	HDI_SID803	●
308 (T9)	HDI_SID807_BR2	●
308 (T9)	EDC17C10_BR2	●
308	DCM34	●
308	DCM35	●
308	DCM35_BR2	●
308	EDC16C3	●
308	HDI_SID807	●
308	EDC17C10_BR2	●
308	EDC17C10	●
308	HDI_SID807_BR2	●
308 (4 portes)	DCM34	●
308 (4 portes)	DCM35	●
308 (4 portes)	DCM35_BR2	●
308 (4 portes)	EDC16C3	●
308 (4 portes)	HDI_SID807	●
308 (4 portes)	EDC17C10_BR2	●
308 (4 portes)	EDC17C10	●
308 (4 portes)	HDI_SID807_BR2	●
406 R	EDC15C2	●
406 R Coupe	EDC15C2	●
407	HDI_SID803	●
407	EDC16C3	●
407	HDI_SID803A	●
407	DCM34	●
407	DCM35	●
407	DCM35_BR2	●

407	EDC16CP39	●
407	EDC17CP11	●
407	HDI_SID201	●
408	DCM34	●
408	DCM35	●
408	EDC16C3	●
408	HDI_SID807	●
408	EDC17C10	●
408	EDC17C10_BR2	●
408	HDI_SID807_BR2	●
408	DCM35_BR2	●
508	DCM62	●
508	DCM34_P	●
508	DCM35_BR2	●
508	HDI_SID807_BR2	●
508	EDC17CP42	●
508 HYbrid4	DCM35_HY	●
508 RHX HYbrid4	DCM35_HY	●
607 R	HDI_SID201	●
607 R	EDC16CP39	●
607 R	HDI_SID803A	●
807 CAN	EDC15C2	●
807 CAN	HDI_SID803A	●
807 CAN	EDC16CP39	●
807 CAN	DCM35	●
807 CAN	DCM35_BR2	●
1007 CAN	EDC16C3	●
2008	EDC17C10_BR2	●
2008	HDI_SID807_BR2	●
3008	DCM62	●
3008	EDC16C3	●
3008	DCM35	●
3008	DCM35_BR2	●
3008	HDI_SID807	●
3008	HDI_SID807_BR2	●
3008	DCM35_HY	●
3008 China	EDC16C3	●
3008 China	DCM35	●
3008 China	HDI_SID807	●
3008 China	HDI_SID807_BR2	●
3008 China	DCM35_BR2	●
3008 China	DCM35_HY	●
3008 HYbrid4	DCM35_HY	●
3008 HYbrid4	HDI_SID807_BR2	●
4007	EDC16CP39	●
4007	EDC16CP39_E5	●
4008	HDI_SID807_J3J4	●
5008	DCM62	●
5008	EDC16C3	●
5008	DCM35	●
5008	DCM35_BR2	●
5008	HDI_SID807	●
5008	HDI_SID807_BR2	●
5008	DCM35_HY	●

RCZ	DCM34	●
RCZ	DCM35	●
RCZ	DCM35_BR2	●
RCZ	EDC16C3	●
RCZ	HDI_SID807	●
RCZ	EDC17C10	●
RCZ	HDI_SID807_BR2	●
RCZ	EDC17C10_BR2	●
BOXER 3	EDC17CP52	●
BOXER 3 MiniBus	EDC17CP52	●
EXPERT 3	EDC16C3	●
EXPERT 3	EDC17C10_BR2	●
EXPERT 3	HDI_SID803A	●
EXPERT 3	DCM35	●
EXPERT 3	DCM35_BR2	●
EXPERT 2	HDI_SID803A	●
EXPERT 2	DCM35	●
EXPERT 2	DCM35_BR2	●
PARTNER B9	EDC16C3	●
PARTNER B9	EDC17C10_BR2	●
PARTNER B9	HDI_SID807	●
PARTNER B9	HDI_SID807_BR2	●

PEUGEOT_V01.25 EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	EPB
508	●
3008	●
5008	●

PEUGEOT_V01.25 ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	ETC
106	●
107	●
206	●
207	●
208	●
301	●
306	●
307	●
308	●
405	●
406	●
407	●
408	●
508	●
607	●
806	●
807	●
1007	●
2008	●
3008	●
5008	●
HOGGAR	●
RCZ	●
BOXER	●
EXPERT	●
PARTNER	●

PEUGEOT_V01.25 INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Chassis	INJ
1007 (CAN)	EDC16C3	●
1007 (VAN)	EDC16C3	●
2008	EDC17C10_BR2	●
2008	HDI_SID807_BR2	●
206	EDC16C3	●
206 (MUX)	EDC16C3	●
207 (+)	EDC16C3_DV4	●
207 (+)	HDI_SID807_BR2	●
207 (CAN)	EDC16C3	●
207 (CAN)	EDC16C3_DV4	●
207 (CAN)	EDC17C10	●
207 (CAN)	EDC17C10_BR2	●
207 (CAN)	HDI_SID807	●
207 (CAN)	HDI_SID807_BR2	●
208	EDC17C10_BR2	●
208	HDI_SID807_BR2	●
3008	DCM35	●
3008	DCM35_BR2	●
3008	DCM35_HY	●
3008	EDC16C3	●
3008	HDI_SID807	●
3008	HDI_SID807_BR2	●
3008 (CHINA)	DCM35_BR2	●
3008 (CHINA)	DCM35_HY	●
3008 (CHINA)	HDI_SID807_BR2	●
3008 (Hybrid 4)	DCM35_HY	●
3008 (Hybrid 4)	HDI_SID807_BR2	●
301	EDC17C10_BR2	●
307 (CAN)	DCM34	●
307 (CAN)	EDC16C3	●
307 (VAN)	EDC16C3	●
308	DCM34	●
308	DCM35	●
308	DCM35_BR2	●
308	EDC16C3	●
308	EDC17C10	●
308	EDC17C10_BR2	●
308	HDI_SID807	●
308	HDI_SID807_BR2	●
4007	EDC16CP39	●
407	DCM34	●
407	EDC16C3	●
407 (CAN)	DCM35	●
407 (CAN)	DCM35_BR2	●
407 (CAN)	EDC16CP39	●
407 (CAN)	EDC17CP11	●

408	DCM34	●
408	DCM35	●
408	DCM35_BR2	●
408	EDC17C10_BR2	●
408	HDI_SID807	●
408	HDI_SID807_BR2	●
5008	DCM35	●
5008	DCM35_BR2	●
5008	DCM35_HY	●
5008	EDC16C3	●
5008	HDI_SID807	●
5008	HDI_SID807_BR2	●
508	DCM34_P	●
508	DCM35_BR2	●
508	DCM35_HY	●
508	EDC17CP42	●
508	HDI_SID807_BR2	●
508 (Hybrid 4)	DCM34_P	●
508 (Hybrid 4)	DCM35_HY	●
508 (RHX)	DCM34_P	●
508 (RHX)	DCM35_HY	●
607 (CAN)	EDC16CP39	●
807 (CAN)	DCM35	●
807 (CAN)	DCM35_BR2	●
807 (CAN)	EDC16CP39	●
EXPERT 2	DCM35	●
EXPERT 2	DCM35_BR2	●
EXPERT 2	EDC16C3	●
EXPERT 3	DCM35_BR2	●
EXPERT 3	EDC17C10_BR2	●
PARTNER	EDC16C3	●
PARTNER B9	EDC16C3	●
PARTNER B9	EDC17C10_BR2	●
PARTNER B9	HDI_SID807	●
PARTNER B9	HDI_SID807_BR2	●
RCZ	DCM34	●
RCZ	DCM35	●
RCZ	DCM35_BR2	●
RCZ	EDC17C10_BR2	●
RCZ	HDI_SID807	●
RCZ	HDI_SID807_BR2	●

PEUGEOT_V01.25 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	OIL
106	●
107	●
206	●
207	●
208	●
301	●
306	●
307	●
308	●
406	●
407	●
408	●
508	●
607	●
806	●
807	●
1007	●
2008	●
3008	●
4007	●
4008	●
5008	●
iON	●
HOGGAR	●
RCZ	●
BIPPER	●
BOXER	●
EXPERT	●
PARTNER	●

PEUGEOT_V01.25 SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	SAS
107	●
206	●
207	●
208	●
301	●
307	●
308	●
407	●
408	●
508	●
607	●
807	●
1007	●
2008	●
3008	●
4007	●
4008	●
5008	●
iON	●
HOGGAR	●
RCZ	●
BIPPER	●
BOXER	●
EXPERT	●
PARTNER	●