INFINITI_V01.15 Diag Function Li	.st (Note:For	reference on	ly)		
NOTES:			-		
<ul> <li>This function is supported.</li> </ul>					
* This function may be supported, which depends on the	ne actual con	dition of the	vehicle.		
O This function is not supported.					
$\blacktriangle$ This function is the new feature in this version.					
Vehicle	Model Year				
EX25	ALL				
EX35	ALL				
EX37	ALL				
FX30d	ALL				
FX45	ALL				
FX50	ALL				
G20	ALL				
G35	ALL				
G37	ALL				
I30	ALL				
135	ALL				
M25/M37	ALL				
M35/M45	ALL				
M37/M56	ALL				
M37/M56/M30d	ALL				
M45	ALL				
Q45	ALL				
QX4	ALL				
QX56	ALL				
Systemlist	EcuInfo.	ReadCodes	EraseCodes	LiveData	
Engine	-	-			
Transmission	•	•	•	-	
ABS	•	•	•	•	
	•	•	•	•	
Air Bag	•	•	•	•	
Meter/M&A	•	•	•	•	
SUB Meter	•	•	•	•	
EPS/DAST 3	•	•	•	•	
Air Pressure Monitor	•	•	•	•	
HVAC	•	•	•	•	
BCM	•	•	•	•	
Motor Control	●	•	•	•	
ICC/ADAS					
	•	•	•	•	
All Mode AWD/4WD	•	•	•	•	
All Mode AWD/4WD E-4WD	• • •	-	-		
All Mode AWD/4WD E-4WD 4WAS(MAIN)/RAS/HICAS	-	•	•	•	
All Mode AWD/4WD E-4WD 4WAS(MAIN)/RAS/HICAS 4WAS(Front)	•	•	•	•	
All Mode AWD/4WD E-4WD 4WAS (MAIN)/RAS/HICAS 4WAS (Front) Difference Lock	•	•	• • • • • • • • • • • • • • • • • • • •	•	
All Mode AWD/4WD E-4WD 4WAS(MAIN)/RAS/HICAS 4WAS(Front) Difference Lock CAN Gateway	•	•	•	•	
All Mode AWD/4WD E-4WD 4WAS (MAIN)/RAS/HICAS 4WAS (Front) Difference Lock	•	• • • •	• • • •	• • • • •	
All Mode AWD/4WD E-4WD 4WAS(MAIN)/RAS/HICAS 4WAS(Front) Difference Lock CAN Gateway	•	• • • •	• • • • •	• • • • •	
All Mode AWD/4WD E-4WD 4WAS(MAIN)/RAS/HICAS 4WAS(Front) Difference Lock CAN Gateway Accele Pedal ACT	• • • • •		• • • • •	• • • • • •	
All Mode AWD/4WD E-4WD 4WAS (MAIN)/RAS/HICAS 4WAS (Front) Difference Lock CAN Gateway Accele Pedal ACT Brake			• • • • • • • • •		
All Mode AWD/4WD E-4WD 4WAS(MAIN)/RAS/HICAS 4WAS(Front) Difference Lock CAN Gateway Accele Pedal ACT Brake Chassis Control	• • • • • •			•           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •           •	

Intelligent Key	•	•	•	
Smart Entrance	•	•	•	•
Auto Slide Door	•	•	•	•
Auto Slide Door Right	•	•	•	•
Auto Back Door	•	•	•	•
Precrash Seatbelt	•	•	•	•
Convertible Roof	•	•	•	•
EV/HEV	•	•	•	•
HV Battery	•	•	•	•
Charger/PD Module	•	•	•	•
PTC Heater	•	•	•	•
Laser/Radar	•	•	•	•
Side Radar Left	•	•	•	•
Side Radar Right	•	•	•	•
Lane Camera	•	•	•	•
Rearview Camera	•	•	•	•
S/Blind Camera	•	•	•	•
Multi Display	•	•	•	•
Multi AV	•	•	•	•
Sonar	•	•	•	•
BSW/Buzzer	•	•	•	•
EHS/PKB	•	•	•	•
IPDM E/R	•	•	•	•
BAC	•	•	•	•
DIU	•	•	•	•
Shift	•	•	•	•
E-SUS	•	•	•	•
ANC	•	•	•	•
Telematics	•	•	•	•
HAS	•	•	•	•
AVM	•	•	•	•
DAST 1	•	•	•	•
DAST 2	•	•	•	•
Cluster	•	•	•	•
PMAS	•	•	•	•
Radio	•	•	•	•
VSP	•	•	•	•
Nats Immu	•	•	•	•
Air Levelizer	•	•	•	•
Motor Assist	•	•	•	•
	-	-	-	-

## INFINITI\_V01.15 OIL Function List (Note:For reference only)

NOTES	
NULES	•

This function is supported.
X This function may be supported, which depends on the actual condition of the vehicle.
O This function is not supported.

▲ This function is the new feature in this version. Vehicle EX35 ۲ FX35 lacksquareFX45 • FX50 G25 • G35 • G37 • M35 • M37 • M45 M56Q45 QX56 •