

TOYOTA_V11.10 Diag Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| System | EcuInfo | Read Codes | Erase Codes | Live Data |
|--------------------------------------|---------|------------|-------------|-----------|
| ENGINE AND ECT | ○ | ● | ● | ● |
| ENGINE | ○ | ● | ● | ● |
| ECT | ○ | ● | ● | ● |
| Cruise Control | ○ | ● | ● | ● |
| Engine(LH Bank) | ○ | ● | ● | ● |
| Engine(RH Bank) | ○ | ● | ● | ● |
| HV Battery | ○ | ● | ● | ● |
| Hybrid Control | ○ | ● | ● | ● |
| Sequential M/T | ○ | ● | ● | ● |
| Stop And Go | ○ | ● | ● | ● |
| Multi-Mode M/T | ○ | ● | ● | ● |
| Radar Cruise | ○ | ● | ● | ● |
| Radar Cruise2 | ○ | ● | ● | ● |
| Laser Cruise | ○ | ● | ● | ● |
| E-ACM | ○ | ● | ● | ● |
| Motor Generator | ○ | ● | ● | ● |
| FCDC | ○ | ● | ● | ● |
| FC External Power Supply | ○ | ● | ● | ● |
| FC | ○ | ● | ● | ※ |
| FCHV | ○ | ※ | ※ | ※ |
| Idle HV | ○ | ● | ● | ● |
| Engine2 | ○ | ● | ● | ● |
| Transmission | ○ | ● | ● | ● |
| ASG | ○ | ● | ● | ※ |
| AMT | ○ | ● | ● | ● |
| A/T | ○ | ● | ● | ● |
| Rear Motor Generator | ○ | ● | ● | ● |
| EFI | ○ | ● | ● | ● |
| Cruise control (SIL diesel engine) | ○ | ● | ● | ● |
| ABS/VSC/TRC | ○ | ● | ● | ● |
| AHC | ○ | ● | ● | ● |
| AIR SUSPENSION | ○ | ● | ● | ● |
| FREE TRONIC | ○ | ● | ● | ● |
| EHPS | ○ | ● | ● | ● |
| EMPS | ○ | ● | ● | ● |
| EMS | ○ | ● | ● | ● |
| Air suspension/AHC/EMS | ○ | ● | ● | ● |
| KDSS | ○ | ● | ● | ● |
| ABS/VSC/TRAC/EPB | ○ | ● | ● | ● |
| 4WD | ○ | ● | ● | ● |
| Lane Departure Alert | ○ | ● | ● | ● |
| Tire Pressure Monitor | ○ | ● | ● | ● |
| ABS/DSC/TCS | ○ | ● | ● | ● |
| Electronic-Controlled Power Steering | ○ | ● | ● | ● |
| VGRS | ○ | ● | ● | ● |

| | | | | |
|----------------------------|---|---|---|---|
| Stabilizer | ○ | ● | ● | ● |
| Intelligent Parking Assist | ○ | ● | ● | ● |
| Electric Parking Brake | ○ | ● | ● | ● |
| Lane Keeping Aisst | ○ | ● | ● | ● |
| Front Stabilizer | ○ | ● | ● | ● |
| Rear Stabilizer | ○ | ● | ● | ● |
| ARS | ○ | ● | ● | ● |
| PPS | ○ | ● | ● | ● |
| Front Recognition Camera | ○ | ● | ● | ● |
| LKA/LDA | ○ | ● | ● | ● |
| LKA/LDA (Sub) | ○ | ● | ● | ● |
| PCS/LDA/RSA/LVN | ○ | ● | ● | ● |
| Parking Assist Camera | ○ | ● | ● | ● |
| EPS | ○ | ● | ● | ● |
| Four Wheel Drive | ○ | ● | ● | ● |
| AFS | ○ | ● | ● | ● |
| AIR CONDITIONER | ○ | ● | ● | ● |
| BACK DOOR | ○ | ● | ● | ● |
| BODY | ○ | ● | ● | ● |
| BODY2 | ○ | ● | ● | ● |
| BODY NO3 | ○ | ● | ● | ● |
| BODY NO4 | ○ | ● | ● | ● |
| BODY NO5 | ○ | ● | ● | ● |
| CLEARANCE SONAR | ○ | ● | ● | ● |
| COMBI SW | ○ | ※ | ※ | ※ |
| D-DOOR | ○ | ● | ● | ● |
| D-SEAT | ○ | ● | ● | ● |
| GATEWAY | ○ | ● | ● | ● |
| MIRROR | ○ | ※ | ※ | ● |
| MIRROR-L | ○ | ※ | ※ | ● |
| MIRROR-R | ○ | ※ | ※ | ● |
| OCCUPANT DETECT | ○ | ● | ● | ● |
| P-DOOR | ○ | ● | ● | ● |
| P-SEAT | ○ | ● | ● | ● |
| PWR SOURCE CTRL | ○ | ● | ● | ● |
| RAIN SENSOR | ○ | ● | ● | ● |
| REAR-SEAT SW | ○ | ※ | ※ | ● |
| RL-DOOR MOTOR | ○ | ● | ● | ● |
| RL-SEAT | ○ | ※ | ※ | ● |
| RR-DOOR MOTOR | ○ | ● | ● | ● |
| RR-SEAT | ○ | ※ | ※ | ● |
| SLIDE ROOF | ○ | ● | ● | ● |
| SRS AIRBAG | ○ | ● | ● | ● |
| STEERING PAD SWITCH | ○ | ※ | ※ | ● |
| TILT&TELESCO | ○ | ● | ● | ● |
| WIPER | ○ | ※ | ※ | ● |
| Main Body | ○ | ● | ● | ● |
| Tvss | ○ | ● | ● | ● |
| Entry&Start | ○ | ● | ● | ● |
| Master Switch | ○ | ● | ● | ● |
| HV Gateway | ○ | ● | ● | ● |
| Night View | ○ | ● | ● | ● |
| HL AutoLeveling | ○ | ● | ● | ● |
| Gateway BEAN | ○ | ● | ● | ※ |

| | | | | |
|--------------------------|---|---|---|---|
| Accessory Gateway | ○ | ● | ● | ● |
| Front Left Seat A/C | ○ | ● | ● | ● |
| Front Right Seat A/C | ○ | ● | ● | ● |
| Gateway CAN | ○ | ● | ● | ※ |
| ECM Gateway | ○ | ● | ● | ● |
| ECB Gateway | ○ | ● | ● | ● |
| WIL Gateway | ○ | ● | ● | ● |
| Center Console Switch | ○ | ※ | ● | ● |
| Rear Console Switch | ○ | ● | ● | ● |
| Rear Left Seat A/C | ○ | ● | ※ | ● |
| Rear Right Seat A/C | ○ | ● | ※ | ● |
| Electric Power Control | ○ | ● | ● | ● |
| Active Headrest R | ○ | ● | ● | ● |
| Active Headrest L | ○ | ● | ● | ● |
| Combination Meter | ○ | ● | ● | ● |
| Theft Deterrent | ○ | ● | ● | ● |
| Pre-Crash | ○ | ● | ● | ● |
| Pre-Crash 2 | ○ | ● | ● | ● |
| PM1 Gateway | ○ | ● | ● | ● |
| PM2 Gateway | ○ | ● | ● | ● |
| Charging Control | ○ | ● | ● | ● |
| Night | ○ | ● | ● | ● |
| Smart Access | ○ | ● | ● | ● |
| IMB | ○ | ● | ● | ● |
| Meter | ○ | ● | ● | ● |
| AHS | ○ | ● | ● | ● |
| ITS Connect | ○ | ● | ● | ● |
| Combi SW | ○ | ※ | ※ | ※ |
| Restraint Control Module | ○ | ● | ● | ● |
| SCBS | ○ | ● | ● | ● |
| Navigation Receiver | ○ | ● | ● | ※ |
| Remote Security | ○ | ● | ● | ● |
| CAN bus Gateway | ○ | ● | ● | ● |
| Remote Generator Start | ○ | ※ | ※ | ● |
| Powertrain Gateway2 | ○ | ● | ● | ● |
| Pedal | ○ | ※ | ● | ● |
| Radar Cruise | ○ | ● | ● | ● |
| Front Left Door | ○ | ● | ● | ● |
| Front Right Door | ○ | ● | ● | ● |
| Telematic | ○ | ● | ● | ● |
| P Master Switch | ○ | ● | ● | ● |
| Blind Spot Monitor R | ○ | ● | ● | ● |
| Blind Spot Monitor L | ○ | ● | ● | ● |
| Active Rear Wing | ○ | ● | ● | ● |
| Transmission Control | ○ | ● | ● | ● |
| Multi Bus Gateway | ○ | ● | ● | ● |
| Multi Bus Monitor No.1 | ○ | ● | ● | ● |
| Multi Bus Monitor No.2 | ○ | ● | ● | ● |
| Gateway V | ○ | ● | ● | ● |
| IMMOBILISER | ○ | ● | ● | ● |
| Central Gateway | ○ | ● | ● | ● |
| Head Up Display | ○ | ● | ● | ● |
| IPA/ICS/Clearance Sonar | ○ | ● | ● | ● |
| PSD_RH | ○ | ● | ● | ● |

| | | | | |
|-----------------------|---|---|---|---|
| PSD LH | ○ | ● | ● | ● |
| Power Source Control | ○ | ● | ● | ※ |
| A/B | ○ | ● | ● | ※ |
| Theft Deterrent (CAN) | ○ | ● | ● | ● |
| Smart Key | ○ | ● | ● | ● |
| Intuitive P/A | ○ | ● | ● | ● |
| Sliding Sunshade | ○ | ● | ● | ● |
| Sliding Roof | ○ | ● | ● | ● |
| Driver Seat | ○ | ● | ● | ● |
| ASC | ○ | ● | ● | ● |
| steering lock | ○ | ● | ● | ● |

TOYOTA_V11.10 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | Year | OIL |
|--------------------------------|-------------|-----|
| 4 RUNNER | 2003 - 2010 | ● |
| AVALON | 2004 - 2010 | ● |
| CAMRY | 2004 - 2010 | ● |
| CAMRY HYBRID | 2006 - 2009 | ● |
| COASTER | | ● |
| COROLLA | 2005 - 2010 | ● |
| FJ CRUISER | 2006 - 2010 | ● |
| HIGHLANDER | 2004 - 2014 | ● |
| LAND CRUISER | 2003 - 2010 | ● |
| LAND CRUISER 200 | 2008 - 2014 | ● |
| LAND CRUISER(LC200) | 2007 - 2011 | ● |
| MATRIX | 2004 - 2010 | ● |
| PREVIA | 1991 - 1997 | ● |
| PRIUS | 2001 - 2010 | ● |
| PRIUS (second generation XW20) | 2003 - 2008 | ● |
| PRIUS (third generation XW30) | 2009 - 2013 | ● |
| RAV4 | 2004 - 2010 | ● |
| RAV4 (third generation XA30) | 2009 - 2013 | ● |
| SEQUOIA | 2001 - 2010 | ● |
| SIENNA | 1998 - 2010 | ● |
| SOLARA | 2004 - 2008 | ● |
| SOLARA (second generation) | 2004 - 2008 | ● |
| TACOMA | 2008 - 2010 | ● |
| TOCAMA 2 | 2004 - 2014 | ● |
| TUNDRA | 2003 - 2010 | ● |
| TUNDRA 2 | 2005 - 2014 | ● |
| VENZA | 2008 - 2013 | ● |
| YARIS | 2006 - 2013 | ● |
| Other | | ※ |