

# FUNCTION LIST

CR Genius

Toyota

**iCarsoft Europe**

TOYOTA/LEXUS/SCION Diagnostic Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	86	AGYA	ALLION/PREMIO
ALPHARD	ALPHARD HV	ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE
ALTEZZA/ALTEZZA GITA	AQUA	ARISTO	AURIS
AURIS HV	AVANZA	AVENSIS	AVENSIS VERSO/PICNIC
AYGO	Avalon	Avalon HV	BB
BELTA	BLADE	C-HR	C-HR HV
CALDINA	CALYA	CAMRY	CAMRY HV
CAMRY/AURION	CARINA	CELSIOR	CENTURY
COASTER	COMFORT	COROLLA	COROLLA AXIO
COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA HV	COROLLA HV/AURIS HV
COROLLA RUMION	COROLLA RUNX/ALEX	COROLLA SPACIO	COROLLA VERSO
COROLLA/AURIS	CORONA	CROWN	CROWN COMFORT
CROWN ESTATE	CROWN HV	CROWN MAJESTA	CROWN Mild Hybrid
CROWN PATROL CAR	CROWN SEDAN/COMFORT	CT200h	Celica
Celica/CURREN	Corolla iM	DYNA	E'z
ES200	ES240	ES250	ES300
ES300h	ES330	ES350	ESTIMA
ESTIMA HV	ETIOS	Echo	FCHV-adv
FJ CRUISER	FORTUNER/HILUX SW4	FR-S	FT-86
Fun Cargo	GAIA	GS F	GS200t
GS250	GS300	GS300h	GS350
GS400	GS430	GS450h	GS460
GX400	GX460	GX470	Granvia/GRAND HIACE
HARRIER	HARRIER HV	HIACE	HIACE/REGIUSACE/HIMEDIC
HIGHLANDER HV	HIGHLANDER/KLUGER	HILUX SURF	HONGQI
HS250h	Highlander	Hilux	INNOVA/KIJANG INNOVA
IPSUM	IS F	IS200	IS200D
IS200t	IS220D	IS250	IS250C
IS300	IS300C	IS300h	IS350
IS350C	ISIS	Japan SDF Vehicle	KLUGER
KLUGER HV	LAND CR PRADO	LAND CR.	LAND CRUISER
LAND CRUISER PRADO	LC500	LC500h	LEVIN
LEVIN HV	LFA	LITEACE	LS350
LS400	LS430	LS460	LS500
LS500h	LS600h	LX450	LX450d
LX460	LX470	LX570	MARK X
MARK X Zio	MARK2 QUALIS/CAMRY GRACIA	MARK2/MARK2 BLIT	MIRAI
MR-S	MR2	MR2 Spyder	Matrix
NADIA	NOAH	NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV
NOAH/VOXY	NOAH/VOXY/ESQUIRE	NX200	NX200t
NX300	NX300h	Opa	PASSO
PASSO SETTE	PIXIS EPOCH	PIXIS JOY	PIXIS MEGA
PIXIS SPACE	PIXIS Truck/Van	PLATZ	PORTE/SPADE
PREVIA HV	PREVIA/TARAGO	PRIUS	PRIUS +/PRIUS V
PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS C	PRIUS PHV	PRIUS Plug-in
PRIUS alpha	PRIUS α	PROBOX/SUCCEED	PROGRES/BREVIS
Paseo	Previa	Prius Prime	Prius V
Pronard	QUICKDELIVERY	RACTIS	RAUM
RAV4	RC-F	RC200t	RC300
RC300h	RC350	REGIUS/TOURING HIACE	REIZ
RUKUS	RUSH	RX200t	RX270

RX300	RX330	RX350	RX400H
RX450h	Rav4 EV	Rav4 HV	SAI
SC300	SC400	SC430	SDF Vehicle
SEQUOIA	SIENTA	SIENTA HV	SOARER
SPADE	SUPRA	SURF	Sienna
Solara	T100	TANK	TANK/ROOMY
TOWNACE	TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100	TOYOACE/DYNA 200
TUNDRA	Tacoma	Tercel	URBAN CRUISER
VANGUARD	VELLFIRE	VERSO	VIOS
VITZ	VITZ HV	VOLTZ	Venza
Verossa	Verso-s	Verso-s/Ractis	Vista/Vista Ardeo
WIGO	WINDOM	WISH	Will Cypha
Will VS	Will Vi	YARIS HV	YARIS VERSO/ECHO VERSO
YARIS/ECHO	Yaris	Yaris R	Yaris iA
ZELAS	ZZZ1_P3S	ZZZ2_P4S	ZZZ3_P4C
ZZZ4_P5C	eQ	iA	iM
iQ	iQ EV	ist	tC
xA	xB	xD	

### Ecu List

System Name	Read Codes	Erase Codes	LiveData	Act
4WD_CAN	●	●	●	●
A/B	●	●	●	●
A/T	●	●	●	●
ABS	●	●	●	●
ABS/DSC/TCS	●	●	●	●
ABS/VSC	●	●	●	●
ABS/VSC/ARS	●	●	●	●
ABS/VSC/TRAC	●	●	●	●
ABS/VSC/TRAC/EPB	●	●	●	●
ABS/VSC/TRC	●	●	●	●
ABS/VSC/TRC (TRAC)	●	●	●	●
ABS/VSC/TRC (TRAC) (CAN)	●	●	●	●
ABS/VSC/TRC (TRAC) (SIL)	●	●	●	●
ABS/VSC/TRC (TRAC) /EPB	●	●	●	●
ABS/VSC/TRC/EPB	●	●	●	●
ABS_CAN	●	●	●	●
AFS	●	●	●	●
AFS (CAN)	●	●	●	●
AFS (Sub)	●	●	●	●
AFS (SIL)	●	●	●	●
AHC	●	●	●	●
AHS	●	●	●	●
AHS (Sub)	●	●	●	●
AMT	●	●	●	●
ARS	●	●	●	●
ASC	●	●	●	●
ASG	●	●	●	●
Accessory Gateway	●	●	●	●
Active Headrest L	●	●	●	●
Active Headrest R	●	●	●	●
Active Headrest RL	●	●	●	●
Active Headrest RR	●	●	●	●
Active Noise Control	●	●	●	●
Active Rear Wing	●	●	●	●
Adaptive Variable Suspension System	●	●	●	●
Additional Heating	●	●	●	●
Adjustable Pedal	●	●	●	●
Advanced Parking Guidance/ICS/Intuitive P/A	●	●	●	●
Advanced Parking Guidance/Parking Assist Monitor	●	●	●	●
Air Conditioner	●	●	●	●

Air Conditioner (CAN)	●	●	●	●
Air Conditioner (SIL)	●	●	●	●
Air Suspension	●	●	●	●
Anti-slip Mode Selector	●	●	●	●
Anti-theft Alarm	●	●	●	●
Audio System	●	●	●	●
Auto A/C	●	●	●	●
Automatic High Beam	●	●	●	●
BODY	●	●	●	●
Back Door	●	●	●	●
Back Door Power Window	●	●	●	●
Battery	●	●	●	●
Battery Charge Status Unit	●	●	●	●
Blind Spot Monitor Master	●	●	●	●
Blind Spot Monitor Slave	●	●	●	●
Bluetooth Communication Module	●	●	●	●
Body No.2	●	●	●	●
Body No.2 (JZS,GS17#)	●	●	●	●
Body No.2 (other JZS,GS17#)	●	●	●	●
Body No.3	●	●	●	●
Body No.3 (except for GS, JZS, UZS)	●	●	●	●
Body No.3 (for GS, JZS, UZS)	●	●	●	●
Body No.4	●	●	●	●
Body No.5	●	●	●	●
Body/Gateway	●	●	●	●
Bodywork Conversion Unit	●	●	●	●
Built-In System Interface(BSI)	●	●	●	●
CARB Mode ECU	●	●	●	●
CVT	●	●	●	●
Camera	●	●	●	●
Center Console Switch	●	●	●	●
Central Gateway	●	●	●	●
Charging Control	●	●	●	●
Circumference Monitoring Camera Control Module	●	●	●	●
Clearance Sonar	●	●	●	●
Clearance Sonar (CAN)	●	●	●	●
Clearance Sonar (SIL)	●	●	●	●
Clearance Sonar / Simple-IPA.	●	●	●	●
Clearance Sonar/Simple-IPA	●	●	●	●
Combi SW	●	●	●	●
Combination Meter	●	●	●	●
Combination Meter (CAN)	●	●	●	●
Combination Meter(SIL)	●	●	●	●
Combination Switch	●	●	●	●
Cruise Control	●	●	●	●
Cruise Control (CAN Engine)	●	●	●	●
Cruise Control (CAN Hybrid Control)	●	●	●	●
Cruise Control (SIL Diesel Engine)	●	●	●	●
Cruise Control (SIL Gasoline Engine)	●	●	●	●
Cruise Control (SIL Hybrid Control)	●	●	●	●
Cruise Control (SIL2 Engine)	●	●	●	●
Cruise Control2	●	●	●	●
D-Door Motor	●	●	●	●
D-SEAT SW	●	●	●	●
DC Quick Charging Control	●	●	●	●
DRS	●	●	●	●
Diagnostic Recorder	●	●	●	●
Driver Door	●	●	●	●
Driver Seat	●	●	●	●
Driving Support Computer	●	●	●	●
E-ACM	●	●	●	●

ECB Gateway	●	●	●	●
ECM Gateway	●	●	●	●
ECT	●	●	●	●
ECT (CAN)	●	●	●	●
ECT(SIL)	●	●	●	●
ECT(SIL2)	●	●	●	●
EFI	●	●	●	●
EHPS	●	●	●	●
EMPS	●	●	●	●
EMPS (CAN Rack)	●	●	●	●
EMPS (CAN With Brush/Brushless)	●	●	●	●
EMPS (SIL NHW11 With Brush)	●	●	●	●
EMPS (SIL Other than NHW11 With Brush)	●	●	●	●
EMPS (SIL Rack)	●	●	●	●
EMPS (SIL ZZW EHPS)	●	●	●	●
EMS	●	●	●	●
EPS	●	●	●	●
EV	●	●	●	●
EV Battery	●	●	●	●
Electric Parking Brake	●	●	●	●
Electric Power Control	●	●	●	●
Electric Propulsion Control System	●	●	●	●
Electronic-Controlled Power Steering	●	●	●	●
Engine	●	●	●	●
Engine (CAN)	●	●	●	●
Engine (LH Bank)	●	●	●	●
Engine (RH Bank)	●	●	●	●
Engine (SIL)	●	●	●	●
Engine Relay Unit(BSM)	●	●	●	●
Engine and ECT	●	●	●	●
Engine(SIL2)	●	●	●	●
Engine2	●	●	●	●
Entry&Start	●	●	●	●
Entry&Start (SIL)	●	●	●	●
Entry&Start (CAN)	●	●	●	●
FC	●	●	●	●
FC External Power Supply	●	●	●	●
FCDC	●	●	●	●
FCHV	●	●	●	●
Four Wheel Drive	●	●	●	●
Four Wheel Drive (CAN)	●	●	●	●
Four Wheel Drive (SIL)	●	●	●	●
Free-Tronic	●	●	●	●
Front Left Door	●	●	●	●
Front Left Seat A/C	●	●	●	●
Front Radar Sensor	●	●	●	●
Front Recognition Camera	●	●	●	●
Front Recognition Camera (Front Lighting Control)	●	●	●	●
Front Right Door	●	●	●	●
Front Right Seat A/C	●	●	●	●
Front Side Radar Master	●	●	●	●
Front Side Radar Slave	●	●	●	●
Front Stabilizer	●	●	●	●
Gateway	●	●	●	●
Gateway BEAN	●	●	●	●
Gateway CAN	●	●	●	●
Gateway V	●	●	●	●
Grill Shutter	●	●	●	●
HL AutoLeveling	●	●	●	●
HL AutoLeveling (Sub)	●	●	●	●
HV Battery	●	●	●	●

HV Battery (CAN)	●	●	●	●
HV Battery (SIL Except For NHW11)	●	●	●	●
HV Gateway	●	●	●	●
Head Up Display	●	●	●	●
Heating Ventilation	●	●	●	●
High Frequency Receiver	●	●	●	●
Hybrid Control	●	●	●	●
Hybrid Control (CAN)	●	●	●	●
Hybrid Control (SIL)	●	●	●	●
IMB	●	●	●	●
IPA/ICS/Clearance Sonar	●	●	●	●
IPA/Parking Assist Monitor	●	●	●	●
ITC	●	●	●	●
ITS Connect	●	●	●	●
Illumination	●	●	●	●
Immobiliser	●	●	●	●
Immobiliser (Engine ECU)	●	●	●	●
Instrument Panel	●	●	●	●
Intelligent Clearance Sonar	●	●	●	●
Intuitive P/A	●	●	●	●
KDSS	●	●	●	●
KFS	●	●	●	●
LH Door	●	●	●	●
LKA/LDA	●	●	●	●
LKA/LDA (Sub)	●	●	●	●
Lane Control	●	●	●	●
Lane Departure Alert	●	●	●	●
Lane Keeping Assist	●	●	●	●
Laser Cruise	●	●	●	●
Main Body	●	●	●	●
Master Switch	●	●	●	●
Master Switch (CAN)	●	●	●	●
Master Switch (SIL)	●	●	●	●
Mayday Gateway	●	●	●	●
Meter	●	●	●	●
Mild Hybrid Control	●	●	●	●
Mirror	●	●	●	●
Mirror L	●	●	●	●
Mirror L/R	●	●	●	●
Mirror R	●	●	●	●
Monitor Camera	●	●	●	●
Motor Generator	●	●	●	●
Multi Bus Gateway	●	●	●	●
Multi Bus Monitor No.1	●	●	●	●
Multi Bus Monitor No.2	●	●	●	●
Multi-Mode M/T	●	●	●	●
Multifunction Display	●	●	●	●
Navigation Receiver	●	●	●	●
Navigation System	●	●	●	●
Night View	●	●	●	●
Occupant Detection	●	●	●	●
P Master Switch	●	●	●	●
P-Door Motor	●	●	●	●
PCB	●	●	●	●
PCS/LDA/RSA/LVN	●	●	●	●
PM1 Gateway	●	●	●	●
PM2 Gateway	●	●	●	●
PPS	●	●	●	●
PSD_LH	●	●	●	●
PSD_RH	●	●	●	●
Panoramic View Monitor	●	●	●	●

Parking Assist Camera	●	●	●	●
Passenger Door	●	●	●	●
Passenger Seat	●	●	●	●
Pedestrian Protection	●	●	●	●
Plug-in Control	●	●	●	●
Power Integration No.1	●	●	●	●
Power Integration No.2	●	●	●	●
Power Integration No.3	●	●	●	●
Power Source Control	●	●	●	●
Power Steering Electric Pump Unit	●	●	●	●
Pre-Collision	●	●	●	●
Pre-Collision (CAN)	●	●	●	●
Pre-Collision (SIL)	●	●	●	●
Pre-Collision 2	●	●	●	●
Pre-Collision Seatback RL	●	●	●	●
Pre-Collision Seatback RR	●	●	●	●
Pre-Collision System	●	●	●	●
Pre-Crash	●	●	●	●
Pre-Crash 2	●	●	●	●
RL-Door Motor	●	●	●	●
RR-Door Motor	●	●	●	●
Radar Cruise	●	●	●	●
Radar Cruise (CAN Engine)	●	●	●	●
Radar Cruise (SIL Engine)	●	●	●	●
Radar Cruise (SIL Hybrid Control)	●	●	●	●
Radar Cruise1	●	●	●	●
Radar Cruise2	●	●	●	●
Radio or Radiotelephone(Radio Part)	●	●	●	●
Rain and Brightness Sensor	●	●	●	●
Rain and/or Humidity Sensor	●	●	●	●
Rear Camera	●	●	●	●
Rear Console Switch	●	●	●	●
Rear Left Door	●	●	●	●
Rear Left Door (CAN)	●	●	●	●
Rear Left Door (SIL)	●	●	●	●
Rear Left Seat	●	●	●	●
Rear Left Seat A/C	●	●	●	●
Rear Motor Generator	●	●	●	●
Rear Right Door	●	●	●	●
Rear Right Door (CAN)	●	●	●	●
Rear Right Door (SIL)	●	●	●	●
Rear Right Seat	●	●	●	●
Rear Right Seat A/C	●	●	●	●
Rear Seat Switch	●	●	●	●
Rear Sliding Sunshade	●	●	●	●
Rear Stabilizer	●	●	●	●
Remote Engine Starter	●	●	●	●
Remote Security	●	●	●	●
Restraint Control Module	●	●	●	●
Retractable Hardtop	●	●	●	●
Road Sign Assist	●	●	●	●
SCBS	●	●	●	●
SRS Airbag	●	●	●	●
SRS Airbag (CAN)	●	●	●	●
SRS Airbag (SIL)	●	●	●	●
SRS Airbag (SIL2)	●	●	●	●
SRS Side Airbag	●	●	●	●
Seat Belt Control	●	●	●	●
Sequential M/T	●	●	●	●
Sliding Roof	●	●	●	●
Sliding Roof (CAN)	●	●	●	●

Sliding Roof (SIL)	●	●	●	●
Sliding Sunshade	●	●	●	●
Smart Access	●	●	●	●
Smart Key	●	●	●	●
Solar Charging Control	●	●	●	●
Sonar	●	●	●	●
Stabilizer	●	●	●	●
Starting Control	●	●	●	●
Steering Angle Sensor	●	●	●	●
Steering Lock	●	●	●	●
Steering Pad Switch	●	●	●	●
Steering Sensor	●	●	●	●
Stereo Camera	●	●	●	●
Stop And Go	●	●	●	●
Stop And Start	●	●	●	●
Sub Battery Module	●	●	●	●
Switch Module Under The Steering Wheel	●	●	●	●
TRAC	●	●	●	●
TVD	●	●	●	●
TVSS	●	●	●	●
Telematics	●	●	●	●
Theft Deterrent	●	●	●	●
Theft Deterrent (CAN)	●	●	●	●
Theft Deterrent(SIL)	●	●	●	●
Tilt&Telescopic	●	●	●	●
Tire Pressure Monitor	●	●	●	●
Trailer Brake Controller	●	●	●	●
Traller Relay Unit (BSR)	●	●	●	●
Transmission	●	●	●	●
Transmission Control	●	●	●	●
Tyre Under-Inflation Detection (DSG)	●	●	●	●
VGRS	●	●	●	●
VSC	●	●	●	●
Vehicle Control	●	●	●	●
Vehicle Proximity Notification System	●	●	●	●
WIL Gateway	●	●	●	●
Wiper	●	●	●	●
eco IDLE	●	●	●	●



TOYOTA/LEXUS/SCION BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	AGYA	ALLION/PREMIO	ALPHARD
ALPHARD HV	ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	ALTEZZA/ALTEZZA GITA
AQUA	ARISTO	AURIS	AURIS HV
Avalon	Avalon HV	AVANZA	AVENSIS
AVENSIS VERSO/PICNIC	AYGO	BB	before 1997
before 2000	before 2003	before 2005	BELTA
BLADE	CALDINA	CAMRY	CAMRY HV
CAMRY/AURION	CARINA	Celica	Celica/CURREN
CELSIOR	CENTURY	C-HR	C-HR HV
COASTER	COMFORT	COROLLA	COROLLA AXIO
COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA HV	COROLLA HV/AURIS HV
Corolla iM	COROLLA RUMION	COROLLA RUNX/ALEX	COROLLA SPACIO
COROLLA VERSO	COROLLA/AURIS	CORONA	CROWN
CROWN COMFORT	CROWN ESTATE	CROWN HV	CROWN MAJESTA
CROWN Mild Hybrid	CROWN PATROL CAR	CROWN SEDAN/COMFORT	CT200h
DYNA	Echo	eQ	ES200
ES240	ES250	ES300	ES300h
ES330	ES350	ESTIMA	ESTIMA HV
ETIOS	E' z	FCHV-adv	FJ CRUISER
FORTUNER/HILUX SW4	Fun Cargo	GAIA	Granvia/GRAND HIACE
GS F	GS200t	GS250	GS300
GS300h	GS350	GS400	GS430
GS450h	GS460	GX400	GX460
GX470	HARRIER	HARRIER HV	HIACE
HIACE/REGIUSACE/HIMEDIC	Highlander	HIGHLANDER HV	HIGHLANDER/KLUGER
Hilux	HILUX SURF	HONGQI	HS250h
iM	INNOVA/KIJANG INNOVA	IPSUM	iQ
iQ EV	IS F	IS200	IS200D
IS200t	IS220D	IS250	IS250C
IS300	IS300C	IS300h	IS350
IS350C	ISIS	ist	KLUGER
KLUGER HV	LAND CR PRADO	LAND CR.	LAND CRUISER
LAND CRUISER PRADO	LC500	LC500h	LEVIN
LEVIN HV	LFA	LITEACE	LS350
LS400	LS430	LS460	LS500
LS500h	LS600h	LX450d	LX460
LX470	LX570	MARK X	MARK X Zio
MARK2 QUALIS/CAMRY GRACIA	MARK2/MARK2 BLIT	Matrix	MIRAI
MR2	MR2 Spyder	NADIA	NOAH
NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY	NOAH/VOXY/ESQUIRE
NX200	NX200t	NX300	NX300h
Opa	PASSO	PASSO SETTE	PIXIS SPACE
PIXIS Truck/Van	PLATZ	PORTE/SPADE	PREVIA HV
PREVIA/TARAGO	PRIUS	PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA
PRIUS alpha	PRIUS C	PRIUS PHV	PRIUS Plug-in
Prius Prime	Prius V	PRIUS α	PROBOX/SUCCEED
PROGRES/BREVIS	Pronard	QUICKDELIVERY	RACTIS
RAUM	RAV4	Rav4 EV	Rav4 HV
RC200t	RC300	RC300h	RC350
RC-F	REGIUS/TOURING HIACE	REIZ	RUKUS
RUSH	RX200t	RX270	RX300
RX330	RX350	RX400H	RX450h
SAI	SC430	SDF Vehicle	SEQUOIA

Sienna	SIENTA	SIENTA HV	SOARER
Solara	SPADE	SUPRA	SURF
Tacoma	tC	TOWNACE	TOYOACE/CAMROAD/DYNA 150/100
TOYOACE/DYNA 150/100	TOYOACE/DYNA 200	TUNDRA	URBAN CRUISER
VANGUARD	VELLFIRE	Venza	Verossa
VERSO	Verso-s	Verso-s/Ractis	VIOS
Vista/Vista Ardeo	VITZ	VITZ HV	VOLTZ
WIGO	WiLL Cypha	WiLL Vi	WiLL VS
WINDOM	WISH	xA	xB
xD	Yaris	YARIS HV	YARIS VERSO/ECHO VERSO
YARIS/ECHO	ZELAS	ZZZ1_P3S	ZZZ3_P4C

BLD Function List (Note:For reference only)

2nd Sys. Air Bleeding
Air Bleeding
B1 Air Bleeding
Coolant (fuel cell) air bleeding
ECB-R Utility(Brake Fluid Replacement)
Parts Exchange
VSC/TR(A)C/4WD Control Prevention Mode

TOYOTA/LEXUS/SCION BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALLION/PREMIO	ALPHARD	ALPHARD HV
ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	AQUA	AURIS
AURIS HV	Avalon	Avalon HV	AVENSIS
AYGO	before 2000	before 2003	before 2005
BELTA	BLADE	CAMRY	CAMRY HV
CAMRY/AURION	CELSIOR	CENTURY	C-HR
C-HR HV	COASTER	COMFORT	COROLLA
COROLLA AXIO	COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA HV
COROLLA HV/AURIS HV	Corolla iM	COROLLA RUMION	COROLLA VERSO
COROLLA/AURIS	CROWN	CROWN COMFORT	CROWN HV
CROWN MAJESTA	CROWN Mild Hybrid	CROWN PATROL CAR	CROWN SEDAN/COMFORT
CT200h	DYNA	ES200	ES240
ES250	ES300h	ES350	ESTIMA
ESTIMA HV	ETIOS	E' z	FCHV-adv
FJ CRUISER	FORTUNER/HILUX SW4	GS F	GS200t
GS250	GS300	GS300h	GS350
GS430	GS450h	GS460	GX400
GX460	GX470	HARRIER	HARRIER HV
HIACE	HIACE/REGIUSACE/HIMEDIC	Highlander	HIGHLANDER HV
HIGHLANDER/KLUGER	Hilux	HILUX SURF	HONGQI
HS250h	iM	INNOVA/KIJANG INNOVA	iQ
IS F	IS200D	IS200t	IS220D
IS250	IS250C	IS300	IS300C
IS300h	IS350	IS350C	ISIS
ist	Japan SDF Vehicle	KLUGER HV	LAND CR PRADO
LAND CR.	LAND CRUISER	LAND CRUISER PRADO	LC500
LC500h	LEVIN	LEVIN HV	LFA
LS350	LS430	LS460	LS500
LS500h	LS600h	LX450d	LX460
LX470	LX570	MARK X	MARK X Zio
Matrix	NOAH	NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV
NOAH/VOXY	NOAH/VOXY/ESQUIRE	NX200	NX200t
NX300	NX300h	PORTE/SPADE	PREVIA HV
PREVIA/TARAGO	PRIUS	PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA
PRIUS alpha	PRIUS C	PRIUS PHV	PRIUS Plug-in
Prus Prime	Prus V	PRIUS α	PROBOX/SUCCEED
QUICKDELIVERY	RACTIS	RAUM	RAV4
Rav4 HV	RC200t	RC300	RC300h
RC350	RC-F	REIZ	RUKUS
RX200t	RX270	RX300	RX350
RX400H	RX450h	SAI	SC430
SEQUOIA	Sienna	SIENTA	SIENTA HV
Solara	SPADE	SURF	Tacoma
tC	TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100	TOYOACE/DYNA 200
TUNDRA	URBAN CRUISER	VANGUARD	VELLFIRE
Venza	VERSO	Verso-s	Verso-s/Ractis
VIOS	VITZ	VITZ HV	WISH
xA	xB	xD	Yaris

YARIS HV	YARIS/ECHO	ZELAS	ZZZ1_P3S
ZZZ2_P4S	ZZZ3_P4C	ZZZ4_P5C	
BMS Function List (Note:For reference only)			
All Readiness			
All Readiness			
Auxiliary Battery Exchange			
Battery Diagnosis			
Battery Status Info Update			
Check Mode			
High Voltage Fuse Accumulated Load History Reset			
HV Batt Cell Low Volt Ready ON Prevention Cancel			
Initialization			
Inspection Mode			
Integrated Current Value Initialization			
Normal Battery Stack Average Voltage Calculation			
Prediagnostic Battery Charge			
ROM/RAM Check			
Switch Battery Type			
Temporary Vehicle Start Up			

TOYOTA/LEXUS/SCION DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALLION/PREMIO	ALPHARD	ALPHARD HV
ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	AQUA	AURIS
AURIS HV	Avalon	Avalon HV	AVENSIS
AYGO	before 2003	before 2005	BELTA
BLADE	CAMRY	CAMRY HV	CAMRY/AURION
CELSIOR	CENTURY	C-HR	COASTER
COMFORT	COROLLA	COROLLA AXIO	COROLLA AXIO HV/FIELDER HV
COROLLA AXIO/FIELDER	COROLLA HV	Corolla iM	COROLLA RUMION
COROLLA VERSO	COROLLA/AURIS	CROWN	CROWN COMFORT
CROWN HV	CROWN MAJESTA	CROWN PATROL CAR	CROWN SEDAN/COMFORT
CT200h	DYNA	ES240	ES250
ES300h	ES350	ESTIMA	ESTIMA HV
ETIOS	E' z	FJ CRUISER	FORTUNER/HILUX SW4
GS F	GS250	GS300	GS300h
GS350	GS430	GS450h	GS460
GX400	GX460	GX470	HARRIER
HARRIER HV	HIACE	HIACE/REGIUSACE/HIMEDIC	Highlander
HIGHLANDER HV	HIGHLANDER/KLUGER	Hilux	HILUX SURF
HONGQI	HS250h	iM	INNOVA/KIJANG INNOVA
iQ	IS F	IS200D	IS220D
IS250	IS250C	IS300	IS300C
IS300h	IS350	IS350C	ISIS
ist	Japan SDF Vehicle	KLUGER HV	LAND CR PRADO
LAND CR.	LAND CRUISER	LAND CRUISER PRADO	LC500
LEVIN	LEVIN HV	LFA	LS430
LS460	LS600h	LX450d	LX460
LX470	LX570	MARK X	MARK X Zio
Matrix	NOAH	NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV
NOAH/VOXY	NOAH/VOXY/ESQUIRE	NX200	NX300h
PORTE/SPADE	PREVIA HV	PREVIA/TARAGO	PRIUS
PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS alpha	PRIUS C
PRIUS PHV	Prius V	PRIUS α	PROBOX/SUCCEED
QUICKDELIVERY	RACTIS	RAUM	RAV4
Rav4 HV	RC300	RC300h	RC350
RC-F	REIZ	RUKUS	RX270
RX350	RX400H	RX450h	SAI
SC430	SEQUOIA	Sienna	SIENTA
SIENTA HV	Solara	SPADE	SURF
Tacoma	tC	TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100
TOYOACE/DYNA 200	TUNDRA	URBAN CRUISER	VANGUARD
VELLFIRE	Venza	VERSO	Verso-s
Verso-s/Ractis	VIOS	VITZ	VITZ HV
WISH	xB	xD	Yaris
YARIS HV	YARIS/ECHO	ZELAS	ZZZ3_P4S
ZZZ3_P4C			

DPF Function List (Note:For reference only)

DPF Deterioration Record Clear

DPF History Information Reset

DPF Rejuvenation Timing Reset

TOYOTA/LEXUS/SCION EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALLION/PREMIO	ALPHARD	ALPHARD HV
ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	ALTEZZA/ALTEZZA GITA	AQUA
ARISTO	AURIS	AURIS HV	Avalon
Avalon HV	AVENSIS	AVENSIS VERSO/PICNIC	AYGO
BB	before 1997	before 2000	before 2003
before 2005	BELTA	BLADE	CALDINA
CAMRY	CAMRY HV	CAMRY/AURION	CARINA
Celica	Celica/CURREN	CELSIOR	CENTURY
C-HR	C-HR HV	COASTER	COMFORT
COROLLA	COROLLA AXIO	COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER
COROLLA HV	COROLLA HV/AURIS HV	Corolla iM	COROLLA RUMION
COROLLA RUNX/ALEX	COROLLA SPACIO	COROLLA VERSO	COROLLA/AURIS
CORONA	CROWN	CROWN COMFORT	CROWN ESTATE
CROWN HV	CROWN MAJESTA	CROWN Mild Hybrid	CROWN PATROL CAR
CROWN SEDAN/COMFORT	CT200h	DYNA	Echo
eQ	ES200	ES240	ES250
ES300	ES300h	ES330	ES350
ESTIMA	ESTIMA HV	ETIOS	E' z
FJ CRUISER	FORTUNER/HILUX SW4	Fun Cargo	GAIA
Granvia/GRAND HIACE	GS F	GS200t	GS250
GS300	GS300h	GS350	GS400
GS430	GS450h	GS460	GX400
GX460	GX470	HARRIER	HARRIER HV
HIACE	HIACE/REGIUSACE/HIMEDIC	Highlander	HIGHLANDER HV
HIGHLANDER/KLUGER	Hilux	HILUX SURF	HONGQI
HS250h	iM	INNOVA/KIJANG INNOVA	IPSUM
iQ	iQ EV	IS F	IS200
IS200D	IS200t	IS220D	IS250
IS250C	IS300	IS300C	IS300h
IS350	IS350C	ISIS	ist
Japan SDF Vehicle	KLUGER	KLUGER HV	LAND CR PRADO
LAND CR.	LAND CRUISER	LAND CRUISER PRADO	LC500
LC500h	LEVIN	LEVIN HV	LFA
LITEACE	LS350	LS400	LS430
LS460	LS500	LS500h	LS600h
LX450	LX450d	LX460	LX470
LX570	MARK X	MARK X Zio	MARK2 QUALIS/CAMRY GRACIA
MARK2/MARK2 BLIT	Matrix	MIRAI	MR2
MR2 Spyder	MR-S	NADIA	NOAH
NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY	NOAH/VOXY/ESQUIRE
NX200	NX200t	NX300	NX300h
Opa	Paseo	PLATZ	PORTE/SPADE
Previa	PREVIA HV	PREVIA/TARAGO	PRIUS
PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS alpha	PRIUS C
PRIUS PHV	PRIUS Plug-in	Prius Prime	Prius V
PRIUS α	PROBOX/SUCCEED	PROGRES/BREVIS	Pronard
QUICKDELIVERY	RACTIS	RAUM	RAV4
Rav4 EV	Rav4 HV	RC200t	RC300

RC300h	RC350	RC-F	REGIUS/TOURING HIACE
REIZ	RUKUS	RX200t	RX270
RX300	RX330	RX350	RX400H
RX450h	SAI	SC300	SC400
SC430	SDF Vehicle	SEQUOIA	Sienna
SIENTA	SIENTA HV	SOARER	Solara
SPADE	SUPRA	SURF	T100
Tacoma	tC	Tercel	TOWNACE
TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100	TOYOACE/DYNA 200	TUNDRA
URBAN CRUISER	VANGUARD	VELLFIRE	Venza
Verossa	VERSO	Verso-s	Verso-s/Ractis
VIOS	Vista/Vista Ardeo	VITZ	VITZ HV
VOLTZ	Will Cypha	Will Vi	Will VS
WINDOM	WISH	xA	xB
xD	Yaris	YARIS HV	YARIS VERSO/ECHO VERSO
YARIS/ECHO	ZELAS	ZZZ1_P3S	ZZZ2_P4S
ZZZ3_P4C			

**EPB Function List (Note:For reference only)**

A/F Sensor Compensation Reset

Catalyst Record Clear

ECB 2.0/2.5 Utility

Reset Memory(Engine (RH Bank))

Reset Memory(Engine and ECT)

Reset Memory(EPB)

TOYOTA/LEXUS/SCION ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALPHARD	ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE
AQUA	AURIS	AURIS HV	Avalon
AVENSIS	AVENSIS VERSO/PICNIC	AYGO	CAMRY
CAMRY HV	Celica	CENTURY	COASTER
COROLLA	COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA VERSO
CORONA	CROWN	CROWN COMFORT	CROWN HV
CROWN MAJESTA	CROWN PATROL CAR	CROWN SEDAN/COMFORT	CT200h
DYNA	ES300	ES330	FJ CRUISER
GS F	GS250	GS300	GS300h
GS350	GS430	GS450h	HARRIER
HARRIER HV	HIACE	HIACE/REGIUSACE/HIMEDIC	Highlander
HIGHLANDER/KLUGER	Hilux	IS200	IS250
IS300	IS300h	IS350	LAND CR.
LAND CRUISER PRADO	LC500	LFA	LS400
LS430	LX470	LX570	MR2
NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY	NOAH/VOXY/ESQUIRE
NX300h	PORTE/SPADE	PREVIA/TARAGO	PRIUS
PRIUS PHV	PROBOX/SUCCEED	RAV4	RC300h
RC350	RC-F	RX270	RX300
RX330	RX450h	SC300	SC430
SEQUOIA	Sienna	SIENTA	SIENTA HV
T100	TUNDRA	VIOS	VITZ
VITZ HV	WISH	xA	YARIS VERSO/ECHO VERSO
YARIS/ECHO			

ETC Function List (Note:For reference only)

Electric Throttle Learning



TOYOTA/LEXUS/SCION INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALLION/PREMIO	ALPHARD	ALPHARD HV
ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	AQUA	AURIS
AURIS HV	Avalon	Avalon HV	AVENSIS
AVENSIS VERSO/PICNIC	AYGO	before 2003	before 2005
BELTA	BLADE	CAMRY	CAMRY HV
CAMRY/AURION	CELSIOR	CENTURY	C-HR
COASTER	COMFORT	COROLLA	COROLLA AXIO
COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA HV	Corolla iM
COROLLA RUMION	COROLLA VERSO	COROLLA/AURIS	CORONA
CROWN	CROWN COMFORT	CROWN HV	CROWN MAJESTA
CROWN PATROL CAR	CROWN SEDAN/COMFORT	CT200h	DYNA
ES240	ES250	ES300h	ES350
ESTIMA	ESTIMA HV	ETIOS	E' z
FJ CRUISER	FORTUNER/HILUX SW4	GS F	GS250
GS300	GS300h	GS350	GS430
GS450h	GS460	GX400	GX460
GX470	HARRIER	HARRIER HV	HIACE
HIACE/REGIUSACE/HIMEDIC	Highlander	HIGHLANDER HV	HIGHLANDER/KLUGER
Hilux	HILUX SURF	HONGQI	HS250h
iM	INNOVA/KIJANG INNOVA	iQ	IS F
IS200D	IS220D	IS250	IS250C
IS300	IS300C	IS300h	IS350
IS350C	ISIS	ist	Japan SDF Vehicle
KLUGER HV	LAND CR PRADO	LAND CR.	LAND CRUISER
LAND CRUISER PRADO	LC500	LEVIN	LEVIN HV
LFA	LITEACE	LS430	LS460
LS600h	LX450d	LX460	LX470
LX570	MARK X	MARK X Zio	Matrix
NOAH	NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY
NOAH/VOXY/ESQUIRE	NX200	NX300h	PORTE/SPADE
PREVIA HV	PREVIA/TARAGO	PRIUS	PRIUS +/PRIUS V
PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS alpha	PRIUS C	PRIUS PHV
Prius V	PRIUS α	PROBOX/SUCCEED	QUICKDELIVERY
RACTIS	RAUM	RAV4	Rav4 HV
RC300	RC300h	RC350	RC-F
REIZ	RUKUS	RX270	RX350
RX400H	RX450h	SAI	SC430
SEQUOIA	Sienna	SIENTA	SIENTA HV
Solara	SPADE	SURF	Tacoma
tC	TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100	TOYOACE/DYNA 200
TUNDRA	URBAN CRUISER	VANGUARD	VELLFIRE
Venza	VERSO	Verso-s	Verso-s/Ractis
VIOS	VITZ	VITZ HV	WISH
xA	xB	xD	Yaris
YARIS HV	YARIS/ECHO	ZELAS	ZZZ3_P4S
ZZZ3_P4C			

INJ Function List (Note:For reference only)

Air Flow Meter Learning Value Reset
Injector Compensation
Injector Compensation(12byte)
Injector Compensation(30byte)
Pilot Quantity Learning
Pilot Quantity Learning Values Reset
Pilot Quantity Learning values Clear
Pilot Quantity Learning(Detail)
Secondary Air Injection Check

TOYOTA/LEXUS/SCION OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALLION/PREMIO	ALPHARD	ALPHARD HV
ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	AQUA	AURIS
AURIS HV	Avalon	Avalon HV	AVENSIS
AYGO	before 2003	before 2005	BELTA
BLADE	CAMRY	CAMRY HV	CAMRY/AURION
CELSIOR	CENTURY	C-HR	C-HR HV
COASTER	COMFORT	COROLLA	COROLLA AXIO
COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA HV	COROLLA HV/AURIS HV
Corolla iM	COROLLA RUMION	COROLLA VERSO	COROLLA/AURIS
CROWN	CROWN COMFORT	CROWN HV	CROWN MAJESTA
CROWN PATROL CAR	CROWN SEDAN/COMFORT	CT200h	DYNA
ES200	ES240	ES250	ES300h
ES350	ESTIMA	ESTIMA HV	ETIOS
E' z	FJ CRUISER	FORTUNER/HILUX SW4	GS F
GS200t	GS250	GS300	GS300h
GS350	GS430	GS450h	GS460
GX400	GX460	GX470	HARRIER
HARRIER HV	HIACE	HIACE/REGIUSACE/HIMEDIC	Highlander
HIGHLANDER HV	HIGHLANDER/KLUGER	Hilux	HILUX SURF
HONGQI	HS250h	iM	INNOVA/KIJANG INNOVA
iQ	IS F	IS200D	IS200t
IS220D	IS250	IS250C	IS300
IS300C	IS300h	IS350	IS350C
ISIS	ist	Japan SDF Vehicle	KLUGER HV
LAND CR PRADO	LAND CR.	LAND CRUISER	LAND CRUISER PRADO
LC500	LC500h	LEVIN	LEVIN HV
LFA	LS350	LS430	LS460
LS500	LS500h	LS600h	LX450d
LX460	LX470	LX570	MARK X
MARK X Zio	Matrix	NOAH	NOAH HV/VOXY HV
NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY	NOAH/VOXY/ESQUIRE	NX200
NX200t	NX300	NX300h	PORTE/SPADE
PREVIA HV	PREVIA/TARAGO	PRIUS	PRIUS +/PRIUS V
PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS alpha	PRIUS C	PRIUS PHV
PRIUS Plug-in	Prius Prime	Prius V	PRIUS α
PROBOX/SUCCEED	QUICKDELIVERY	RACTIS	RAUM
RAV4	Rav4 HV	RC200t	RC300
RC300h	RC350	RC-F	REIZ
RUkus	RX200t	RX270	RX300
RX350	RX400H	RX450h	SAI
SC430	SEQUOIA	Sienna	SIENTA
SIENTA HV	Solara	SPADE	SURF
Tacoma	tC	TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100
TOYOACE/DYNA 200	TUNDRA	URBAN CRUISER	VANGUARD
VELLFIRE	Venza	VERSO	Verso-s
Verso-s/Ractis	VIOS	VITZ	VITZ HV
WISH	xB	xD	Yaris
YARIS HV	YARIS/ECHO	ZELAS	ZZZ1_P3S

ZZZ2_P4S	ZZZ3_P4C	ZZZ4_P5C	
<b>OIL Function List (Note:For reference only)</b>			
CVT Oil Pressure Calibration			
CVT fluid pressure learn			
Engine Oil Pressure Control Check			
Oil Pump Air Bleeding			
Switch Oil Maintenance Display			

TOYOTA/LEXUS/SCION SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	86	ALLION/PREMIO	ALPHARD
ALPHARD HV	ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	ALTEZZA/ALTEZZA GITA
AQUA	ARISTO	AURIS	AURIS HV
Avalon	Avalon HV	AVENSIS	AYGO
before 2003	before 2005	BELTA	BLADE
CAMRY	CAMRY HV	CAMRY/AURION	CarName
CELSIOR	CENTURY	C-HR	C-HR HV
COASTER	COMFORT	COROLLA	COROLLA AXIO
COROLLA AXIO HV/FIELDER HV	COROLLA AXIO/FIELDER	COROLLA HV	COROLLA HV/AURIS HV
Corolla iM	COROLLA RUMION	COROLLA VERSO	COROLLA/AURIS
CROWN	CROWN ESTATE	CROWN HV	CROWN MAJESTA
CROWN Mild Hybrid	CROWN PATROL CAR	CROWN SEDAN/COMFORT	CT200h
eQ	ES200	ES250	ES300h
ES350	ESTIMA	ESTIMA HV	E' z
FORTUNER/HILUX SW4	FR-S	FT-86	GS F
GS200t	GS250	GS300	GS300h
GS350	GS430	GS450h	GS460
HARRIER	HARRIER HV	HIACE/REGIUSACE/HIMEDIC	Highlander
HIGHLANDER HV	HIGHLANDER/KLUGER	Hilux	HILUX SURF
HS250h	iM	INNOVA/KIJANG INNOVA	iQ
iQ EV	IS F	IS200D	IS200t
IS220D	IS250	IS250C	IS300
IS300C	IS300h	IS350	IS350C
ISIS	ist	KLUGER	KLUGER HV
LAND CR PRADO	LAND CR.	LAND CRUISER	LAND CRUISER PRADO
LC500	LC500h	LEVIN	LEVIN HV
LFA	LITEACE	LS350	LS460
LS500	LS500h	LS600h	LX450d
LX460	LX470	LX570	MARK X
MARK X Zio	MARK2/MARK2 BLIT	Matrix	MIRAI
NOAH	NOAH HV/VOXY HV	NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY
NOAH/VOXY/ESQUIRE	NX200	NX200t	NX300
NX300h	Opa	PORTE/SPADE	PREVIA HV
PREVIA/TARAGO	PRIUS	PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA
PRIUS alpha	PRIUS C	PRIUS PHV	PRIUS Plug-in
Prius Prime	Prius V	PRIUS α	PROBOX/SUCCEED
PROGRES/BREVIS	QUICKDELIVERY	RACTIS	RAUM
RAV4	Rav4 EV	Rav4 HV	RC200t
RC300	RC300h	RC350	RC-F
REIZ	RUKUS	RX200t	RX270
RX300	RX350	RX450h	SAI
SDF Vehicle	SEQUOIA	Sienna	SIENTA
SIENTA HV	SOARER	SPADE	tC
TOWNACE	TOYOACE/DYNA 150/100	TOYOACE/DYNA 200	TUNDRA
URBAN CRUISER	VANGUARD	VELLFIRE	Venza
Verossa	VERSO	Verso-s	Verso-s/Ractis
VIOS	VITZ	VITZ HV	WINDOM
WISH	xB	xD	Yaris

YARIS HV	YARIS/ECHO	ZELAS	ZZZ1_P3S
ZZZ3_P4C			

SAS Function List (Note:For reference only)
---

Reset A/C Information
-----------------------

Stabilizer System Check
-------------------------

Starter Exchange
------------------

Steering Angle Adjust
-----------------------

Torque Sensor Adjustment
--------------------------

VSC Sensor Neutral Memorization
---------------------------------

TOYOTA/LEXUS/SCION TPM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	86	ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE
ALTEZZA/ALTEZZA GITA	ARISTO	AURIS HV	Avalon
Avalon HV	AVANZA	AVENSIS	before 2003
before 2005	BLADE	CAMRY	CAMRY HV
CAMRY/AURION	CENTURY	C-HR	C-HR HV
COROLLA	COROLLA HV	Corolla iM	COROLLA VERSO
COROLLA/AURIS	CROWN	CROWN ESTATE	CROWN HV
CROWN MAJESTA	CROWN Mild Hybrid	CT200h	ES200
ES250	ES300h	ES350	ESTIMA
FJ CRUISER	FORTUNER/HILUX SW4	FR-S	GS F
GS200t	GS250	GS300	GS300h
GS350	GS430	GS450h	GS460
GX400	GX460	GX470	HARRIER
HIACE	Highlander	HIGHLANDER HV	HIGHLANDER/KLUGER
Hilux	HS250h	iM	INNOVA/KI,JANG INNOVA
iQ	iQ EV	IS F	IS200t
IS250	IS250C	IS300	IS300C
IS300h	IS350	IS350C	KLUGER
KLUGER HV	LAND CR PRADO	LAND CR.	LAND CRUISER
LAND CRUISER PRADO	LC500	LC500h	LEVIN
LEVIN HV	LFA	LS350	LS460
LS500	LS500h	LS600h	LX450d
LX460	LX470	LX570	MARK X
MARK2/MARK2 BLIT	Matrix	MIRAI	NX200
NX200t	NX300	NX300h	PREVIA/TARAGO
PRIUS	PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS C
PRIUS PHV	PRIUS Plug-in	Prius Prime	Prius V
PROGRES/BREVIS	RAV4	Rav4 EV	Rav4 HV
RC200t	RC300	RC300h	RC350
RC-F	RX200t	RX270	RX300
RX350	RX400H	RX450h	SC430
SEQUOIA	Sienna	SIENTA	SOARER
Solara	Tacoma	tC	TUNDRA
Venza	Verossa	VERSO	Verso-s/Ractis
VIOS	Vista/Vista Ardeo	WINDOM	xB
xD	Yaris	YARIS HV	ZELAS
ZZZ1_P3S	ZZZ3_P4C		

TPM Function List (Note:For reference only)

ID Registration

Tire position writing